



# HP TouchSmart 15-r015dx DVD±RW Drive Replacement

This guide will show you how to replace your DVD±RW Drive for your HP TouchSmart 15-r015dx.

Written By: Jacob Kleinsorge



---

## INTRODUCTION

The HP TouchSmart 15-r015dx has one DVD±RW Drive on the right side of the laptop.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — DVD±RW Drive



- There is one screw holding the DVD±RW Drive in place. Use the #00 screwdriver to remove the screw.

## Step 2



- The DVD±RW Drive is here. Remove by gently pulling it straight out.
- After removal of the DVD±RW Drive, two screws are exposed and must be removed.

To reassemble your device, follow these instructions in reverse order.