




# Remington MB4040 Zoom Wheel Replacement

Use this guide to replace the zoom wheel.

Written By: Cameron Carnahan

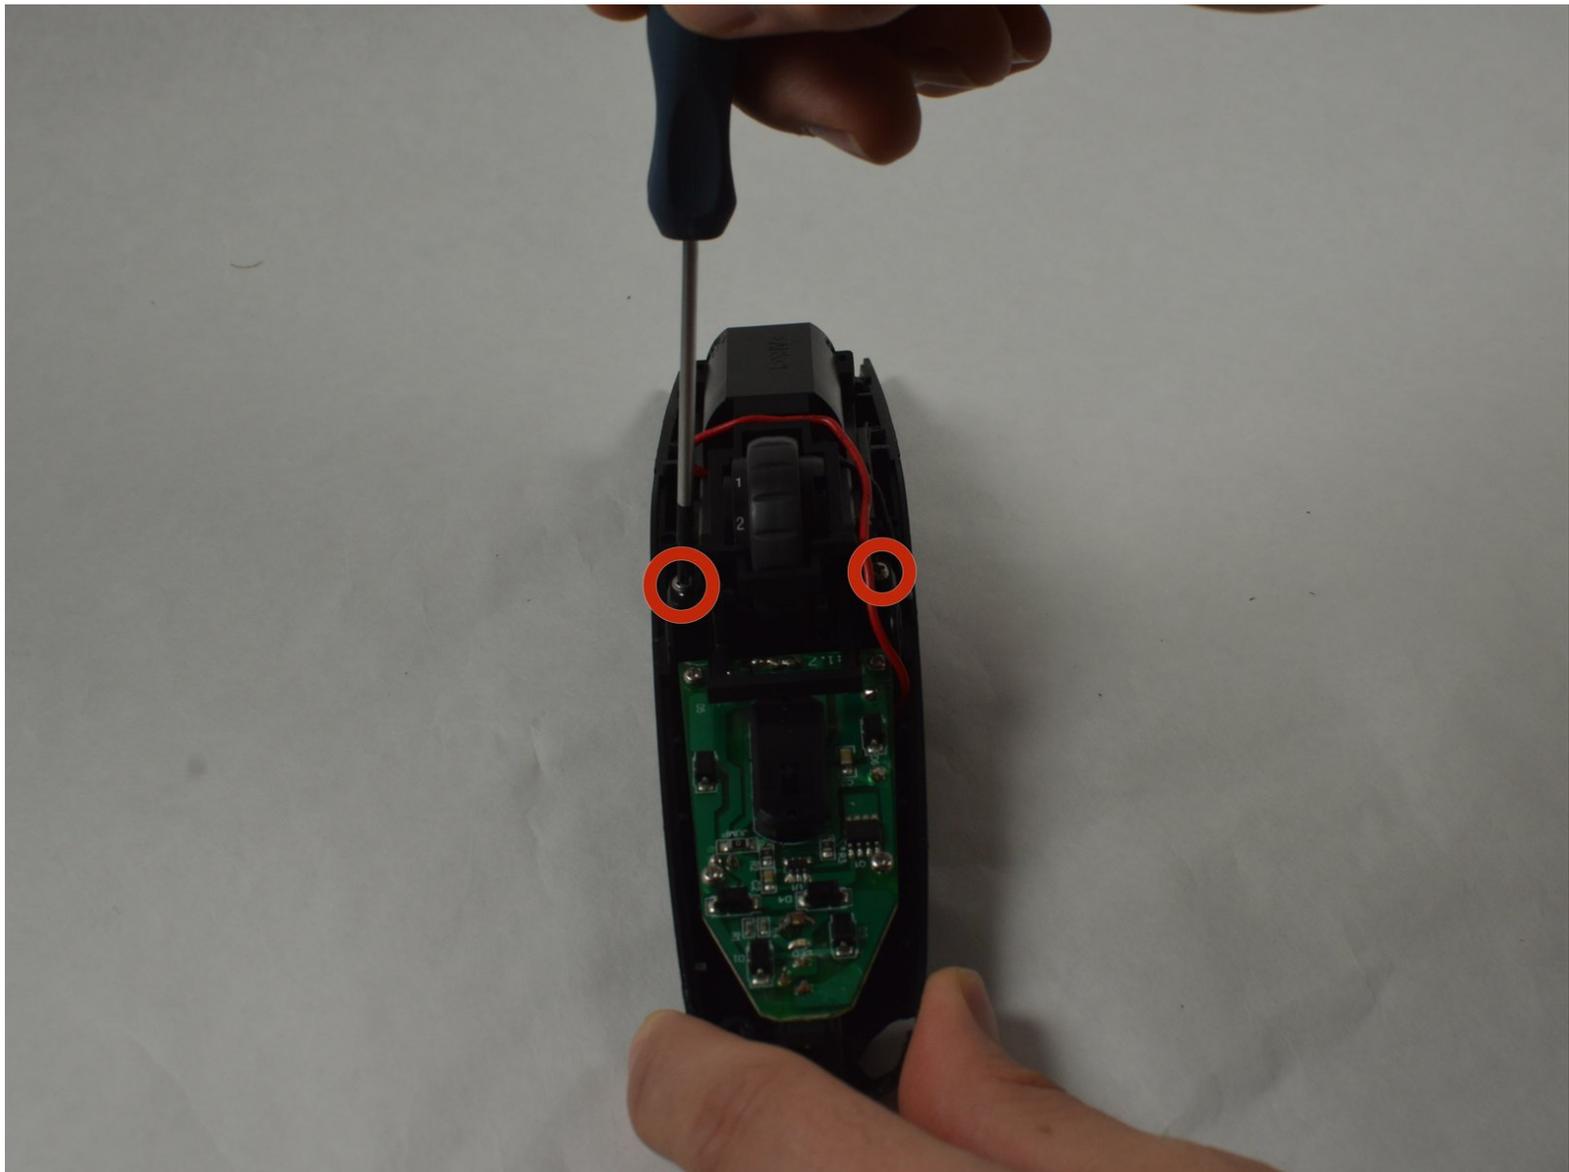

---

## INTRODUCTION

The zoom wheel controls the position of the blade guard, which then determines how much hair will be removed when trimming.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Small Needle Nose Pliers](#) (1)
  - [Tweezers](#) (1)
  - [Heavy-Duty Spudger](#) (1)
-

## Step 1 — Remove Blade Assembly



- Press the black button below the blade to remove the blade.

## Step 2 — Remove Back Cover Hardware



- Place the device so the back of the product is facing up.
- Remove the two 11.0 mm PH00 screws from the black plastic housing at the bottom of the device.

### Step 3 — Remove Front Cover Hardware



- Remove the chrome plated plastic piece by using the plastic opening tool to pry it from the housing assembly.
- Remove the small clear plastic piece that covers the zoom wheel numbers.

### Step 4 — Front Cover (cont.)





- Remove the two 16.0 mm PH00 screws from the front cover.
- Use the blue plastic opening tool to pry apart the two halves of the device.

## Step 5 — Blade Button Removal



- Remove the black blade button and the two 10.0 mm springs, which are sandwiched between the cover assembly halves.
- ⓘ The blade button is sandwiched between the halves and the two springs may fall out when the halves are separated.

## Step 6 — Remove screws attaching the zoom wheel

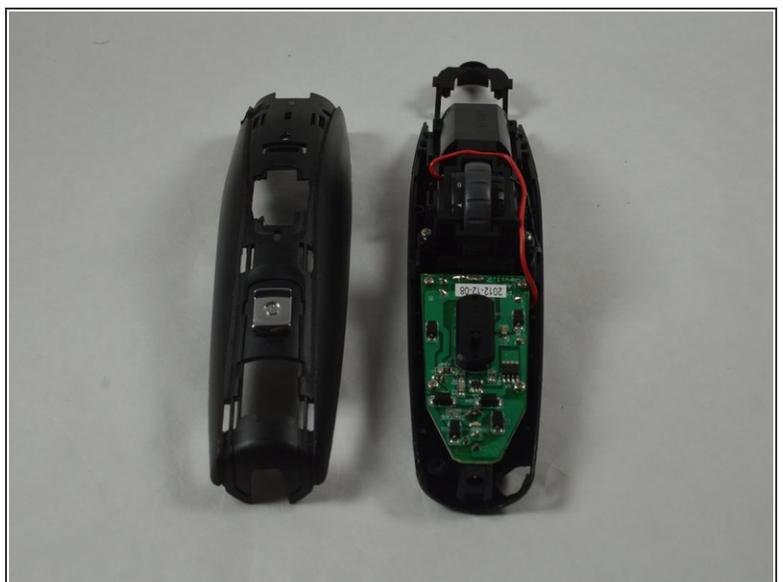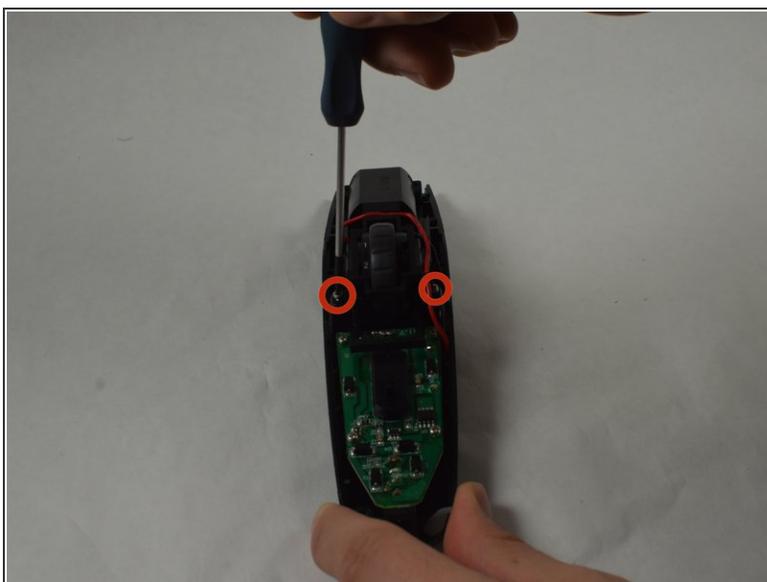

- Remove the two 11.0 mm PH00 screws that attach the zoom wheel to the plastic housing.

## Step 7 — Remove Zoom Wheel Assembly



- Remove zoom wheel assembly from housing using fingers.
- ⚠ Gently remove zoom wheel assembly because the red and black wires are attached and can easily be broken.
- ⓘ This assembly also houses the motor.
- Remove the small black piece of plastic surrounding the zoom wheel. This will be referred to as the slider.
- ☑ When reassembling, make sure the pins on the slider are aligned inside the grooves of the wheel.

## Step 8 — Wheel removal



- A pin holds the wheel in place. Using a spudger (preferable metal) and a pair of pliers or tweezers remove the pin to unseat the wheel.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-25 08:28:32 PM (MST).

