



Acer Aspire R7 RAM Replacement

This guide will show you how to replace the RAM in your Acer Aspire R7.

Written By: Andrew Rodiek



INTRODUCTION

The Acer Aspire R7-571-6858 is a convertible laptop that features an Intel Core i5 3337U processor and weighs about 5.29 lbs. This guide aims to show you how to upgrade the RAM chip in the Acer Aspire R7 so you can get more memory for your device. Depending on how much memory you want to add you will need at the most 8GB of RAM specifically 8GB DDR4-2400 SODIMM.

The steps to change the RAM chip in an Acer Aspire R7 laptop is like any other laptop. Nearly all laptops are designed with an access panel in the bottom of the laptop. To open the panel, it is necessary to have a small-ended screwdriver. Make sure you are working on a clean surface to prevent any dust inside the panel. Before you start, make sure to unplug any cables connected to the laptop and power it down.

Special Skills Needed: None.

Not sure about a part/model number or need technical support connect with [Acer Support](#)

TOOLS:


- [TR7 Torx Security Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Cover



- Shut down the laptop and disconnect the power cord.
 - ⚠ Failing to disconnect or shut down the laptop could result in damage to the laptop or a shock hazard.
- Turn the laptop over.

Step 2

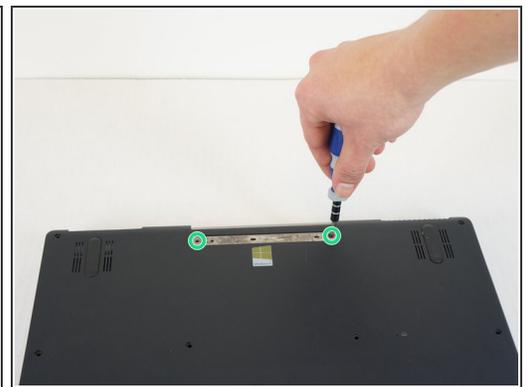


- Remove seven 10 mm T7 screws.
- Remove four 6 mm T7 screws.
- Use the blue plastic opening tool to carefully remove both rubber pads which cover the four remaining screws.
- Remove the remaining four 10 mm T7 screws.

Step 3



- Carefully lift the cover upwards.
- ⓘ If the cover seems stuck, use a spudger tool to pry the sides.

Step 4 — RAM

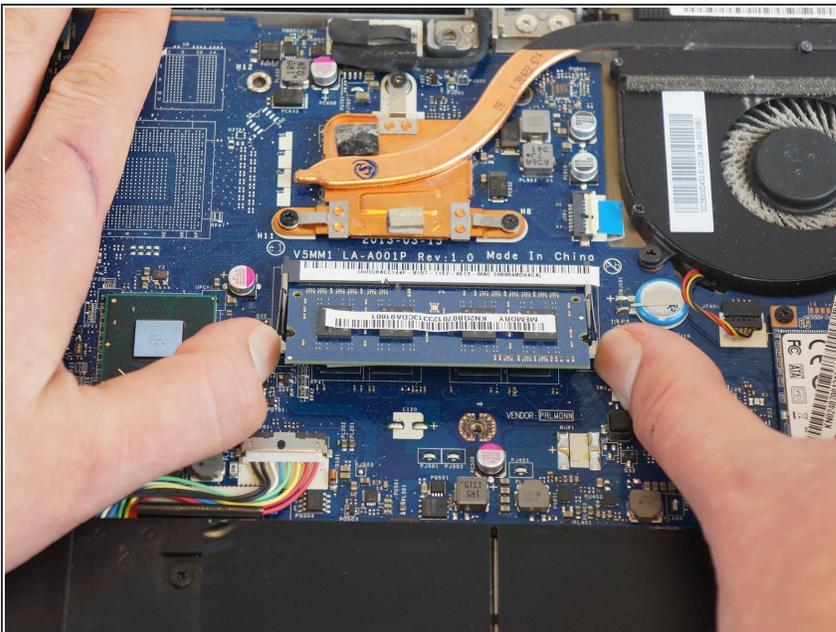

- Push the retaining clips away from the RAM module, allowing the spring loaded hinge to pop up.

Step 5



- Carefully pull the RAM module away from the motherboard.

To reassemble your device, follow these instructions in reverse order.