



Disassembling Sony Cyber-shot DSC-T1

Removing Front Cover

This guide contains instructions on how to safely remove the front cover from your camera to access the internal parts.

Written By: iDeleted




INTRODUCTION

Removing the front cover is a necessary first step in disassembling the camera in order to repair or replace any internal parts.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

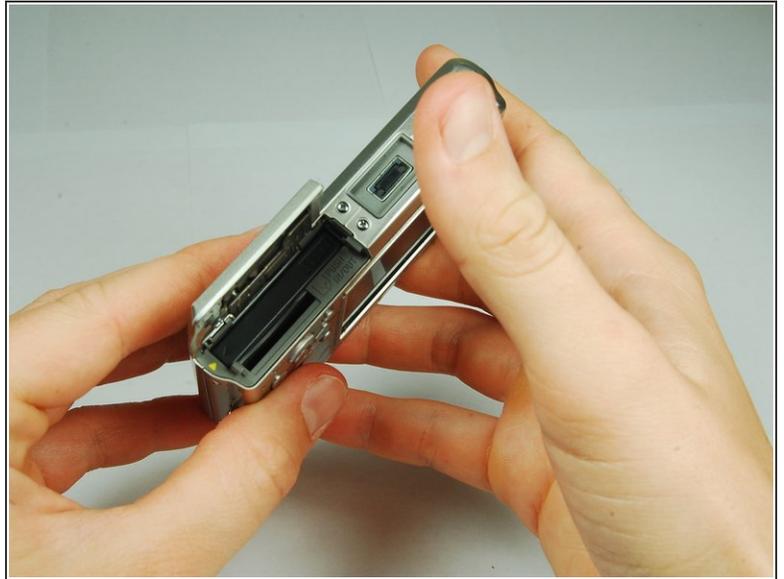

- Locate the battery door at the bottom of the camera.
- Press down on the door and slide it back. The door will pop open.

Step 2




- Remove the battery from the door that you opened in the previous step.

Step 3 — Disassembling Sony Cyber-shot DSC-T1 Removing Front Cover



- i** There are two screws on the left and right sides of the camera, and two screws on the bottom.
- Use a PH00 screwdriver and remove the six 2.9mm screws.

Step 4

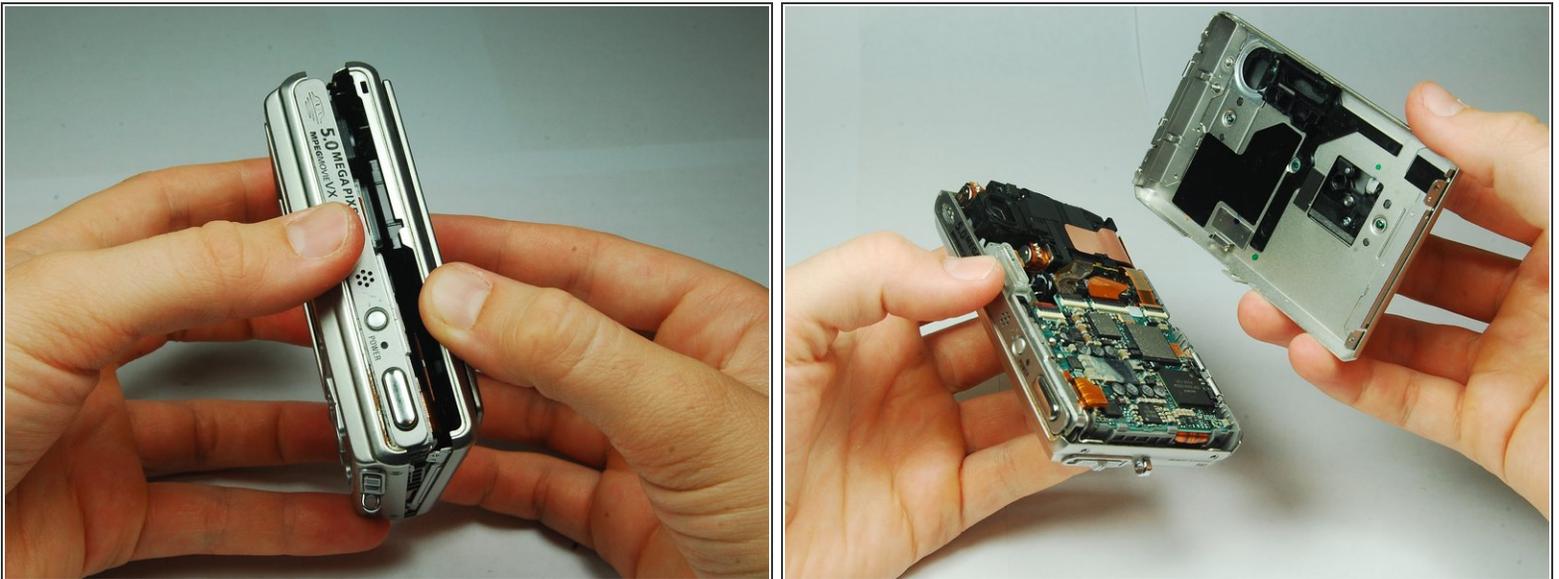

- Use hands to gently pry the front casing away from the camera.

To reassemble your device, follow these instructions in reverse order.