



# RCA RCT6378W2 Volume Button Replacement

This guide will illustrate faulty volume button removal and replacement.

Written By: Kirby C



---

## INTRODUCTION

Upon using this guide, the user will be able to evaluate and repair problems occurring as a result of a stuck volume button. The guide outlines all tools and steps needed to perform the replacement.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [RCA RCT6378W2 Tablet Button Replacement Part](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Removal of Back Cover



- Remove the two 2.4mm x 4mm screws from the bottom of the tablet with a Phillips #00 Screwdriver.

## Step 2 — Cover Separation



- Separate the front and back covers using one of the plastic opening tools.

### Step 3 — Button Removal



- Dislodge the power button from the upper right corner of the tablet's back cover using the tweezers

### Step 4 — Insertion of New Button



- Align and place the new replacement button with positive and negative engravings facing outward into the volume space found in the cover.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-01-15 03:45:38 PM (MST).

