



# HTC Desire V Button Assembly Replacement

This guide will show you how to replace the Navigation Board of the HTC Desire V smartphone.

Written By: William McCusker



# INTRODUCTION

This guide will show you how to replace the Navigation Board of the HTC Desire V smartphone.

---

## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery



- Gently pry back cover away from phone.

**i** If you are having difficulty you may need to use a Spudger or plastic opener.


## Step 2



- Lever the battery out from the bottom end first.

**!** Do not bend or puncture the battery.

## Step 3 — Midframe

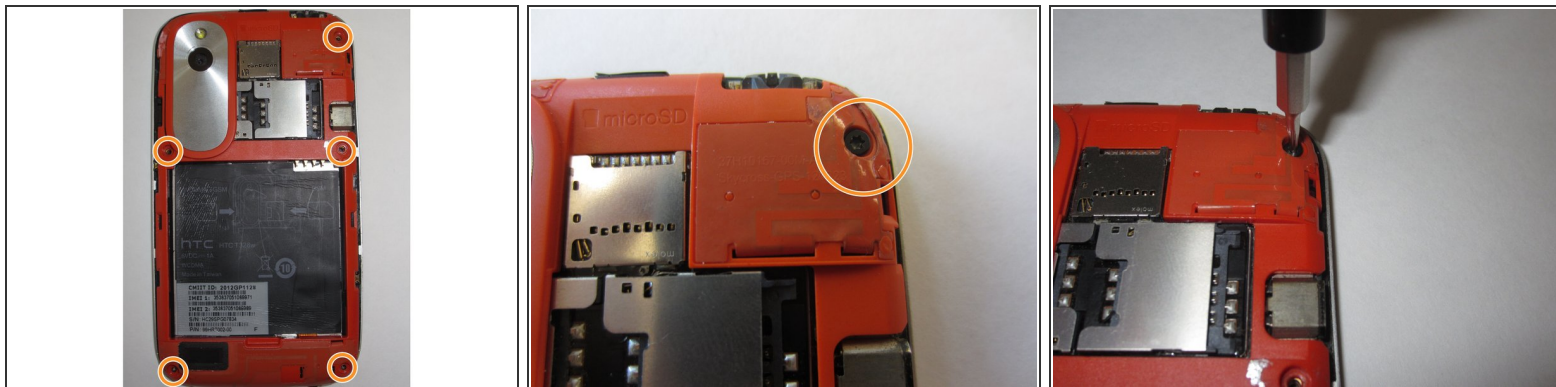

- Use a Torx T5 screwdriver to unscrew and remove five 3.0 mm screws from the rear frame.


## Step 4



- Use an opening tool or a spudger to gently remove the rear frame.




## Step 5 — Button Assembly

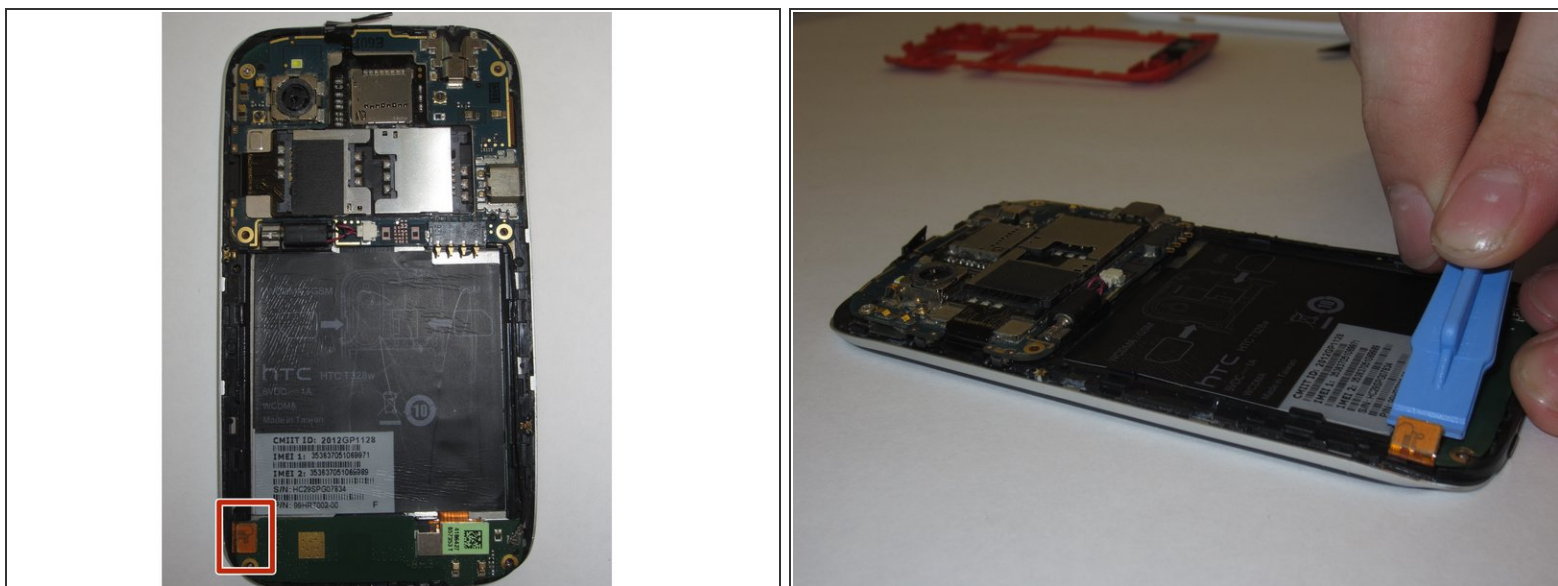


- Remove the connector on left side of the Navigation board by unplugging/prying the orange ribbon.

## Step 6

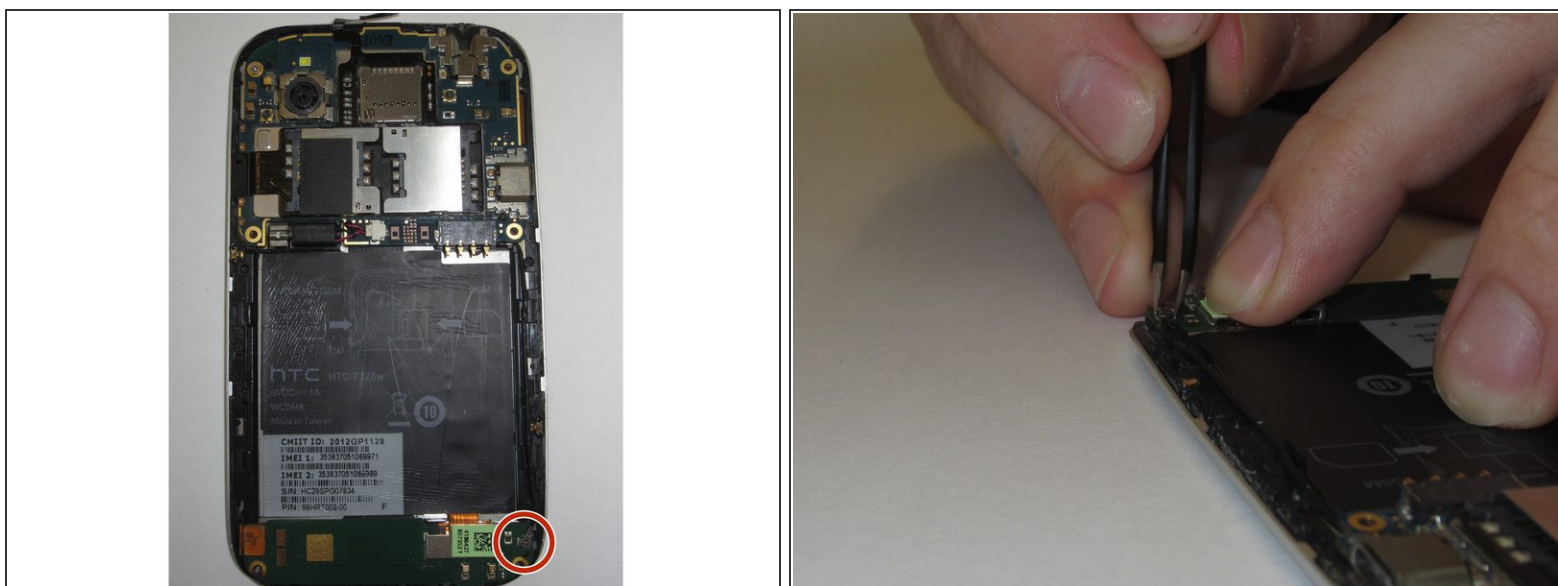

- Gently unplug and remove aerial cable (black antenna) from bottom plug.

## Step 7

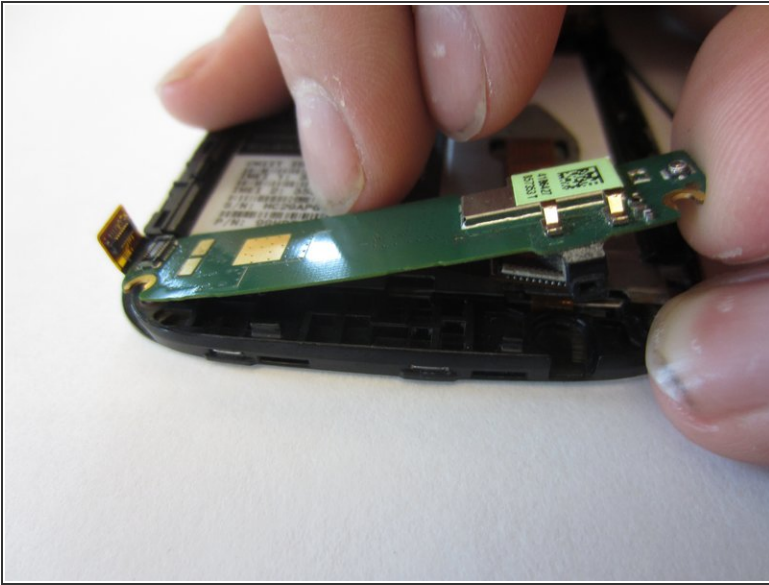

- Nav Board will be stuck down by glue.
- Pull gently from the right end of the board, being careful of its flexibility.

To reassemble your device, follow these instructions in reverse order.