



Sony Cyber-shot DSC-H20 Flash Assembly Replacement

The following guide will aid you in replacing the flash on your Sony Cyber-shot DSC-H20

Written By: Reuben Martinez





TOOLS:

- [Essential Electronics Toolkit](#) (1)
-

Step 1 — Flash Assembly




- Slide open the battery cover and remove the battery and the Memory Stick Duo.
- Return the battery cover to its closed position.

Step 2



- Remove all three screws from the bottom of the camera.

Step 3

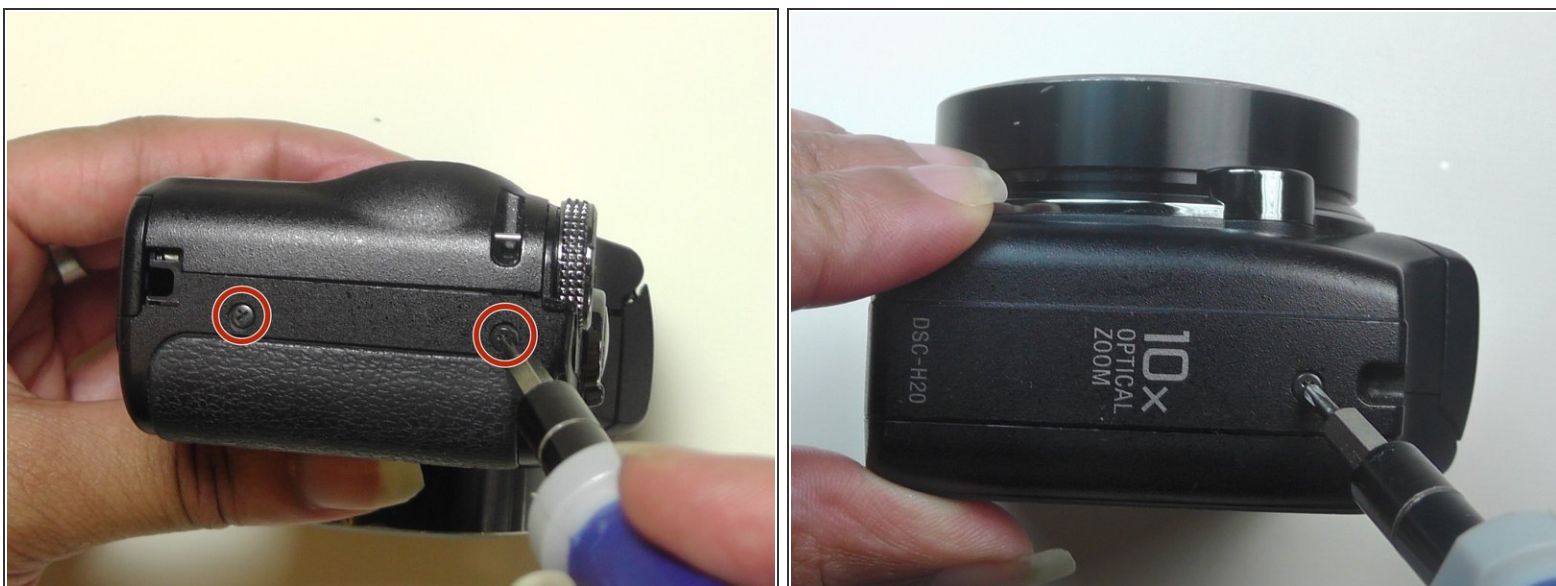

- Remove the screws on the left and right sides of the camera.

Step 4




- Press down on the flash cover to raise the flash.
- Remove both screws that hold the flash cover to the body of the camera.

Step 5




- Place the camera upside down with the battery port positioned upward.
- Slide open the battery port.

Step 6

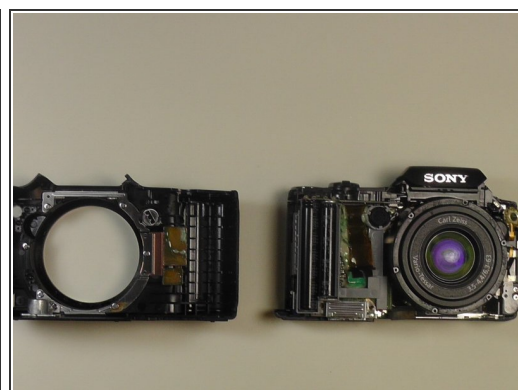


- Pry the front cover of the camera off with the plastic opening tool.

Step 7

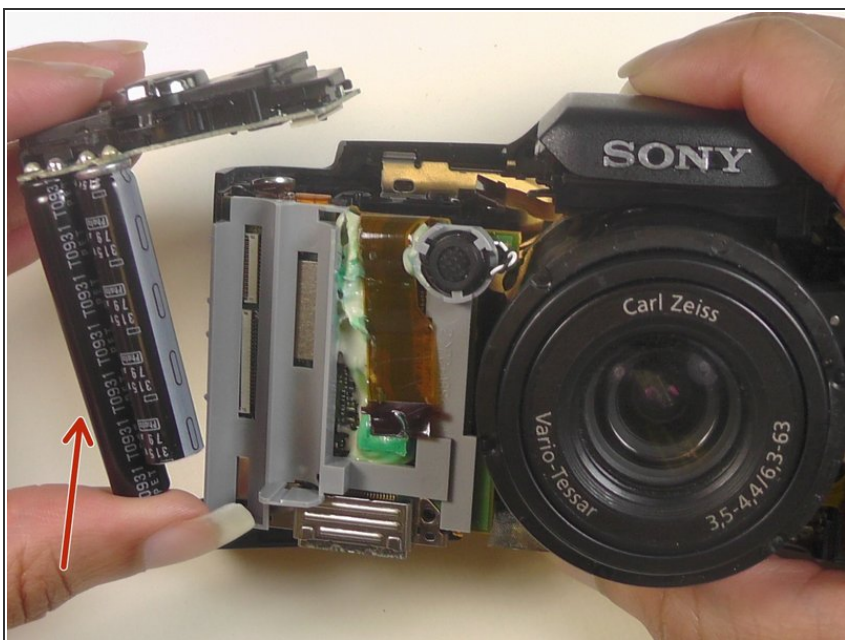

- Remove the power shutter unit

Step 8

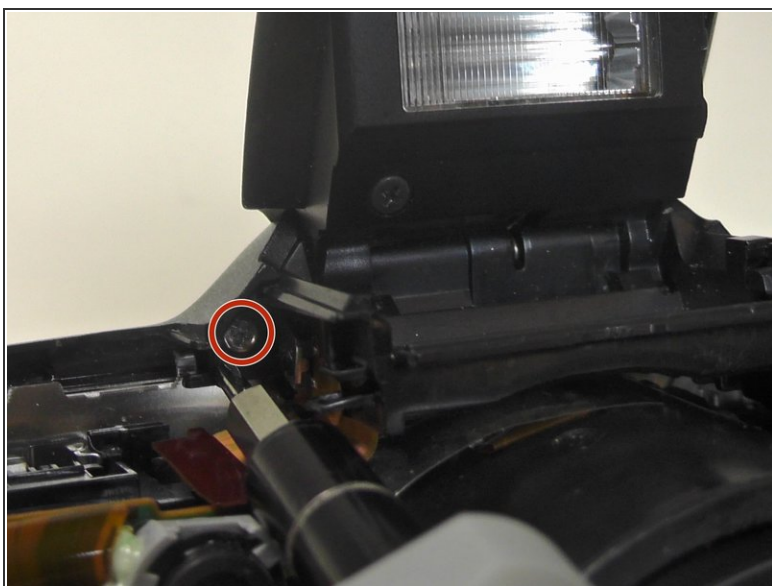

- Unscrew the screw located at the back left corner of the flash component.
- Set the flash component aside.

To reassemble your device, follow these instructions in reverse order.