



Canon SX40 HS camera LCD Screen Cover Replacement

Use this guide to replace the LCD screen cover of the camera. This piece could break by dropping the camera on the back surface.


Written By: John Bui



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — LCD Screen Cover

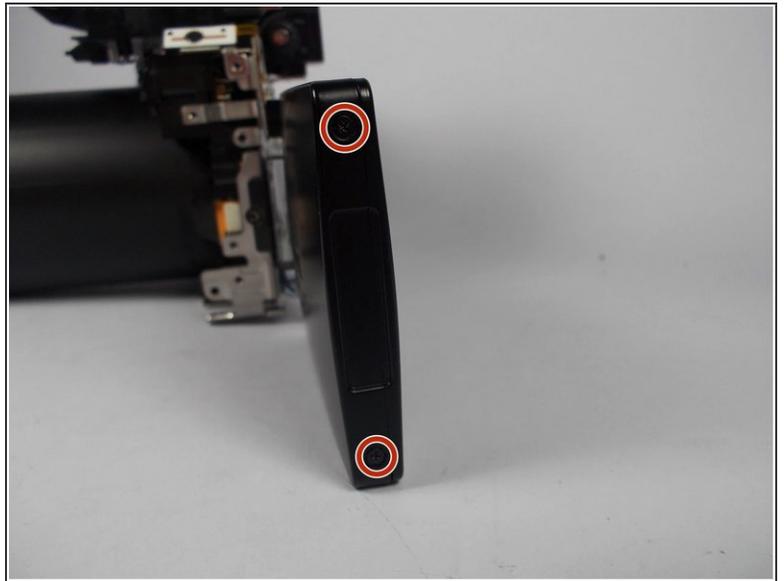

- Open/turn the LCD screen until it fully extends outwards.
- Remove these two 4 mm black screws on the left side of the screen with a Phillips size #00 screwdriver.

Step 2




- Partially close the screen and rotate it 90 degrees until the screen is facing upwards (photo view from the left front of the camera). Remove the 4mm black screw, indicated in the picture, with a Phillips #00 screwdriver.

Step 3



- Rotate the screen 180 degrees until the monitor is facing downwards. Remove the 4mm black screw, indicated in the picture, with a Phillips #00 screwdriver.

Step 4

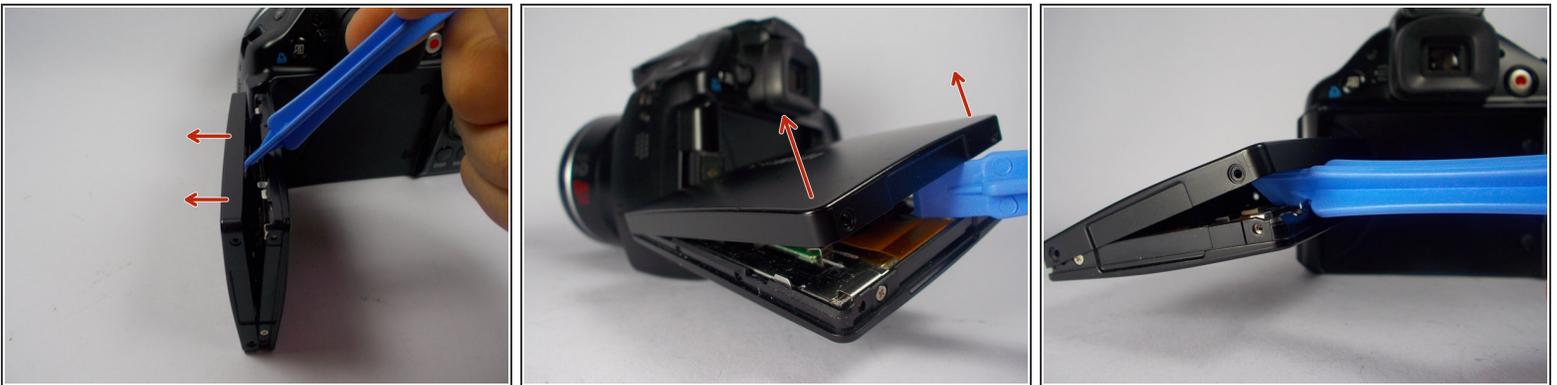

- Using a plastic opening tool, remove the unfastened LCD screen cover from the camera.

⚠ Be careful not to pry and damage the circuit card under the screen cover.

Step 5



- This is what you should see after removing the LCD screen cover. Replace the LCD screen cover if damaged.

To reassemble your device, follow these instructions in reverse order.