



# Sony Cybershot DSC-T5 Button Replacement

Written By: Jason Vaccaro




 **TOOLS:**

Phillips #000 Screwdriver (1)

 **PARTS:**


Sony Cybershot DSC-T5 button layout  
(1)

### Step 1 — Button

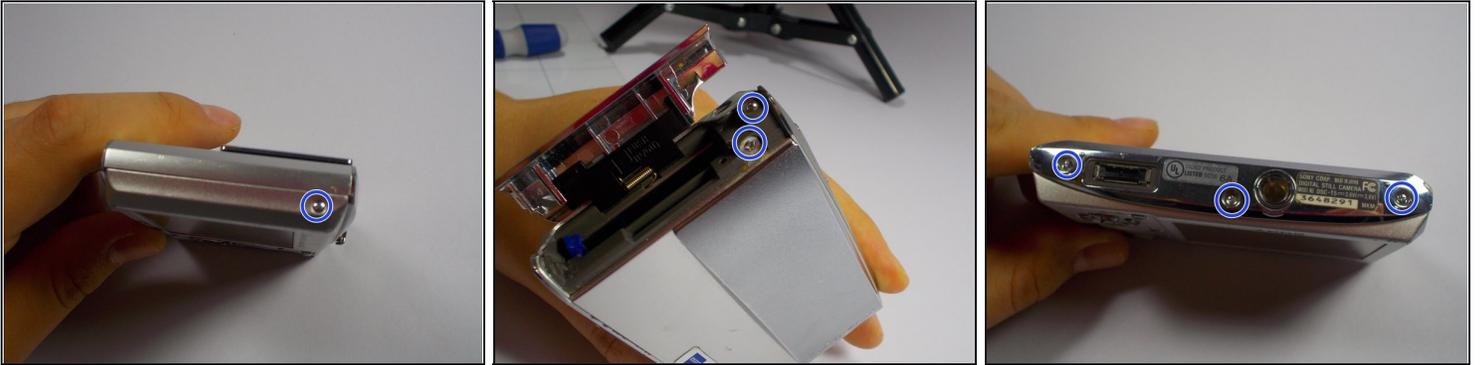

- Use a Phillips #000 to remove all 6 exterior screws from the casing.

### Step 2

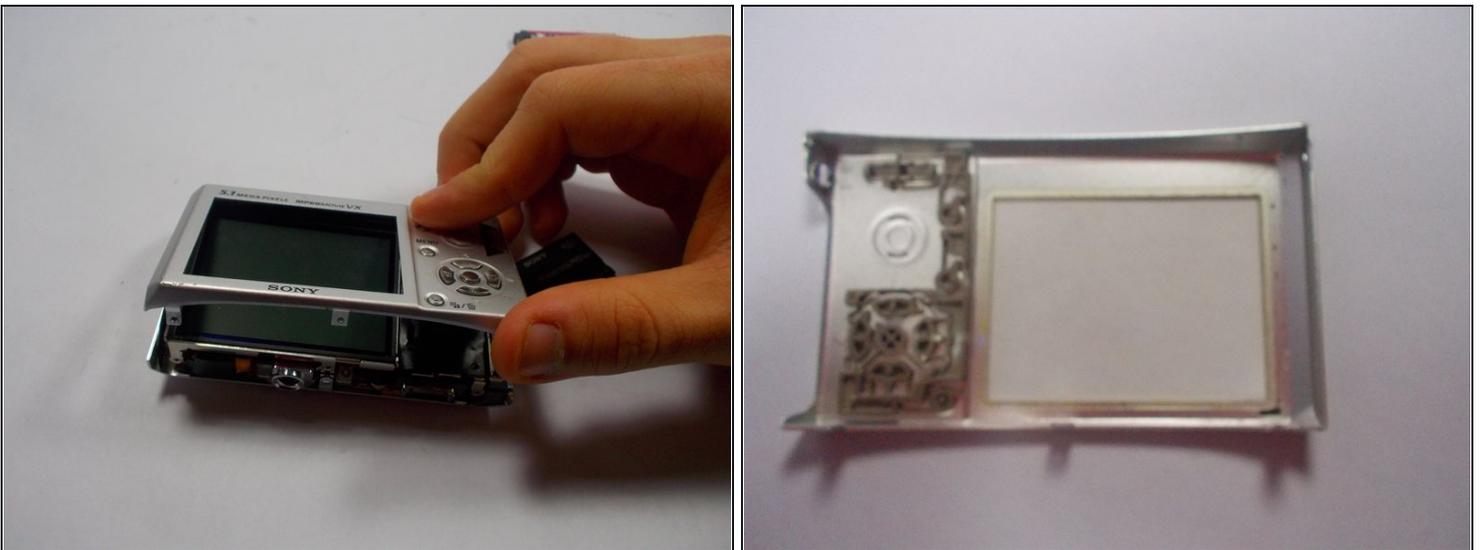

- Remove the front case by carefully pulling it off from the camera.

### Step 3



- Start at one end of the button layout and carefully pull the buttons off the casing.  
⚠ Note that there is some adhesive on the buttons.
  - Insert a new button layout and re-assemble device.
- 

To reassemble your device, follow these instructions in reverse order.