


Iomega Z100S2 Motherboard Replacement

Written By: Ezery Kennedy

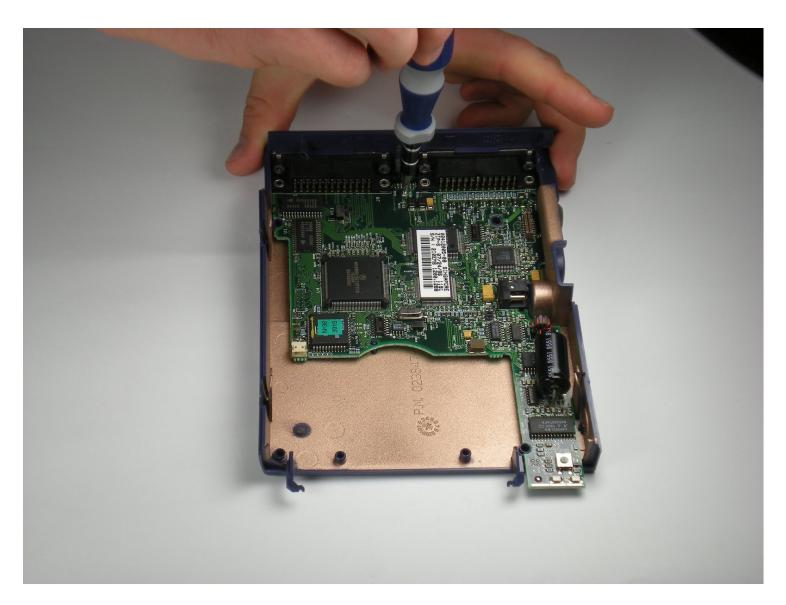

TOOLS:

Spudger (1) T6 Torx Screwdriver (1) Tweezers (1)

Step 1 — Case



• Push in the plastic tab that can be seen through cracks in the front left corner using a spudger.



 Move down the same side and push in the plastic tab.

Step 3




- Move to the front right side and once again push in the plastic tab.
- (i) There is not a fourth tab to push in after this one.





- Grab the cover by the front side and pull upwards.
 - You might encounter some resistance. Pull firmly, but don't yank it.


Step 5

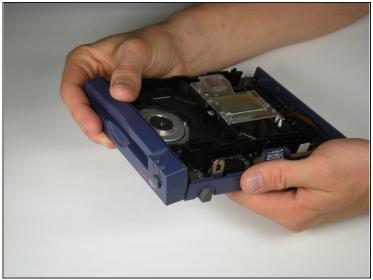




- Tilt the front case down until the pegs detach from the bottom of the case.
- Lift up and outward.
- (i) The motherboard will be loose at this point.


Step 6 — Disk Reader

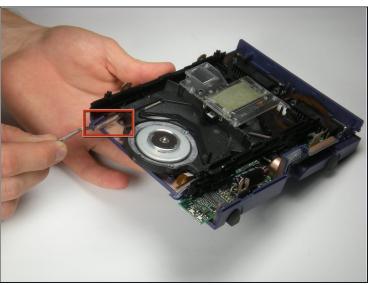

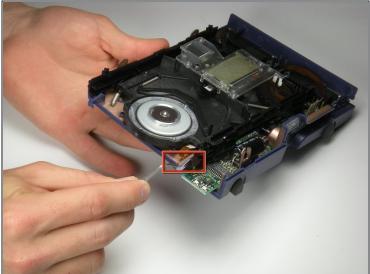


- Unhook the two springs from the front plastic hooks.
- (i) The black side rails of the reader should easily slide forward and off.

Step 7

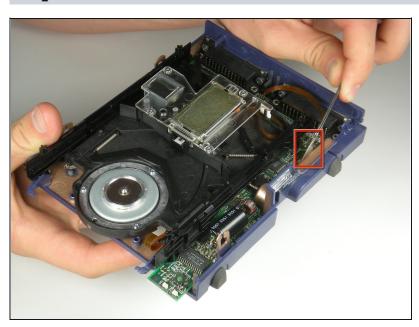


- There is a white tab connected to the motherboard. Pull it upward by gently rocking it back and forth.
- i The tab does not come completely out, it only slides up slightly, so don't rip it out!



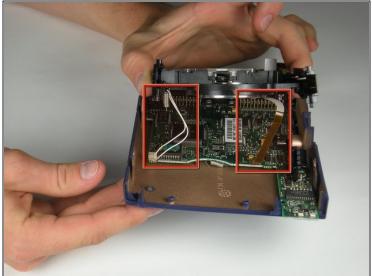


- Grab the reader by its sides and gently pull it upward.
- (i) There are two wires still connected to the bottom of the reader that haven't been detached.

Step 9

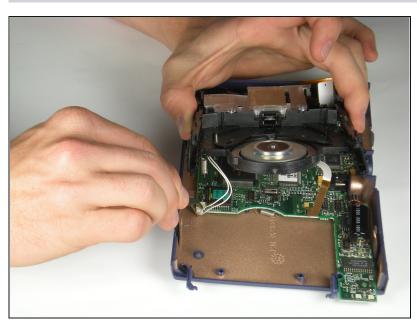


 Disconnect the white wires by using tweezers to gently pull the bottom connector toward you.

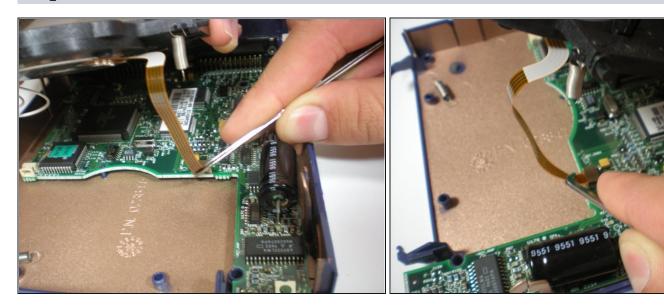


• Disconnect the thin ribbon wire by using tweezers to gently pull the connector at the bottom toward you.

Step 11

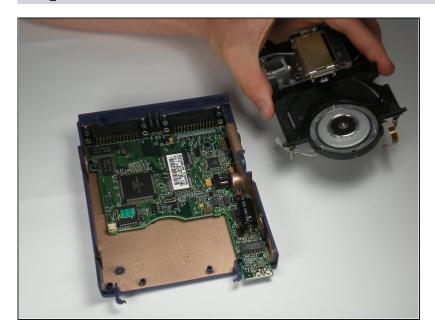


• Lift the reader up and out from the device.

Step 12 — Motherboard

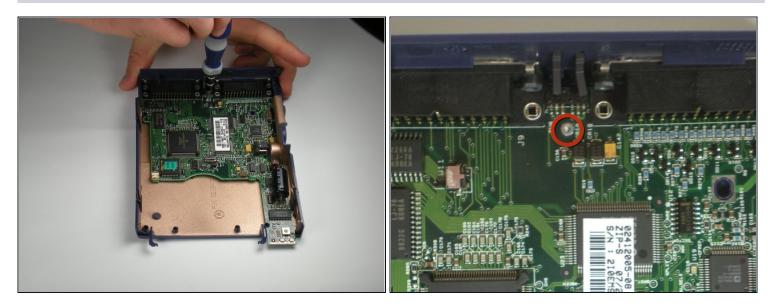

• Use a T6 Torx Screwdriver to remove the 1.3 mm screw at the back of the motherboard.

Step 13

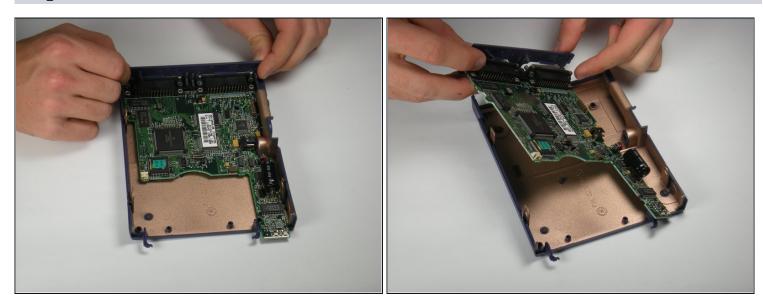

• Gently lift the motherboard and back case out from the bottom case.

To reassemble your device, follow these instructions in reverse order.