



Disassembling Nerf N-Strike Firestrike Blaster Casing

Removing the Blaster Casing to be able to access all internal parts.

Written By: Hayes Kimball



INTRODUCTION


You will be walked through the steps to reveal the internal workings of the Firestrike. From here you will be able to replace any portion of the Firestrike. You will only need a #1 Phillips Screwdriver and your hands. This guide is quick and easy and can be completed anywhere.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Remove battery cover

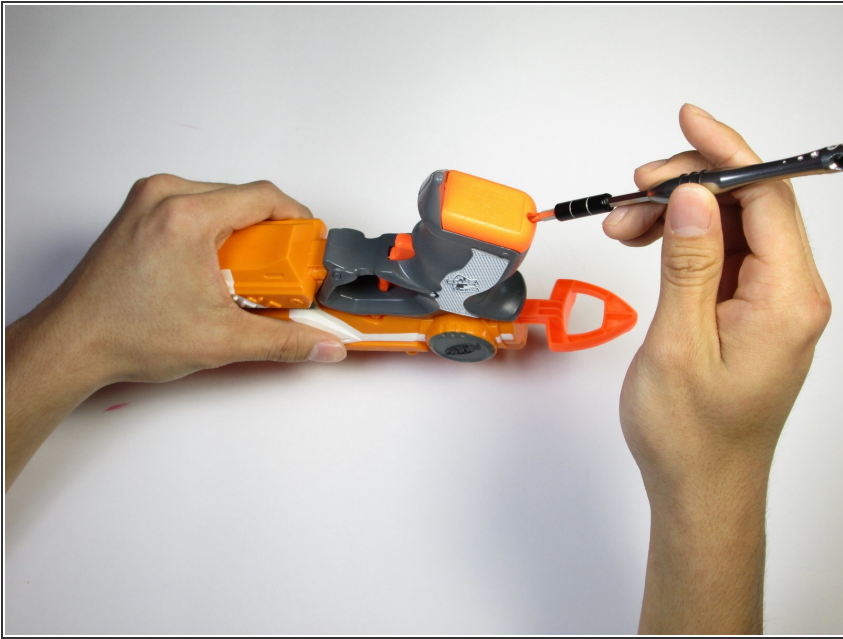

- Use a #1 Phillips screwdriver to remove the 10 -mm screw that secures the battery plate, then remove the battery cover using your hands.

Step 2



- Slide out the two AAA batteries using your fingers.

Step 3 — Blaster Casing




- Remove the seven 10-mm black Phillips screws from the blaster casing with a #1 Phillips Screwdriver.

Step 4



- Slowly pull apart the blaster casing, starting at the battery location.
- Keep pulling apart slowly until it separates completely. Be cautious as to not send the internal components flying.

Step 5

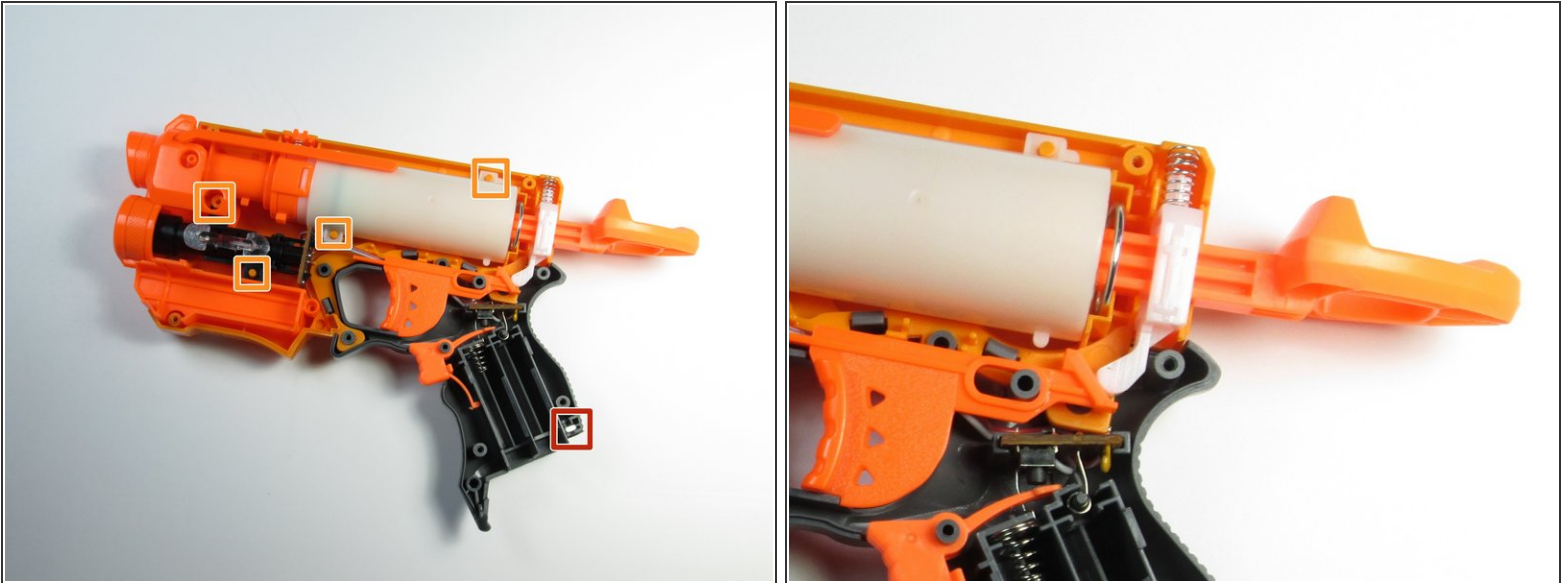

- ✦ For reassembly, ensure that the chrome nut gets put back in the proper location, signified by the red box.
- ✦ For reassembly, ensure that all the parts are lined up correctly on the dowels, signified by the four orange boxes.
- ✦ For reassembly, note the location of the springs as highlighted in the second photo.

To reassemble your device, follow these instructions in reverse order.