




Acer Aspire 5100 LCD Monitor Replacement

This guide will show you how to remove the LCD monitor from the Acer Aspire 5100.

Written By: Brad Rollinson

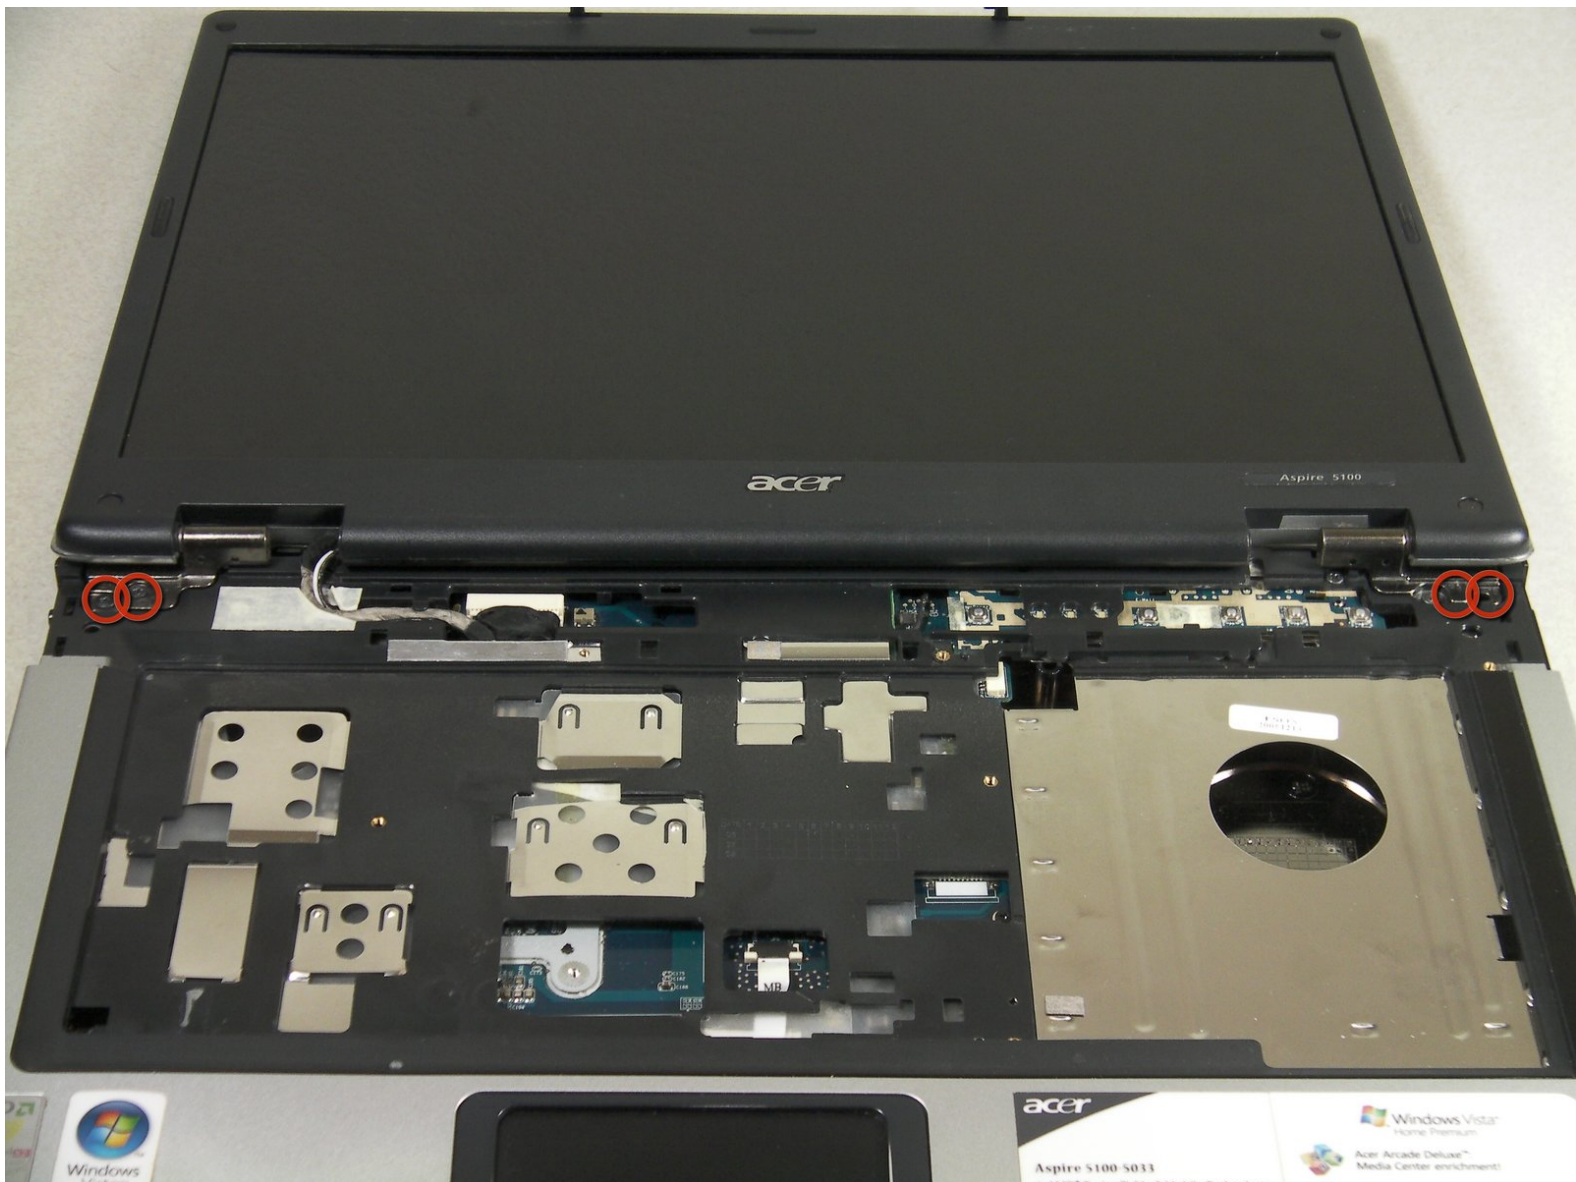

INTRODUCTION

If your Acer Aspire screen (model 5100) isn't producing a clear picture and instead outputs distorted images or intermittent/dead pixels, use this guide to replace the monitor.

The monitor transmits visual data to users through thousands of small pixels. A faulty monitor will transmit distorted or unclear images or no images at all.

Before using this guide, inspect the monitor for any debris that may be interfering with screen quality. Typically, any minute pieces of dust can be removed using an ESD-safe brush or small, damp towel. Be sure to completely shut down your laptop on and off at least two times to confirm that the faulty hardware is the monitor itself.

Before beginning, be sure to turn off your laptop completely and disconnect it from any external power source(s) or monitors if possible.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:



- [Replacement Keyboard](#) (1)
- [Acer Aspire 5100 LCD Screen Replacement](#) (1)

Step 1 — Keyboard



- Open and push the screen back all the way until it is horizontal with the rest of the laptop.
- Use an opening tool to remove the panel above the keyboard that has the power button on it.
- After you have released the tabs, lift up the panel.

Step 2

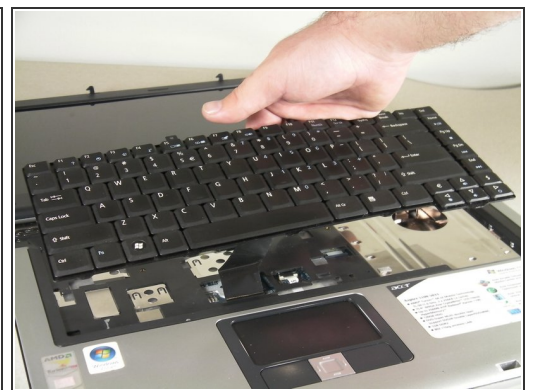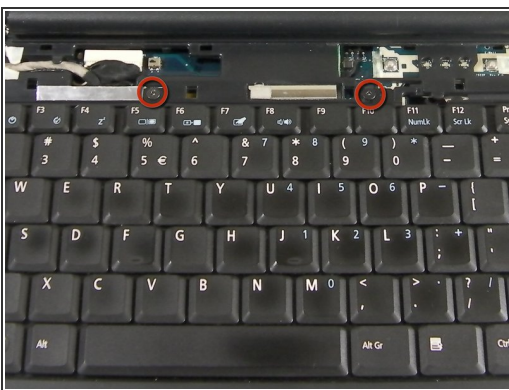


- Under the panel, remove the two screws that connect the keyboard to the laptop.
- ⓘ One screw is located above the F5 button, and the other one is located above the F10 button.
- ⚠ Potential for device damage: Lift up the keyboard CAREFULLY because there is a ribbon that connects the keyboard to the motherboard.

Step 3



- Release the catch on the ribbon socket by sliding the two tabs toward the ribbon.
- Pull the ribbon under the keyboard to detach it from the motherboard.
- Remove the keyboard.

Step 4 — LCD Monitor

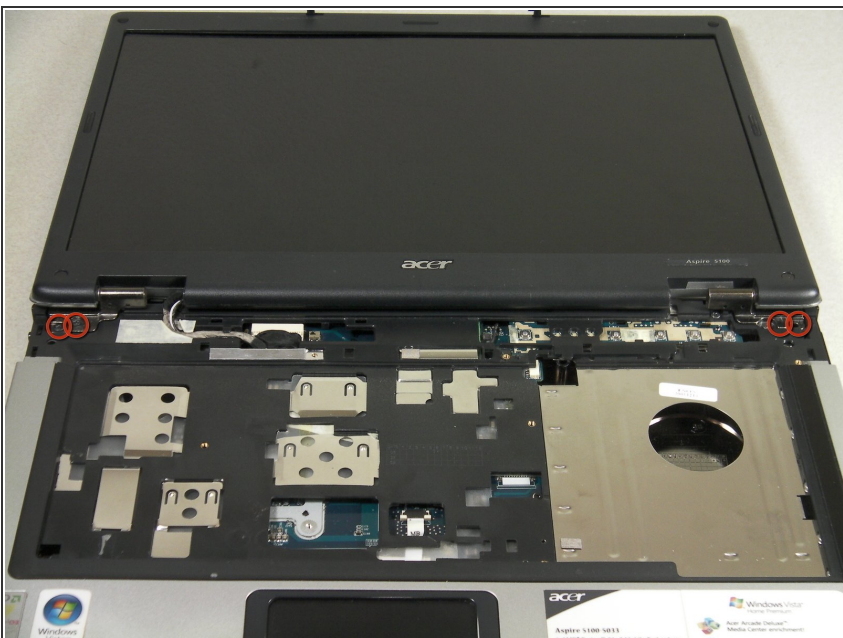


- Remove the two screws from each corner beneath the LCD screen.

Step 5




- Detach the white rectangle located on the motherboard at the end of the wire connected to the LCD screen.

Step 6

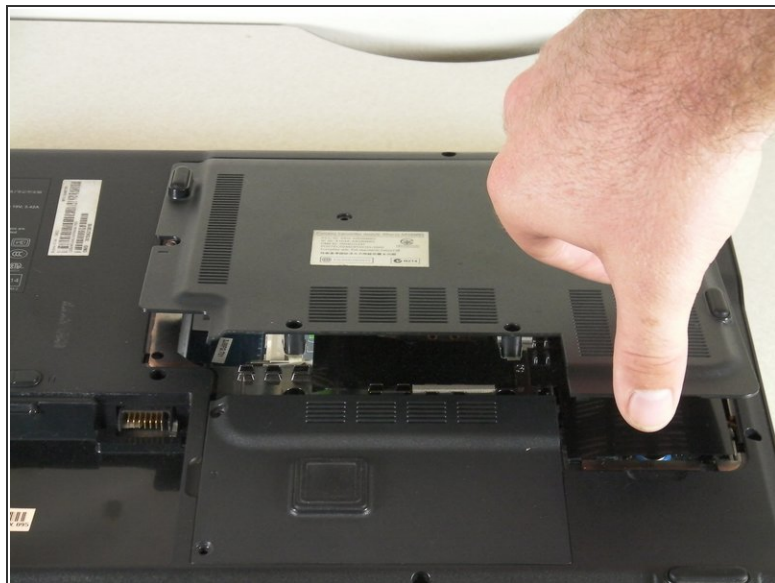

- Flip the laptop upside down.
- Remove the four screws from the back panel of the laptop.
- Lift the panel up and set it aside.

Step 7

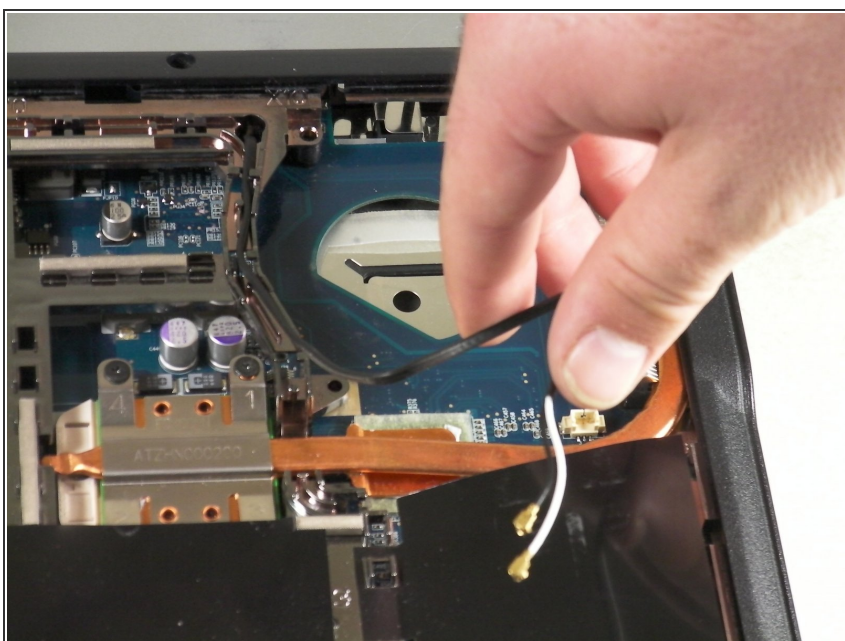

- Detach the black and white wire.
- ⓘ You do not need to remove the cooling fan.

Step 8



- Lift up the monitor to detach it.

To reassemble your device, follow these instructions in reverse order.