



RCA CC310 Battery Replacement

Removing the battery for the RCA CC310 camcorder.

Written By: Oliver Adams



INTRODUCTION

Removing the battery for the RCA CC310 camcorder.

Step 1 — Battery



- Push the battery locking mechanism in the direction of the arrow.
- Lift battery up and pull straight out.
- ⓘ *Due to lack of battery, the process cannot be shown.*

To reassemble your device, follow these instructions in reverse order.