



# Disassembling iMac Intel 24" EMC 2267

## Access Door

Remove your access door to replace RAM chips or to open the case of your iMac.

Written By: johann beda



---

## INTRODUCTION

Remove your access door to replace RAM chips or to open the case of your iMac.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

**Step 1 — Note - most of this guide was taken from the info for: iMac Intel 20" EMC 2266**

- Lay your iMac front side down on a table with the lower edge facing yourself.
- Loosen the single Phillips screw PH#2 in the center of the access door.
- ⓘ This screw is captive in the access door.
- Remove the access door from your iMac.

To reassemble your device, follow these instructions in reverse order.