




Sony Handycam DCR-DVD103 Outer Cover Replacement

This guide outlines how to remove the outer cover of the Sony Handycam DCR-DVD103 in order to get inside and fix or replace broken parts.

Written By: kaitlin

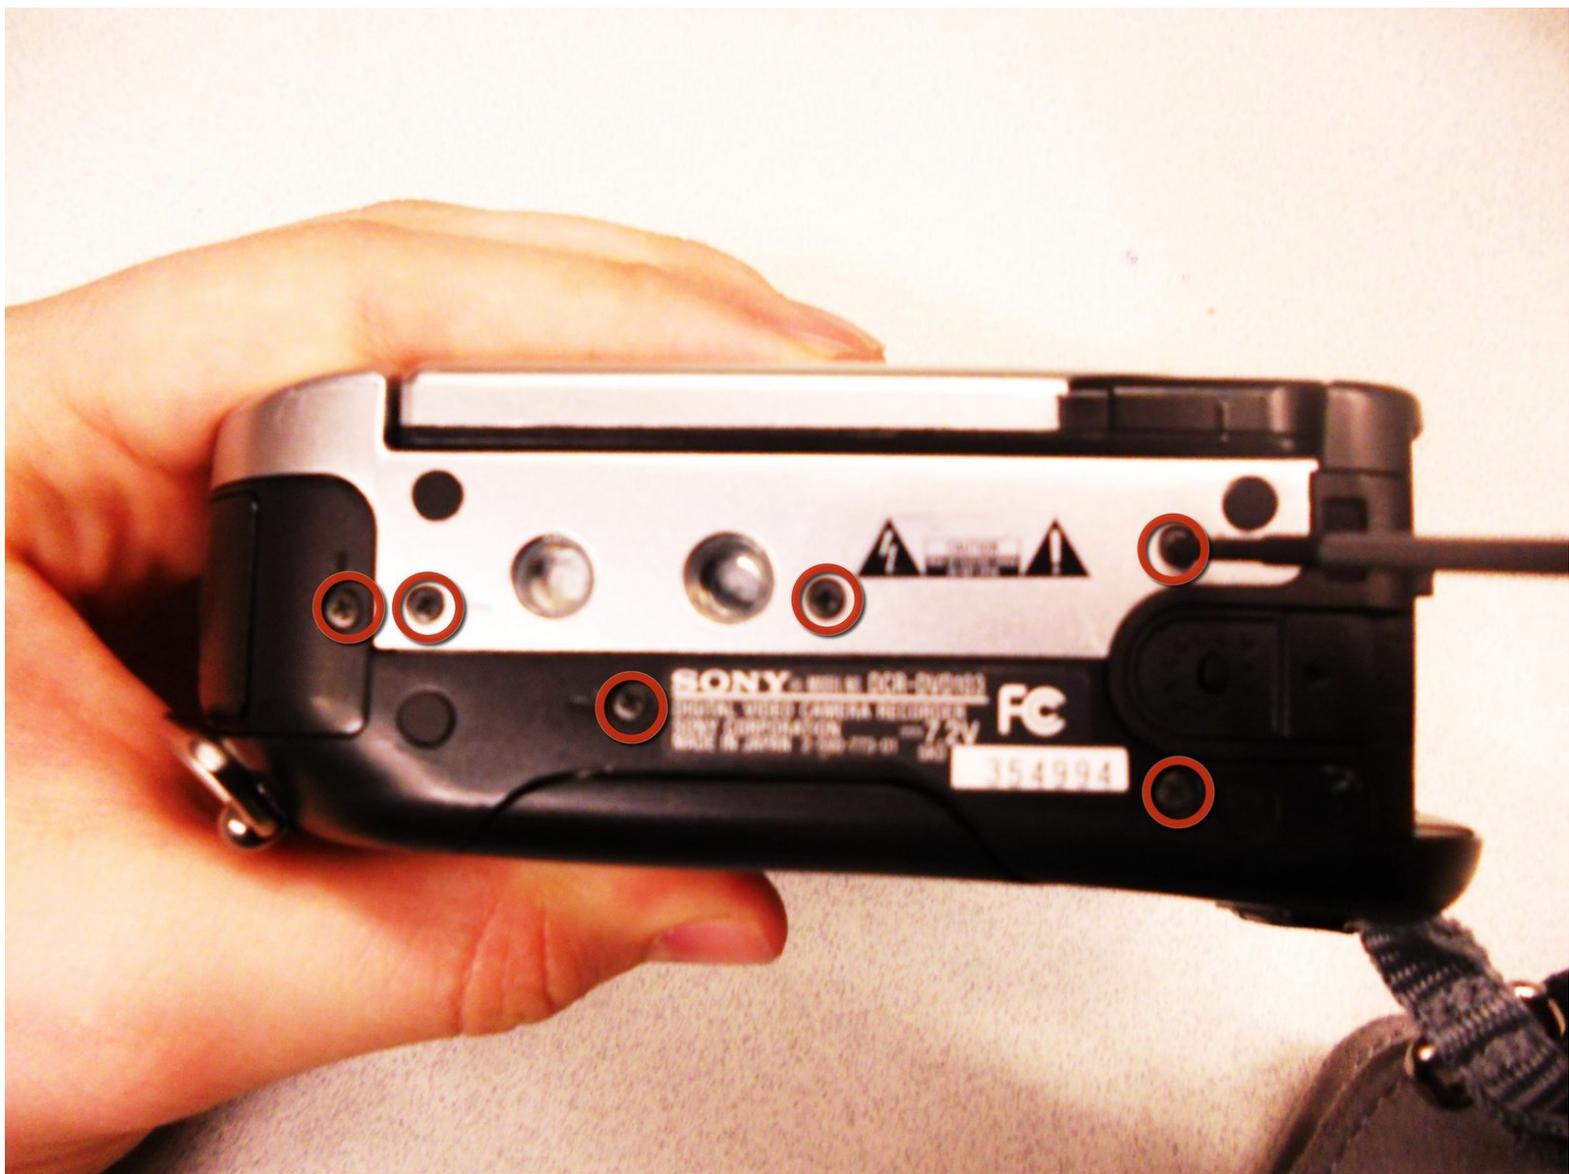

TOOLS:

- [Phillips #00 Screwdriver \(1\)](#)
-

Step 1 — Battery




-  Images do not show the camera's battery.
- On the back of the camera beneath the viewfinder, locate the battery pack.
- Press the small button.
- Slide the switch forward.

Step 2




- Remove the battery from the camera.
-  To reinsert the battery, slide the battery into the camera.

Step 3 — Outer Cover

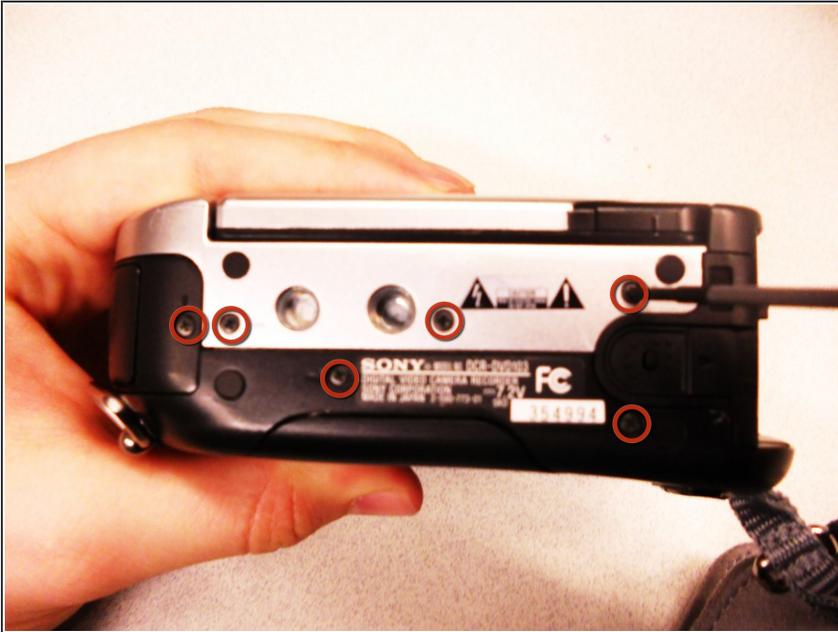

- Using a #00 Phillips screwdriver, remove the six 4.5 mm screws from the camera's bottom.

Step 4

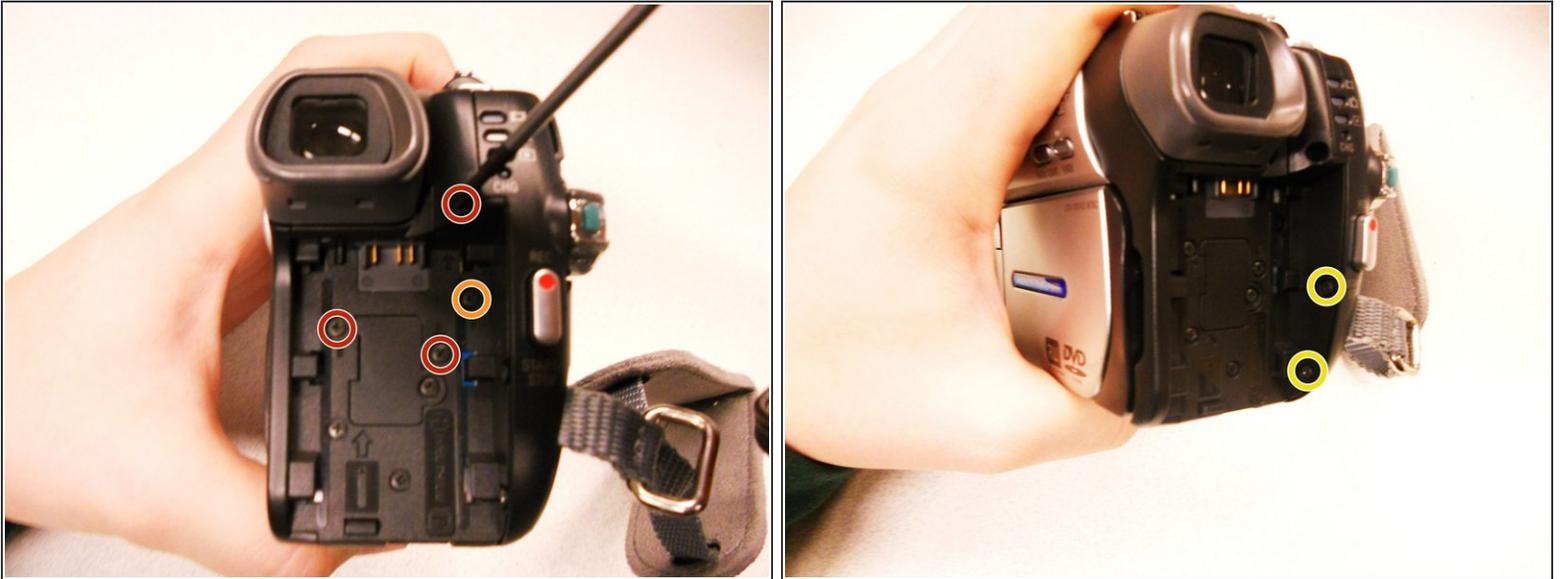

- Remove the three 4.5 mm screws beneath the battery.
- Remove the 2.9 mm screw from the right corner.
- Remove the two 4.5 mm screws from the battery's right wall.

 Images do not show the battery.

Step 5



- Remove the 4.5 mm screw under the output flap on the front of the camera below the lens.

Step 6



- Remove the two 4.5 mm screws at the top of the camera.
- Remove the 4.5 mm screw from the disk side of the camera (next to the lens).

Step 7



- Extend the gray viewfinder, then gently remove the black plastic casing.


⚠ Caution: Plastic pieces are fragile.

Step 8



- Remove the two 2.9 mm screws under the black plastic casing.

Step 9

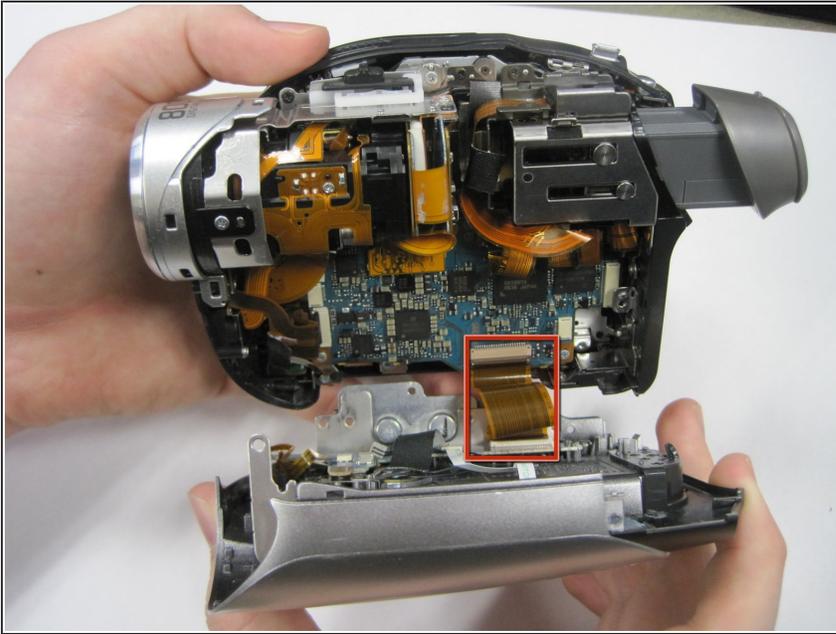

- Gently pull apart the outer silver case and screen.
- Remove the copper wire strip to detach the case from the camera.

To reassemble your device, follow these instructions in reverse order.