




# Nokia Lumia 720 Coaxial Antenna Cable Replacement

Nokia Lumia 720 Coaxial Antenna Cable Replacement

Written By: ZFix

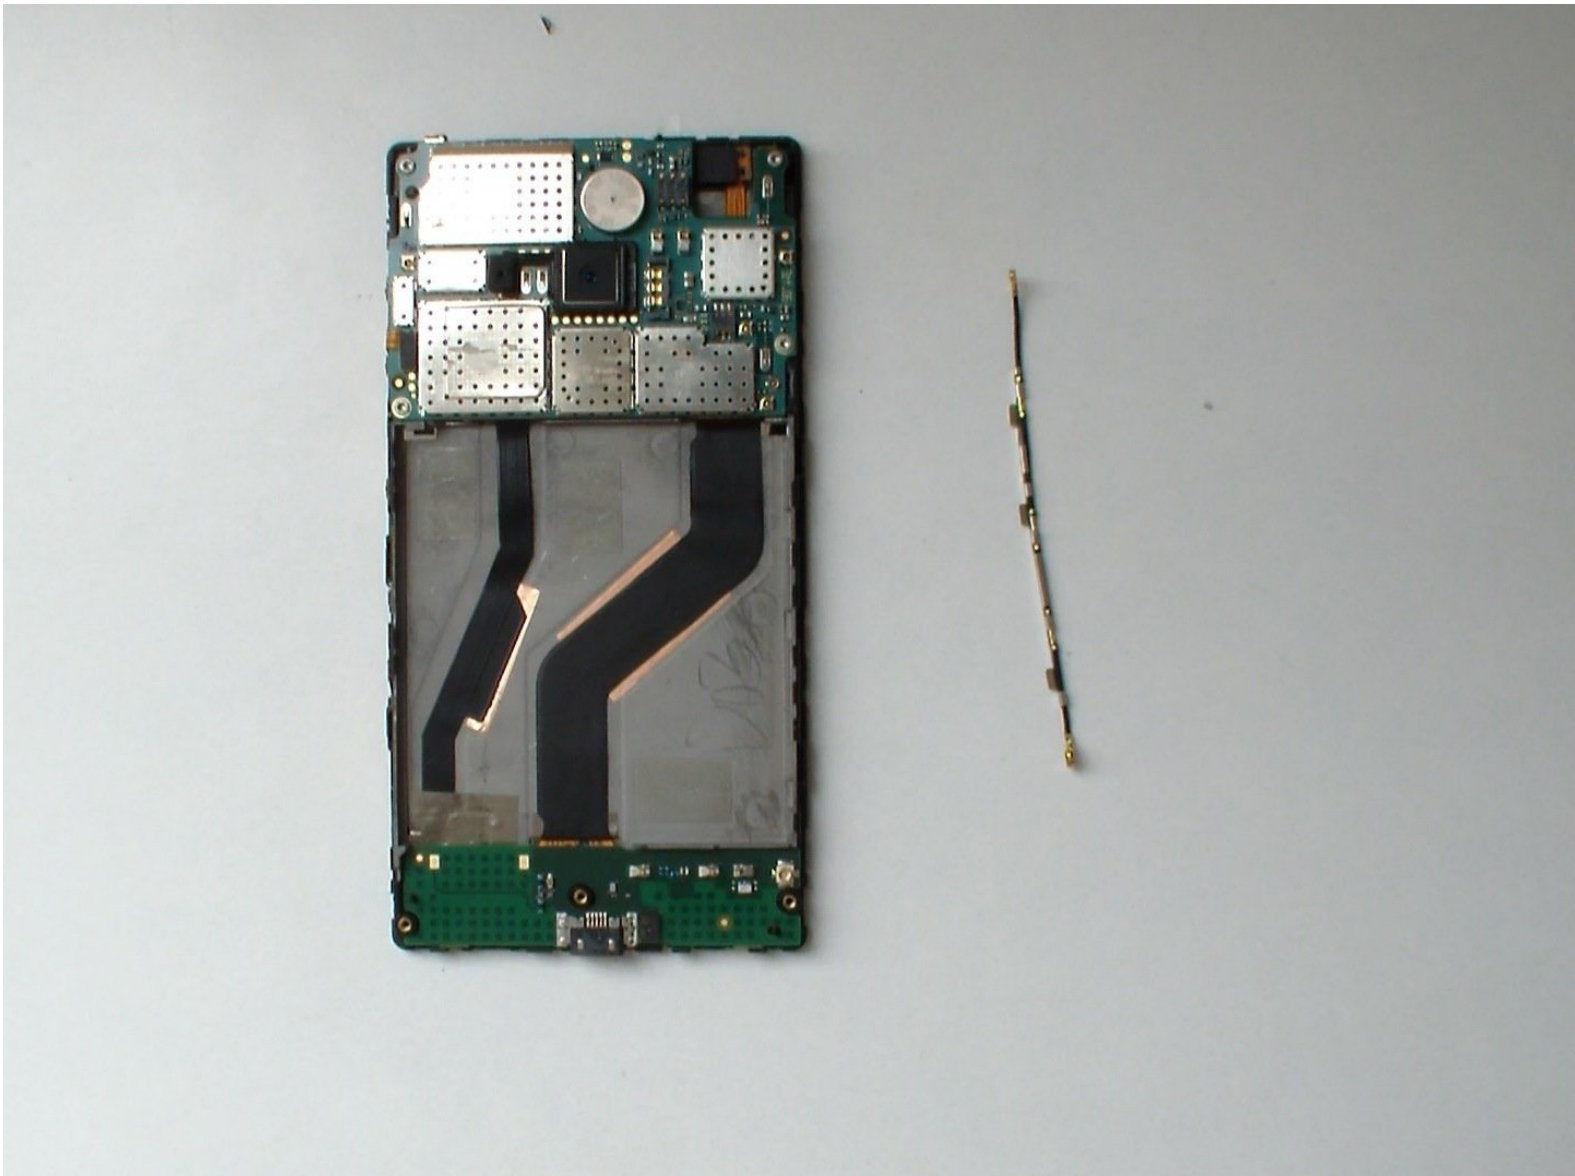

---

## INTRODUCTION

Nokia Lumia 720 - How to replace Coaxial Antenna Cable.

[video: [https://www.youtube.com/watch?v=wseNxvPm\\_po](https://www.youtube.com/watch?v=wseNxvPm_po)]


---



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [T2 Torx Screwdriver](#) (1)
  - [T4 Torx Screwdriver](#) (1)
-

## Step 1 — BATTERY COVER - PART 1

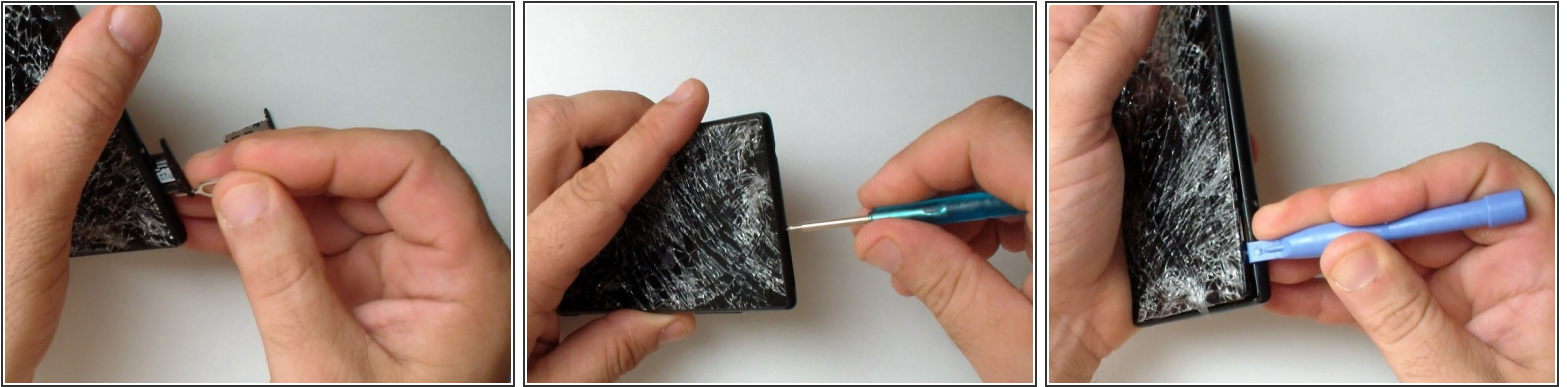


- Remove the SIM card tray and the memory card try.
- Use a screwdriver Torx T2 and remove the screw under the SIM card tray.
- Use plastic tools and start the separating the back cover from the top side.

## Step 2 — BATTERY COVER - PART 2

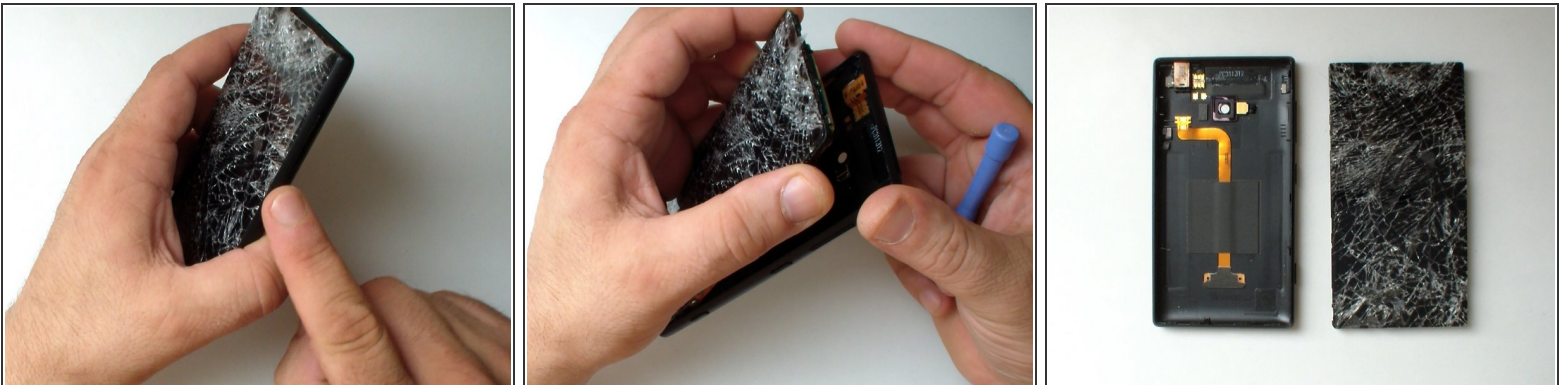


Be careful with the volume buttons.

### Step 3 — Loudspeaker & Antenna module

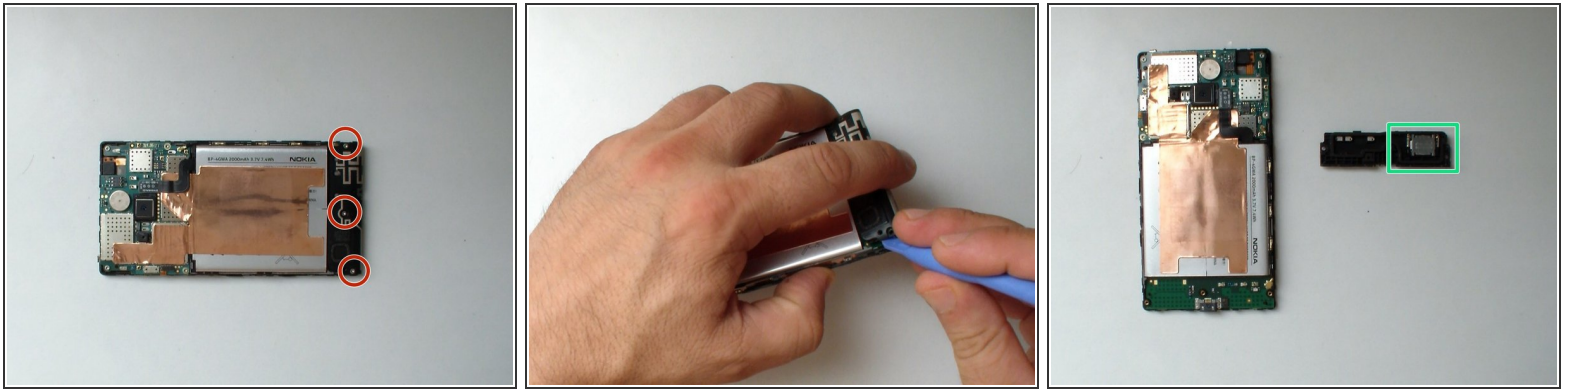

- Remove the 3x Torx T4 screws.
- Buzzer / Loudspeaker

### Step 4 — COAXIAL ANTENNA CABLE

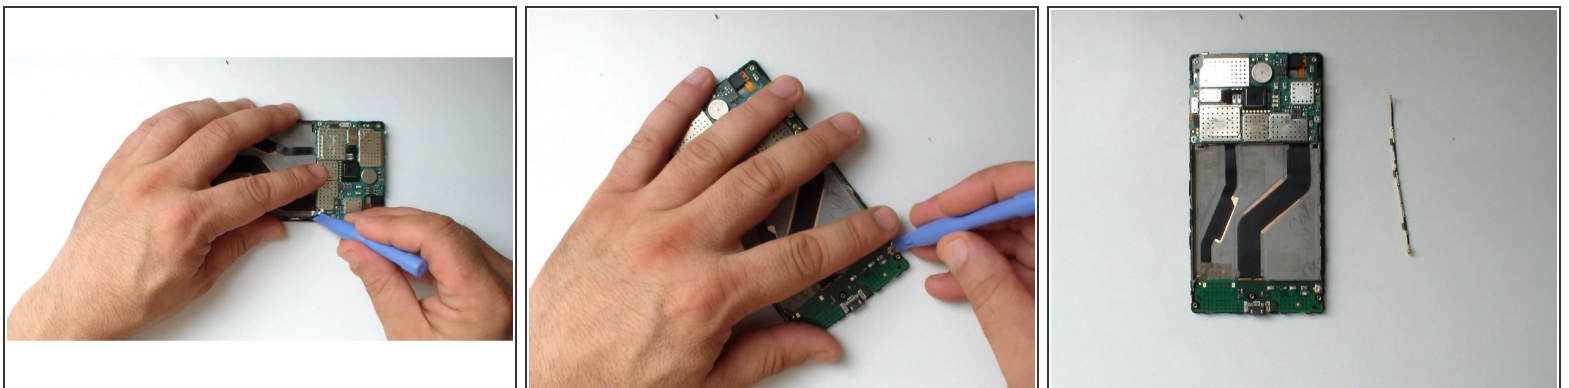

- Disconnect the Antenna cable from the Logic board and from the Charging Dock board and remove it.

To reassemble your device, follow these instructions in reverse order.