



Fujitsu LifeBook N3510 RAM Replacement

Written By: Neil Daniels



INTRODUCTION

Accessing the RAM in this computer is straightforward and requires minimal disassembly.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Locate the two clips on the bottom of the computer that support the battery.

Step 2



- Using your fingers, push the clips inward and then upward.
- Lift the battery out of the computer.

Step 3 — RAM



- Locate the RAM cover.

Step 4





- Remove the screw labeled "3."
- ⓘ The screw is not shown in the picture.

Step 5




- Remove the RAM cover by lifting it with your finger.

Step 6

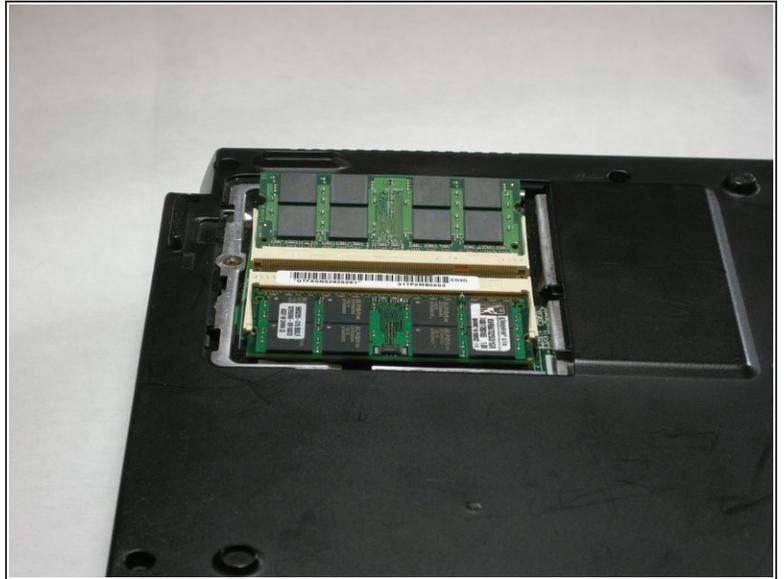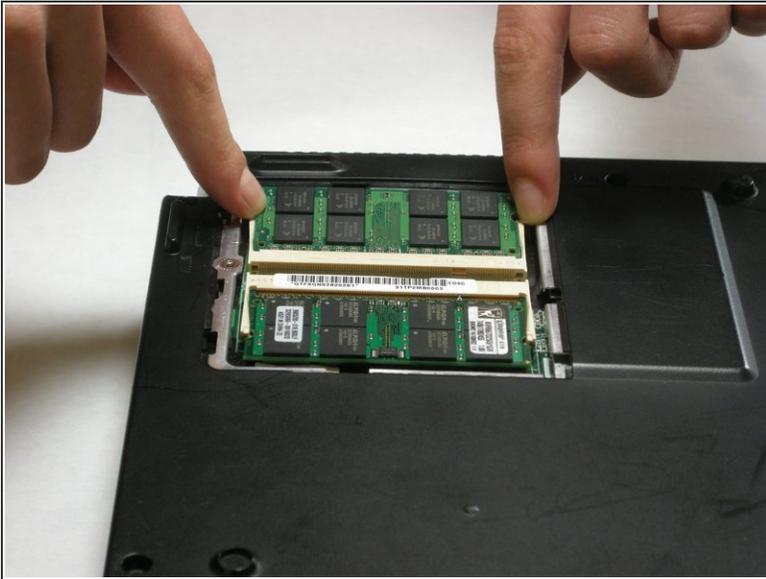

- Remove the RAM module by pushing the securing clips outward.
 - The RAM module will then slightly pop out.
- When you are installing a new RAM module, carefully insert it into the socket and push downwards.

Step 7

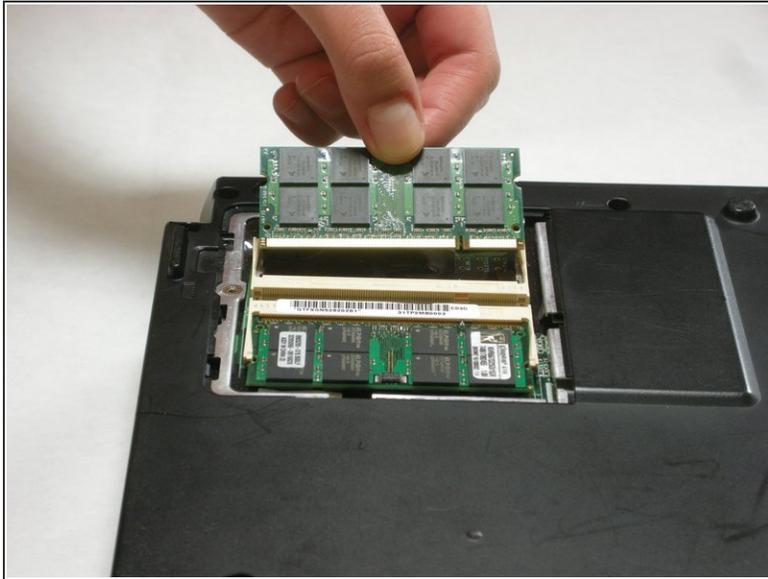

- Carefully pull the RAM module from the computer.

To reassemble your device, follow these instructions in reverse order.