



# Nikon D5200 Battery Door Replacement

This guide details how to replace the battery door on the Nikon D5200.

Written By: Alexander Corn



## INTRODUCTION

In addition to the yellow battery tab, the battery door holds the camera's battery and ensures that it does not fall out. If the battery door becomes damaged or is missing, it should be replaced. It is also necessary to remove the battery door when adding certain accessories to the camera.

---

### TOOLS:

- [Metal Spudger](#) (1)
-

## Step 1 — Battery Door



- Turn the camera on its bottom to reveal the battery door.
- Open the battery door.

## Step 2



- Using a spudger or other prying tool, gently pop the battery door off of its hinge.

To reassemble your device, follow these instructions in reverse order.