



MacBook Core 2 Duo Hard Drive Replacement

Written By: iRobot



INTRODUCTION

How to remove the hard drive, along with its cable and bracket from your computer.

TOOLS:


- [Coin](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Use a coin or spudger to rotate the battery-locking screw 90 degrees clockwise.

Step 2

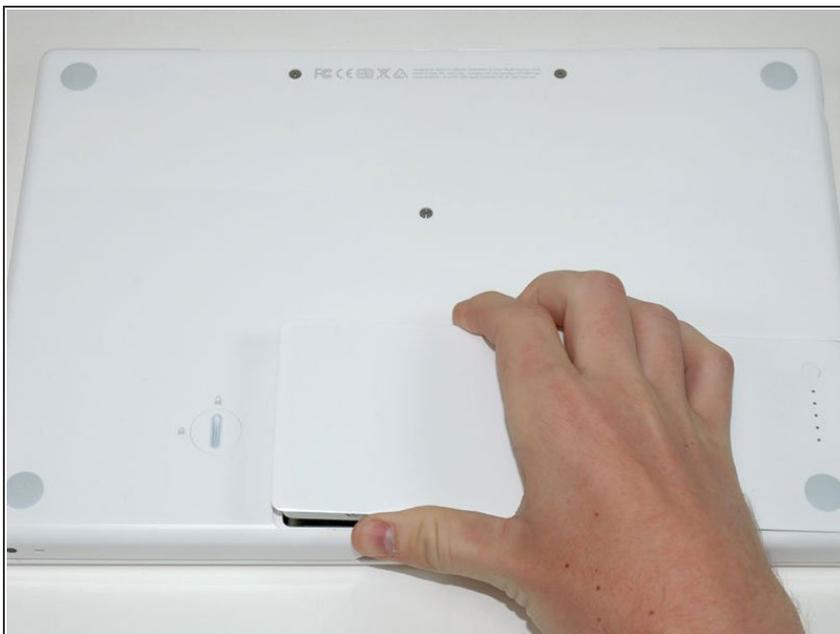

- Lift the battery out of the computer.

Step 3 — Memory Cover



- Unscrew the three evenly-spaced Phillips screws from along the rear wall of the battery compartment.
- ★ The screws are captive to the metal memory cover so you cannot lose them.
- ⓘ Using The Flexible Extension sold by iFixit will help with this step.

Step 4



- Grasp the right end of the L-shaped memory cover, then pull it towards you so it clears the battery compartment opening.
- Lift the memory cover up and out of the computer.

Step 5 — Hard Drive



- Grasp the white plastic tab attached to the hard drive and pull it to the right, removing the hard drive from the computer.
- ☑ The hard drive goes back into its compartment with the label facing down.

To reassemble your device, follow these instructions in reverse order.