



# Nikon D3000 Flash Spring Replacement

The flash component of the camera should pop up automatically depending on the camera setting being used. If this does not happen, chances are the spring is simply jammed or broken and needs to be replaced.

Written By: Zahra Simpson



---

## INTRODUCTION

After removing the covering of the flash arm and it's components, remove the metal spring from it's hinge and replace it with a new one.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Flash Spring




- Remove the two 2.5mm x 4mm Philips screws located directly under the flash.
- Pop off the covering of the flash to reveal the flash arm spring.

## Step 2

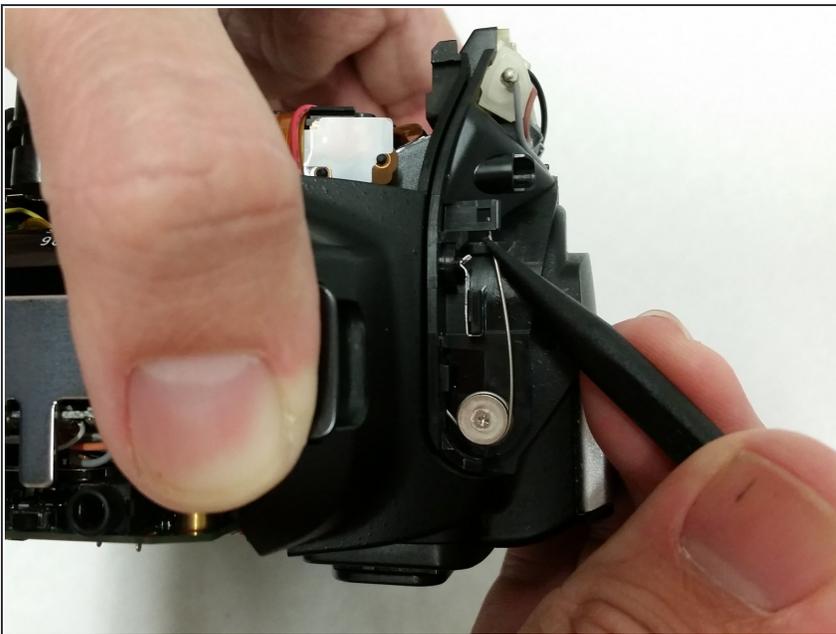

- Lift the flash arm spring using the plastic spudger and unhinge the spring to remove it.

### Step 3

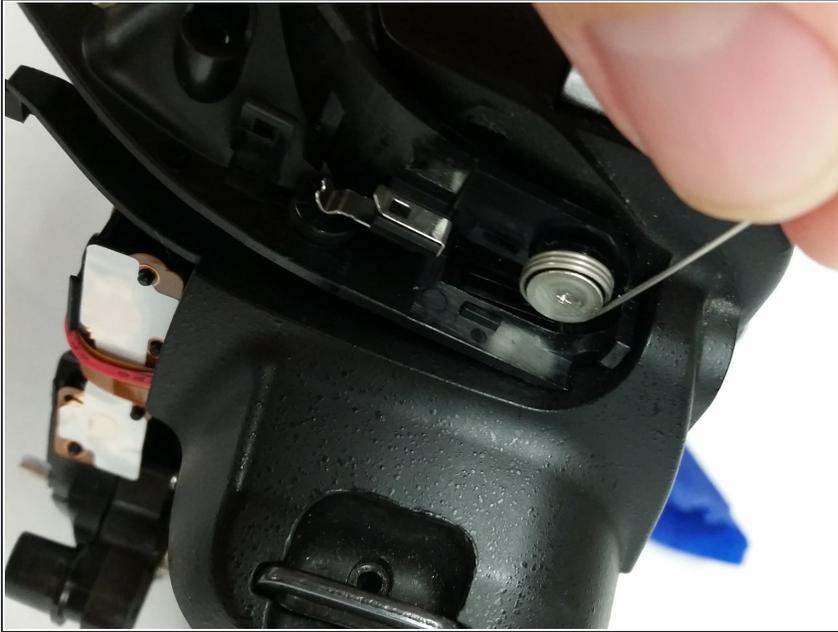

- Remove the spring by sliding it off, then replace it with a new one.

To reassemble your device, follow these instructions in reverse order.