



Nikon Coolpix S5200 Battery Replacement

Replace the dead battery in your Nikon Coolpix S5200 so you can get back to taking pictures.

Written By: Andy Powers



INTRODUCTION

The Nikon Coolpix S5200 battery powers the camera. Without it, the camera is rendered useless. Use this guide to learn how to replace the battery so that you can get back to taking pictures



PARTS:

- [Nikon Coolpix S5200 Battery](#) (1)
-

Step 1 — Battery



- Place the Nikon Coolpix upside down so that the on/off button is facing the floor and the camera information is facing you

Step 2



- Slide the battery cover away from the camera to reveal the location of the battery

Step 3



- Remove the dead battery and insert the new battery in its place
- Close the battery cover by sliding it back into place

To reassemble your device, follow these instructions in reverse order.