




# enTourage Pocket eDGe E-Reader Screen Replacement

This guide will aid the reader in replacing the E-Reader Screen on their Entourage Pocket eDGe.

Written By: Adrian Do

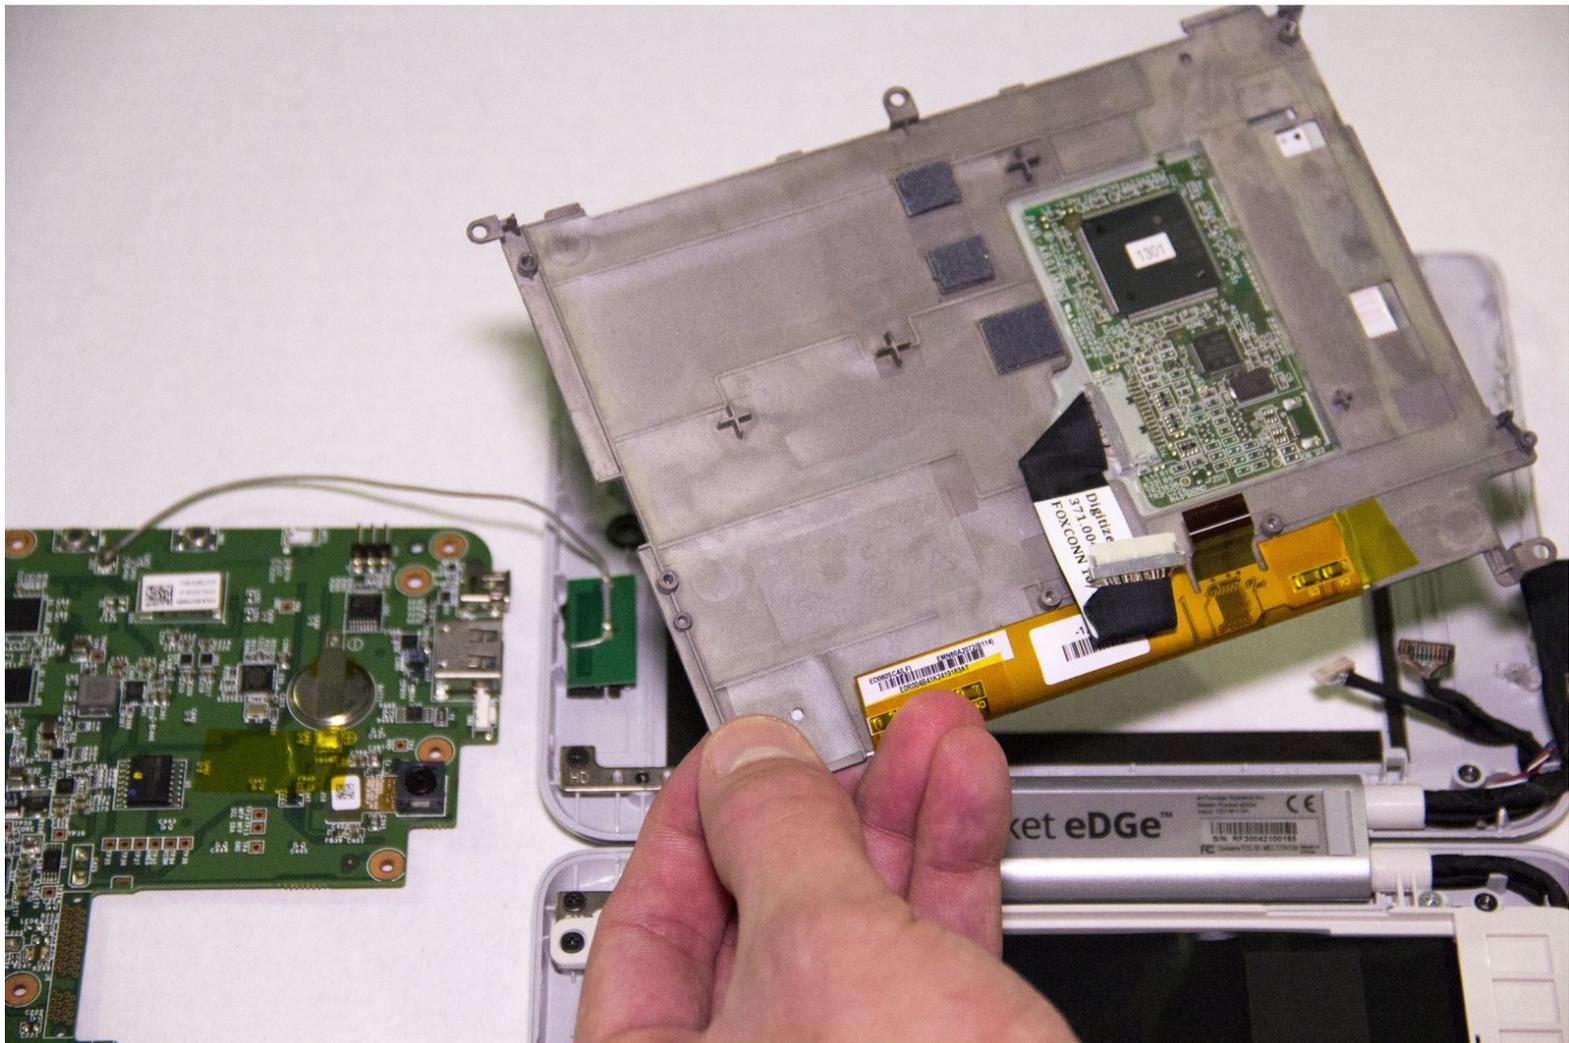

## INTRODUCTION

Your enTourage Pocket eDGe device may experience problems with the e-reader screen. If you need to replace your e-reader screen for any reason, follow this guide.


### TOOLS:

- [Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

### PARTS:

- [E-Reader Screen for Entourage Pocket eDGe](#) (1)

## Step 1 — Battery

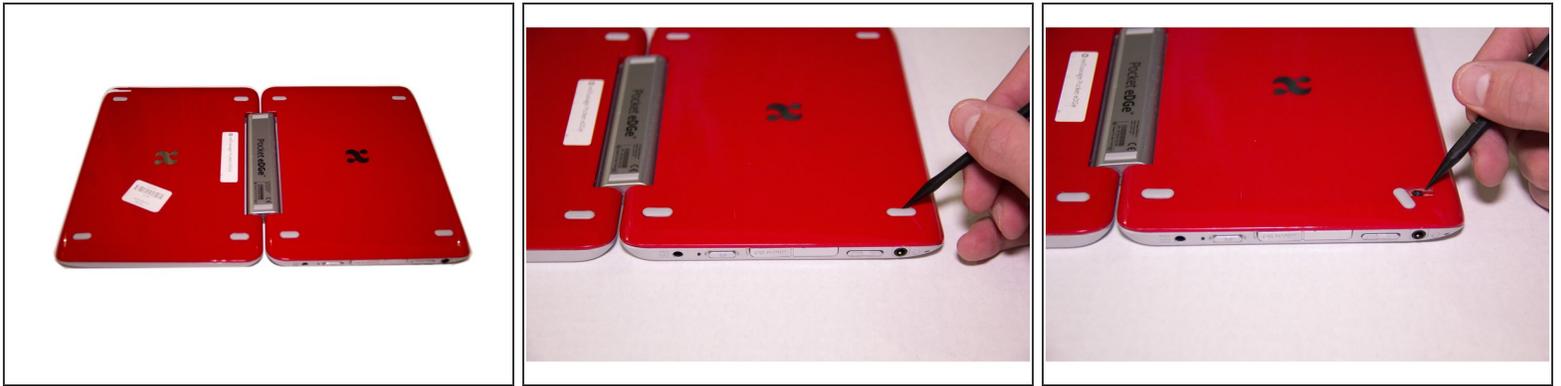

 Make sure the device is powered off before beginning.

- Open the Pocket Edge and place device with the screens face down. The side containing the stylus should be on the left.
- Remove all eight elliptical rubber tabs covering screws using your finger or spudger.

## Step 2



- Using your J1 Phillips head screwdriver, remove all eight 6mm screws from the back of your device.

### Step 3




- Using the plastic opening tool, lift the back plate from both sides of your device and remove them.

### Step 4




- Locate the side containing the battery. Lift the top of the battery out using your finger and the indentation at the top.

## Step 5

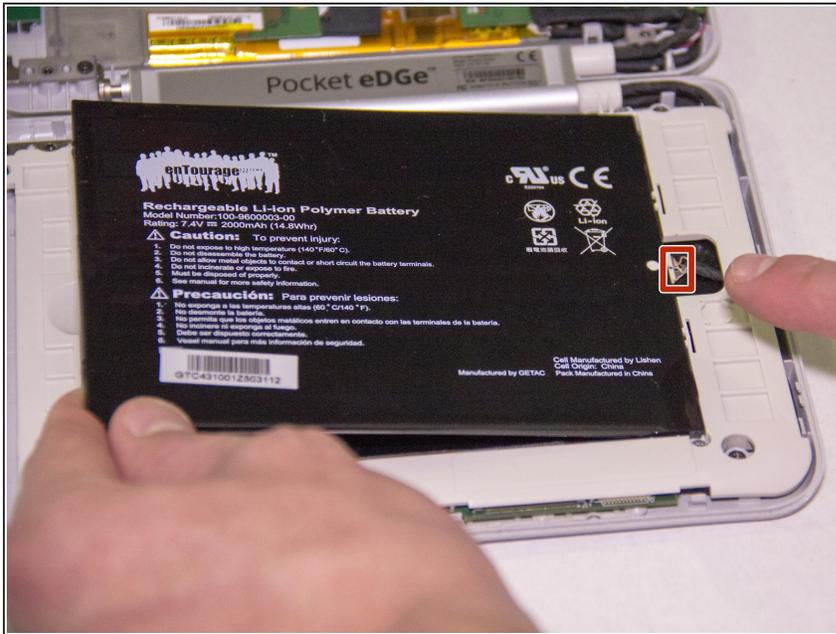


- Carefully unplug the bottom side of the battery from the connecting plug and set the disconnected battery aside.

## Step 6 — E-Reader Screen

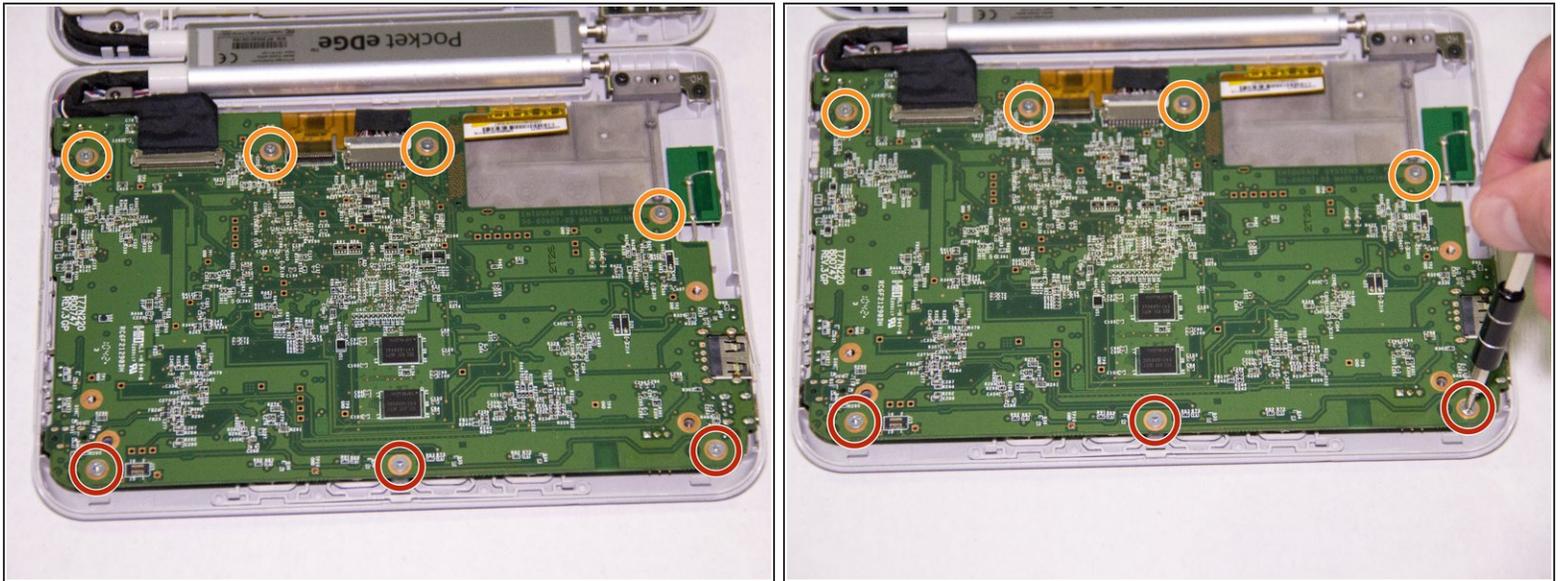


- Locate the side of the device containing the motherboard.
- Using your J0 Phillips head screwdriver, remove the three 5mm screws from the bottom of the motherboard.
- Using your J0 Phillips head screwdriver, remove the four 3mm screws from the top of the motherboard.

## Step 7

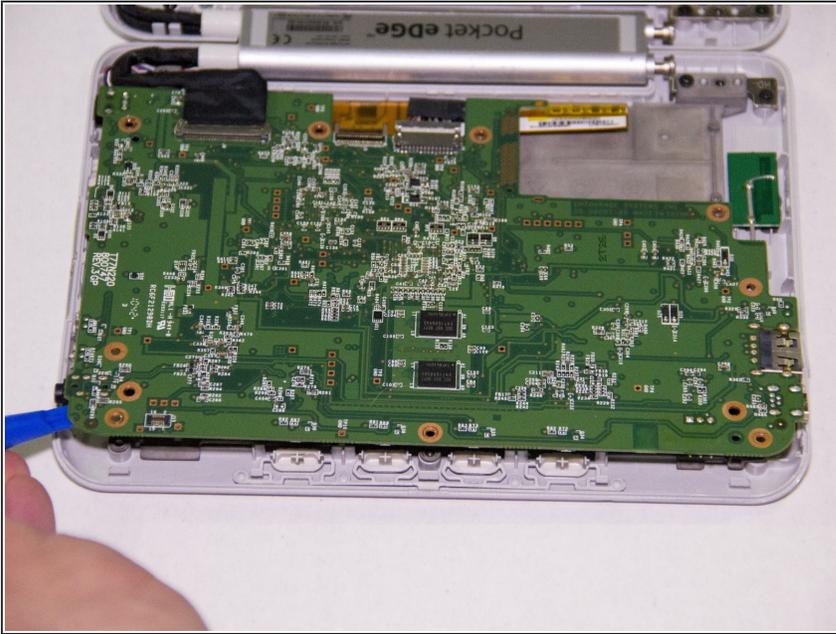


- Using the plastic opening tool, carefully pry the bottom of the motherboard up and away from the casing.

## Step 8

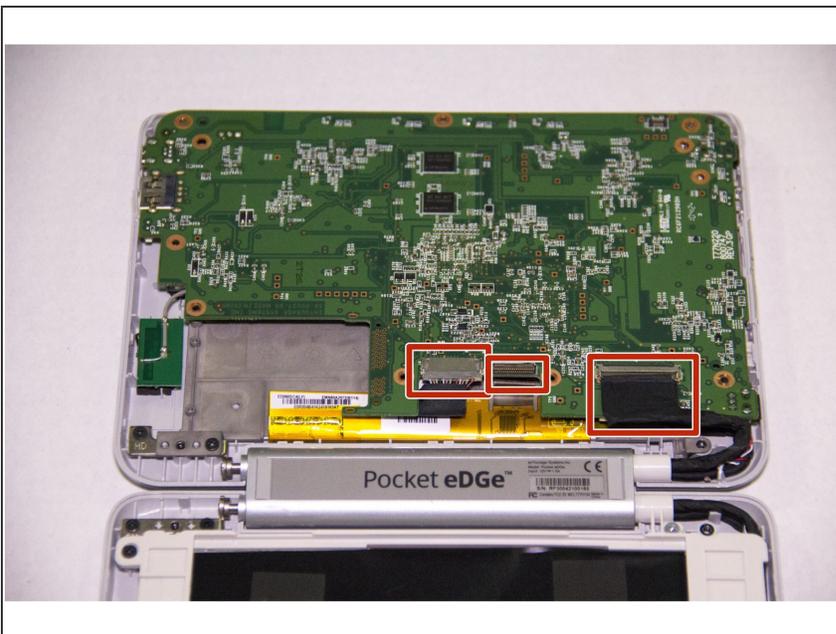

- Position your device so the inside edge of the motherboard is closest to you.
- Locate the three wires connecting the motherboard to the rest of the device.
- Using your finger or a pair of tweezers, gently remove each of these from the motherboard.

## Step 9

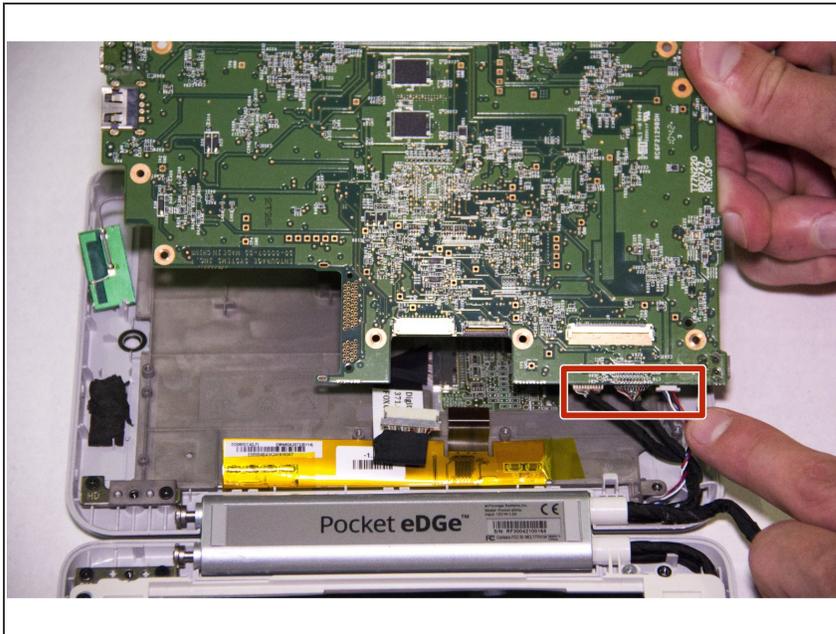

- Lift the outer edge of the motherboard up. Carefully disconnect the 3 connections on bottom of the motherboard by pulling gently.

## Step 10




- The motherboard is now connected in only one place on the edge of the device. Being careful of this, flip the motherboard outside of the device, leaving it connected to the foam padding inside of the device.

## Step 11



- Using your J0 Phillips head screwdriver, remove the one 5 mm screw holding the gray plastic e-reader screen backing into place.

## Step 12

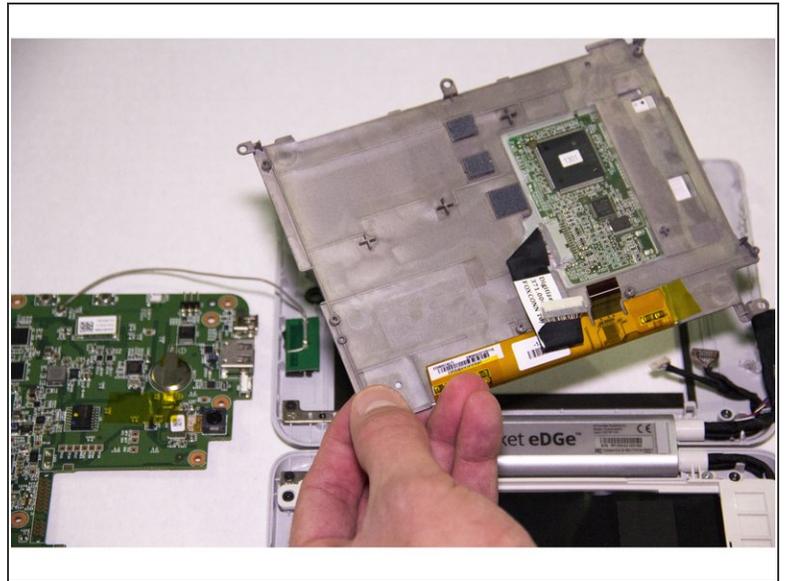

- Carefully pry up the gray plastic e-reader screen using your finger and remove from the device.