



HP Compaq 6910p RAM Replacement

This guide will show you how to replace the RAM on an HP Compaq 6910p.

Written By: Tyler Fricks



INTRODUCTION

In this guide, we will illustrate how to remove and replace the RAM card of this device. Thumbs and a Phillips screw driver are required to replace this item.


TOOLS:

- [Phillips #1 Screwdriver](#) (1)

PARTS:



- [PC2-5300 2 GB RAM Chip](#) (1)

Step 1 — RAM

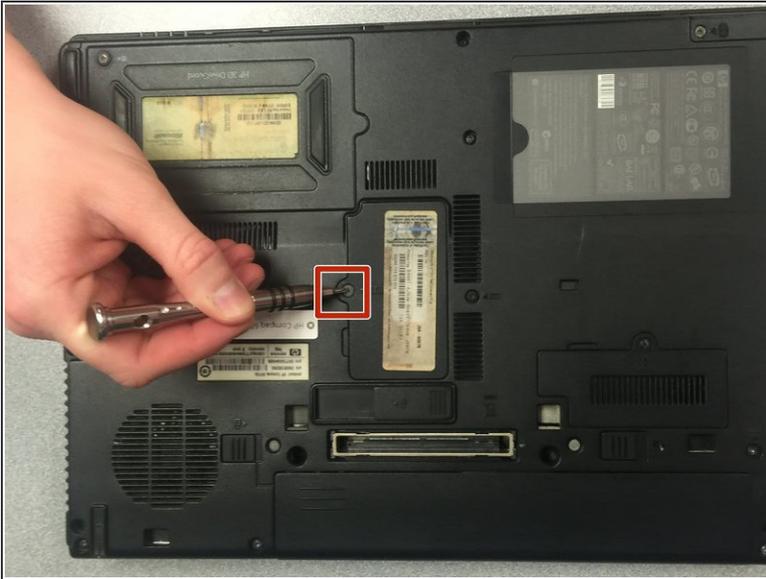

- Loosen the 1.5 cm Phillips #1 screw.
- Lift up the cover.

Step 2

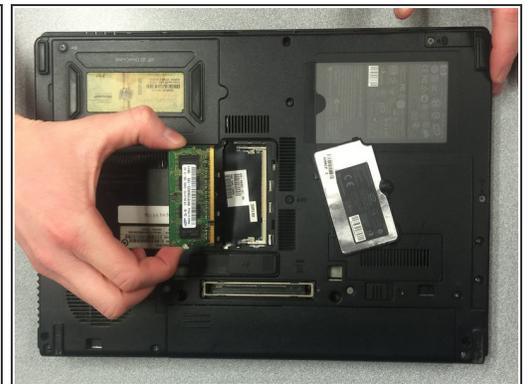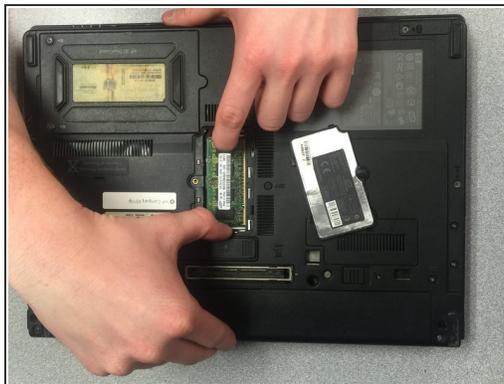

- Locate the release latches marked in red.
- Press down on the release latches simultaneously to release the RAM.
- Remove the RAM.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 04:47:28 AM (MST).

