



# Nikon Coolpix E5700 Back Panel Replacement

Removing the back panel of the Nikon E5700.

Written By: Raana



---

## INTRODUCTION

This guide will walk you through the necessary steps to remove the back panel of the Nikon Coolpix E5700.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Use your finger tip to slide the battery release tab toward the battery symbol on the E5700.
- Open the battery door.

## Step 2



- Pull the battery out of the E5700.
- ⓘ It may be necessary to wiggle the battery while pulling to free it from its pocket in the case.



### Step 3 — Back Panel



- Turn to the bottom of the camera.
- Remove the two Phillips screws located directly below the back monitor

### Step 4



- Turn the camera to the side with the memory card slot and open the compartment for the CF card.
- Remove the top two Phillips screws closest to the back panel.

## Step 5



- Turn to the back of the camera.
- Remove the top most Phillips screw on the back panel.



## Step 6



- Turn to the last side of the back panel.
- Remove the Phillips screw below the eyepiece.
- Remove the Phillips screw located above the speaker.





## Step 7

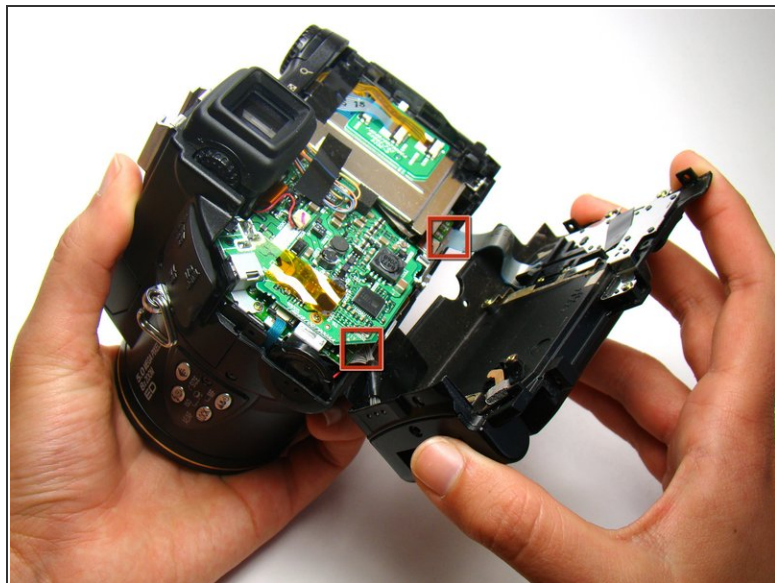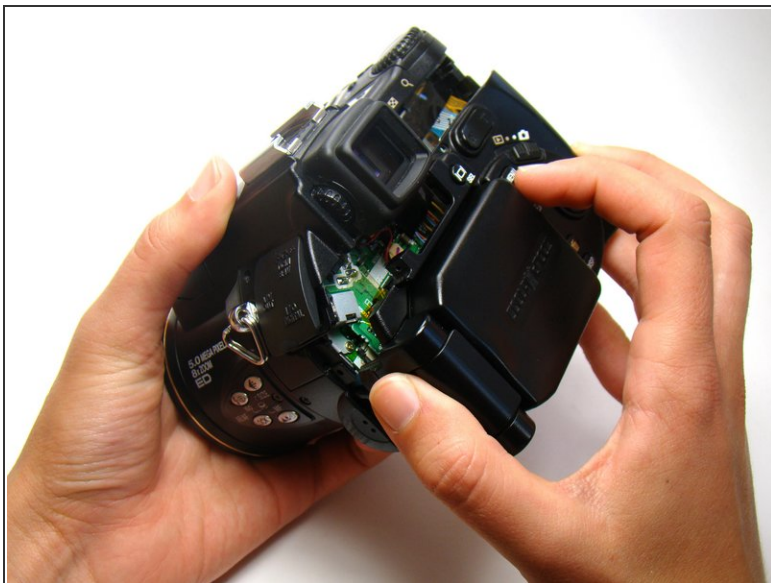

- Gently begin to remove the back panel.

⚠ Caution: There are two bundles of wires connecting the back panel to the camera. Be sure not to pull too hard and yank these out.

## Step 8

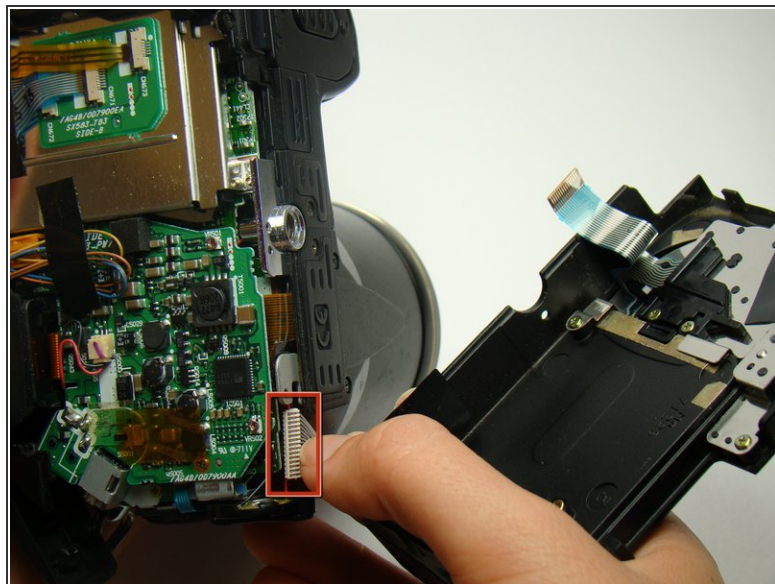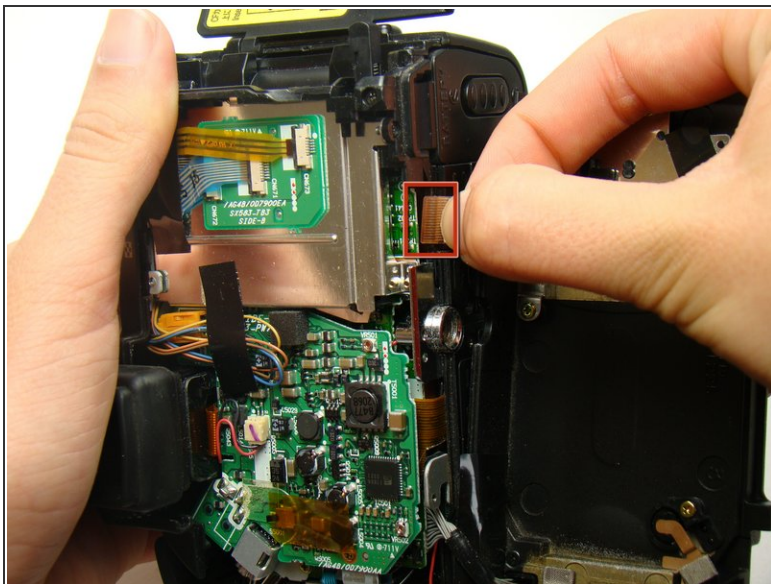

- Now gently unplug the two wires at the bottom of the panel.

To reassemble your device, follow these instructions in reverse order.