



# Samsung NX Mini Battery Replacement

This guide will show you how to replace the battery in your Samsung NX Mini camera.

Written By: Kelsea Weber



## INTRODUCTION

Camera not turning on? The battery may need to be recharged or replaced. Use this guide to replace the battery and get back to taking awesome photos!

## Step 1 — Battery



- Orient the camera so the button panel and LCD are facing you.
- Use a spudger or fingernail to open the battery compartment on the right side of the camera.

## Step 2



- Push the blue trapdoor to the left to release the battery, and remove the battery.
-  There is no battery shown in this photo.

To reassemble your device, follow these instructions in reverse order.