



Samsung NX3000 Battery Replacement

Camera not turning on? The battery may need to...

Written By: Kelsea Weber




INTRODUCTION

Camera not turning on? The battery may need to be recharged or replaced. Use this guide to replace the battery and get back to taking awesome photos!

Step 1 — Battery



- Turn the camera upside down. Only remove the lens if you have to in order to access the battery compartment, as dust particles could easily enter the main body and fall onto the delicate sensor.
 - Slide the button to the left to open the battery compartment.
 - Push the blue button up to release the battery.
-  The battery is not shown in these photos.

To reassemble your device, follow these instructions in reverse order.