



# Apple PowerBook 520 Memory (RAM) Replacement

This is to replace/install the PowerBook 520's Hard Disk Drive.

Written By: Tyler



---

## INTRODUCTION

This repair will need:

A T-8 or T-6 Torx Screwdriver.



### TOOLS:


- [T8 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Apple Powerbook 520/540 General Disassembly




- Turn computer over.
- Remove battery expansion cover and battery.

## Step 2

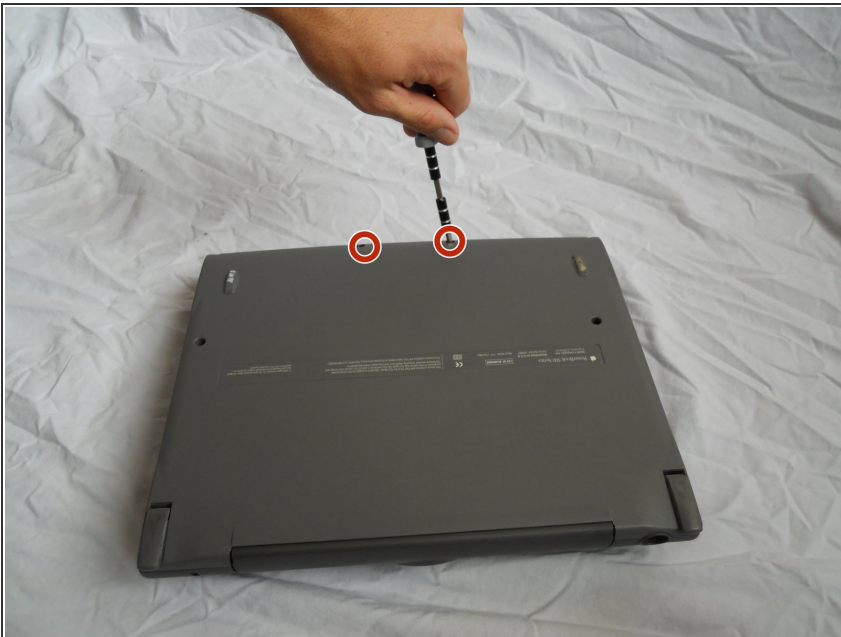

- With monitor hinge at the bottom, remove the two top center screws.

### Step 3

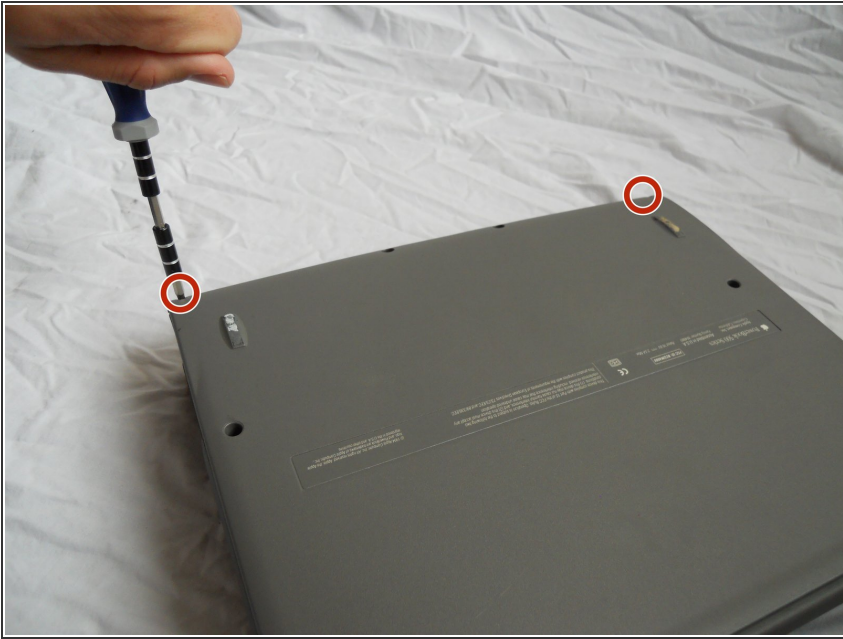

- Remove top left and top right screws.

### Step 4



- Remove middle left and middle right screws.

## Step 5




- Open computer kickstands.
- Remove screws underneath each kickstand.

## Step 6



- Lift keyboard from bottom and take out of shell.

## Step 7

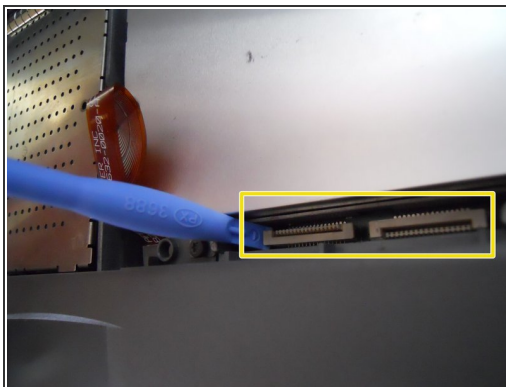


- Lift the white ribbon clamps securing the keyboard ribbon cables to the motherboard. You can do this using a plastic opening tool.
- Removing both ribbon cables from the motherboard will leave the clamps like so.
- From here you can access the logic board, hard drive, and floppy drive.

## Step 8 — Memory (RAM)




- Remove the plastic panel on the bottom of the LCD Screen.

## Step 9

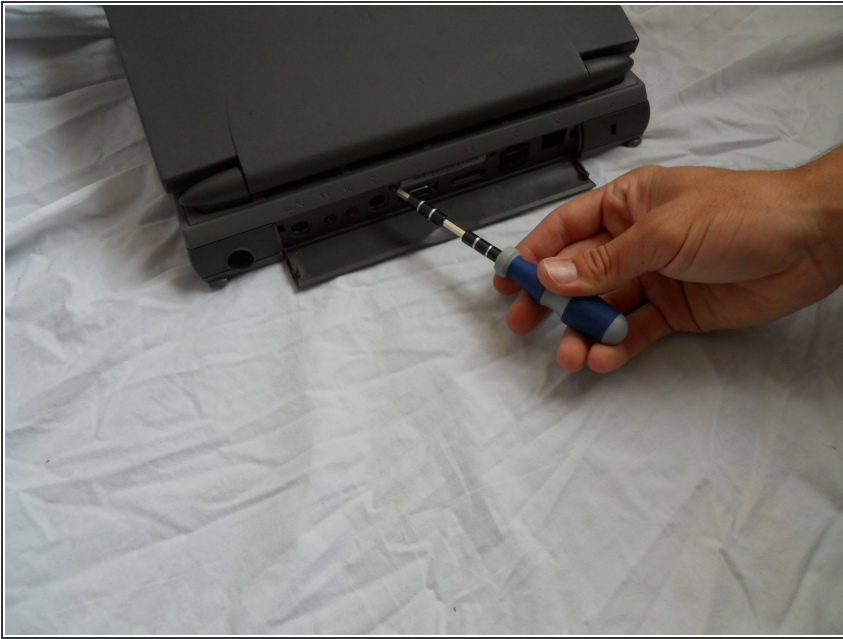


- Open panel on back of the device.  
Remove 2 T8 torque screws.

## Step 10

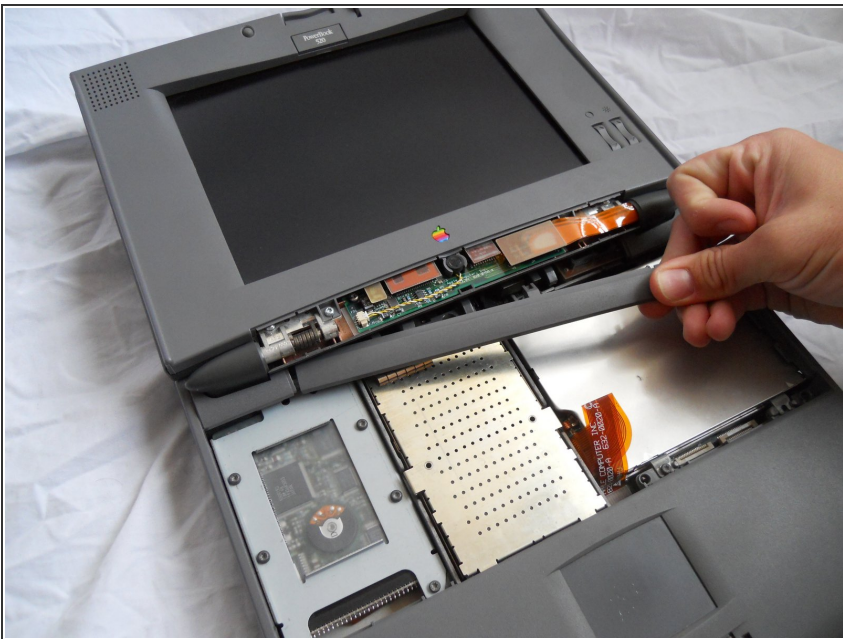

- Remove the plastic panel  
underneath the LCD Screen.

## Step 11

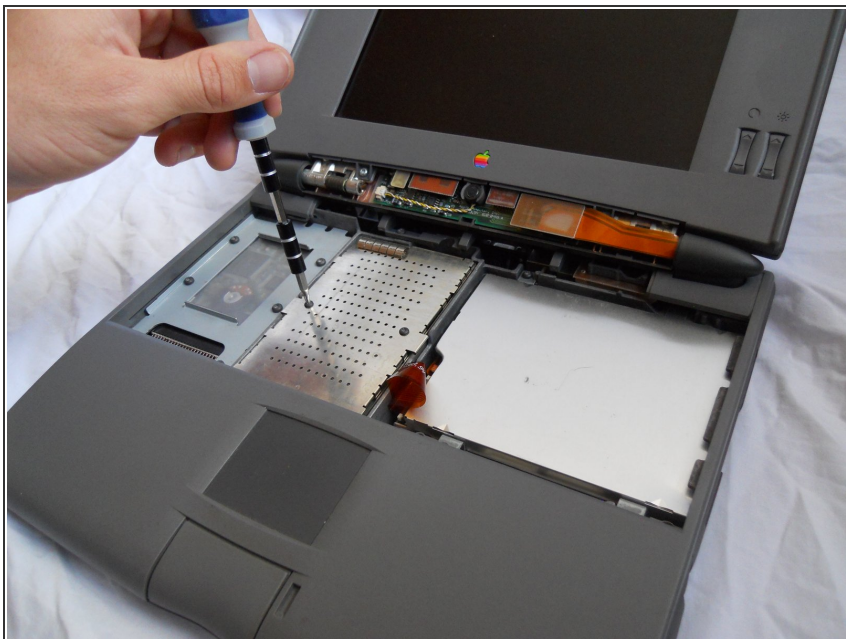


- Remove the 2 T8 Torx Screws securing the logic board protection plate from the midsection of the logic board protection plate. Remove the T8 Torx Screw from the back of the plate, underneath the hinge.

## Step 12



- Remove the logic board protection plate.

## Step 13

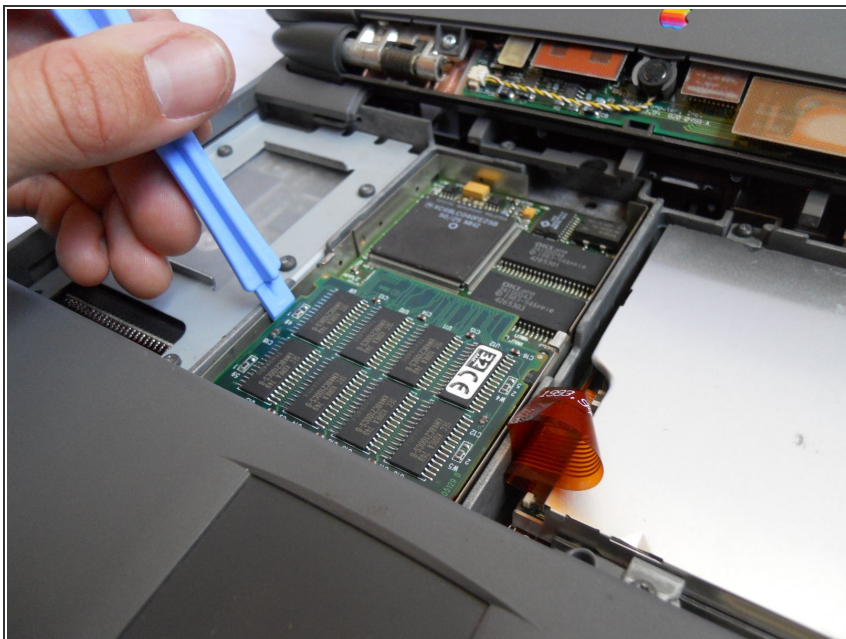

- Using a plastic spudger, gently pry up the uppermost board fixture. This is the Memory (RAM).

## Step 14



- Once the old Memory board is removed, replace it with the new Memory board.

To reassemble your device, follow these instructions in reverse order.