



Samsung NX30 Battery Replacement

Replace a dead battery quickly and easily.

Written By: Julia Kilcup



INTRODUCTION

Replacing the battery on the Samsung NX30 is a super easy and simple task.

Step 1 — Battery



- Flip the camera over so that the bottom of the camera is up.
- Push the battery switch towards the back of the camera.

Step 2



- Locate the blue switch above the battery pack.
- Slide the blue switch into the camera in the direction of the arrow on the switch. When the switch has been pushed in the battery will spring up.

Step 3



- Pull the battery out.

To reassemble your device, follow these instructions in reverse order.