



Panasonic DVD-RV31 Player Front Panel Replacement

Written By: Kevin



 **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Disk Tray Cover



- Eject the disk tray from the DVD player before removing power supply.

Step 2



- Evenly lift upward on the disk tray front cover (not slanted, as pictured). This will allow for easier disassembly of the player.

Step 3 — Outer Case




- Remove the three screws running along the back edge of case cover.
- Remove the two screws from each side of the case cover.

Step 4



- Grab edges of the cover with your hands. Pull outward slightly, then straight up.

Step 5 — Front Panel

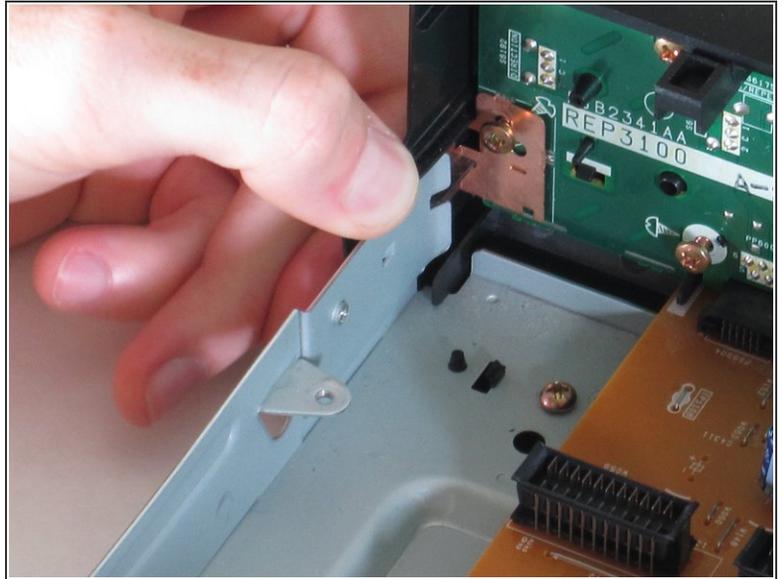

- Lift up the five tabs securing the front panel to the chassis. There are three on the bottom, and two on the inside edges of the panel. Panel should then lift off the player.

To reassemble your device, follow these instructions in reverse order.