



# Nikon Coolpix S51c LCD Screen Replacement

Written By: Ryan



## TOOLS:

Phillips #00 Screwdriver (1)


Spudger (1)

### Step 1 — Back Cover




- Remove all five screws from the bottom of the camera using a Phillips #00 screwdriver.

### Step 2

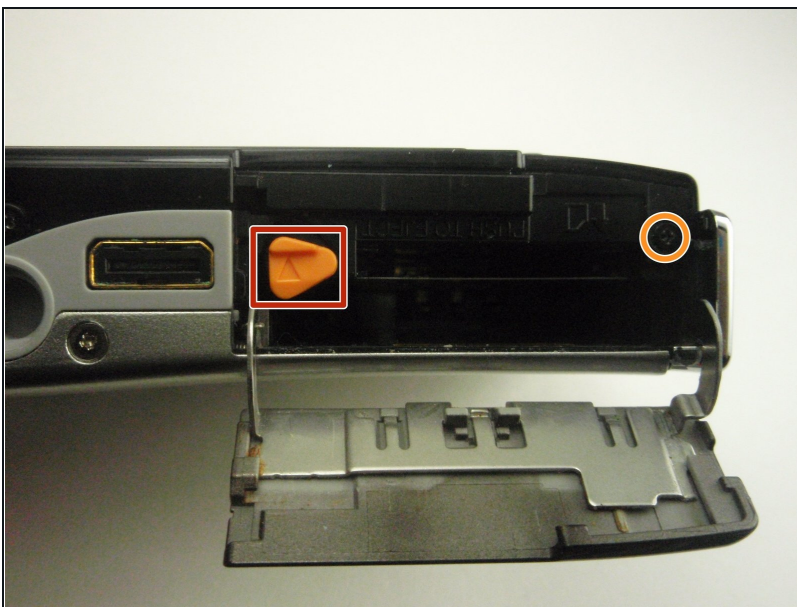


- Open the battery door by sliding it in the direction of the arrow to reveal a hidden screw on the opposite side of the orange lever.
- Remove this screw using a Phillips #00 screwdriver.

### Step 3

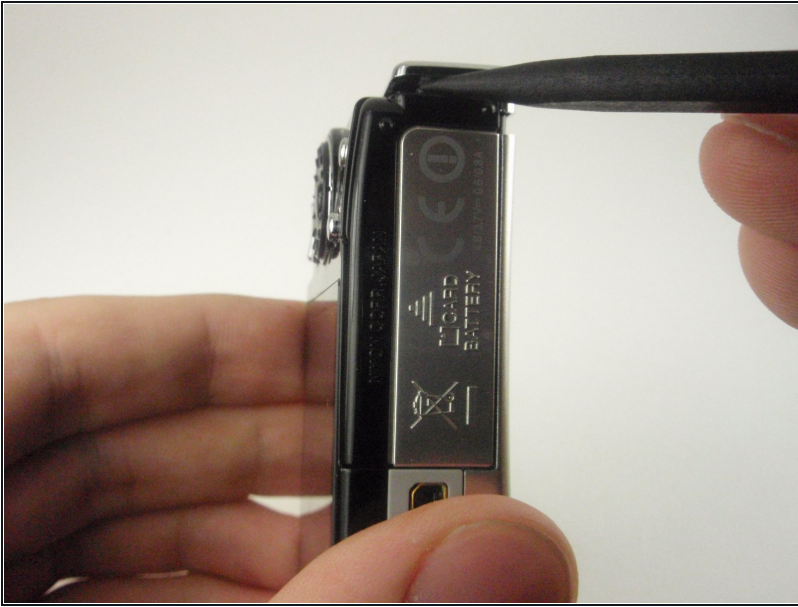

- Rotate the camera to find the side panel with the lanyard attachment.
- Detach the side panel by the lifting bottom corner slightly with the spudger.

### Step 4

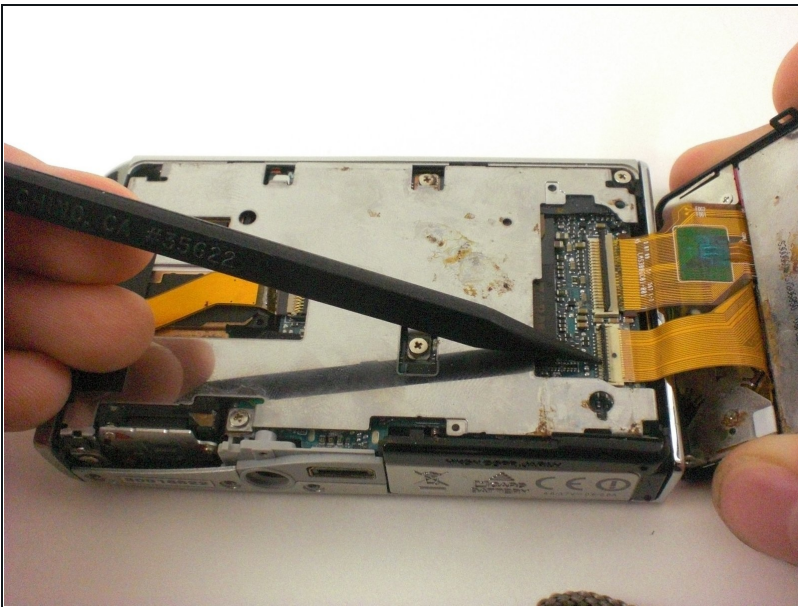

- Lift the back cover, being careful not to rip the orange cables between the camera and the back cover.




## Step 5




- With the back cover lifted, lift the black flap that connects the ribbon to the motherboard with the spudger and carefully remove the back cover.

## Step 6 — LCD Screen

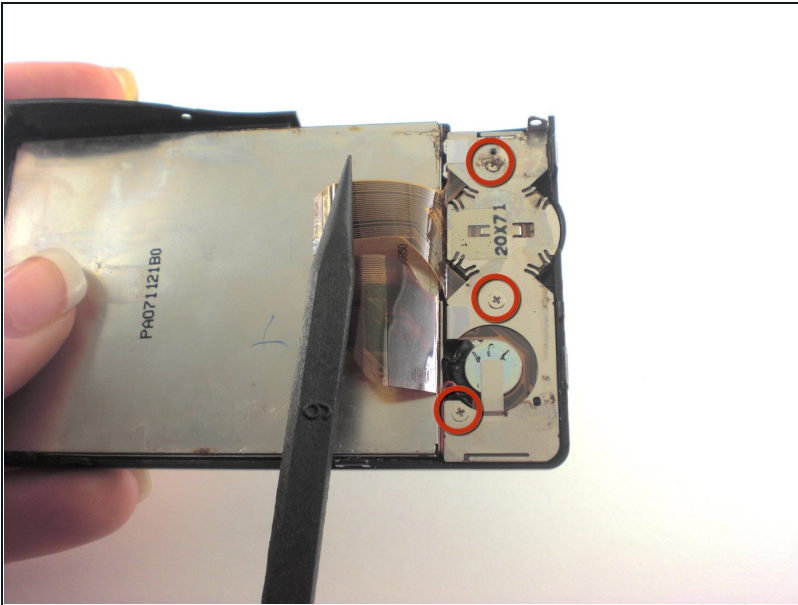

- On back of LCD screen, locate the three screws underneath the ribbon and remove them.

## Step 7

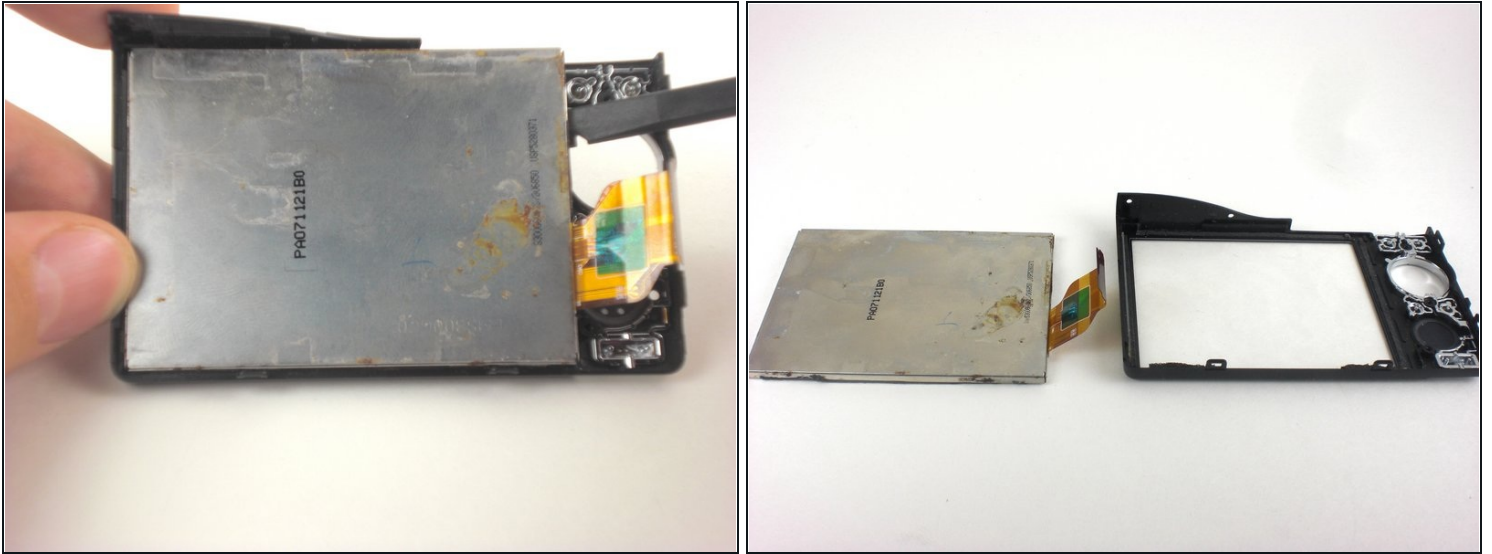

- Take out rectangular component on the side where the screws were.
  - Pry apart screen from back casing using the spudger.
- 

To reassemble your device, follow these instructions in reverse order.