



# HTC HD2 Vibrator Replacement

The vibrator is easy to find and remove after...

Written By: Nathan Puchalski



# INTRODUCTION

The vibrator is easy to find and remove after the housing has been taken off.

---

## TOOLS:

[Spudger](#) (1)

[Tweezers](#) (1)

[T5 Torx Screwdriver](#) (1)

---

## Step 1 — Battery




- Carefully pull the rear cover from the back of the phone.
- Place a finger beneath the small lip on the left side of the battery.

## Step 2




- Lay the phone down on it's screen.
- Lift up on the lip and pull the battery from the phone.

## Step 3 — Midframe

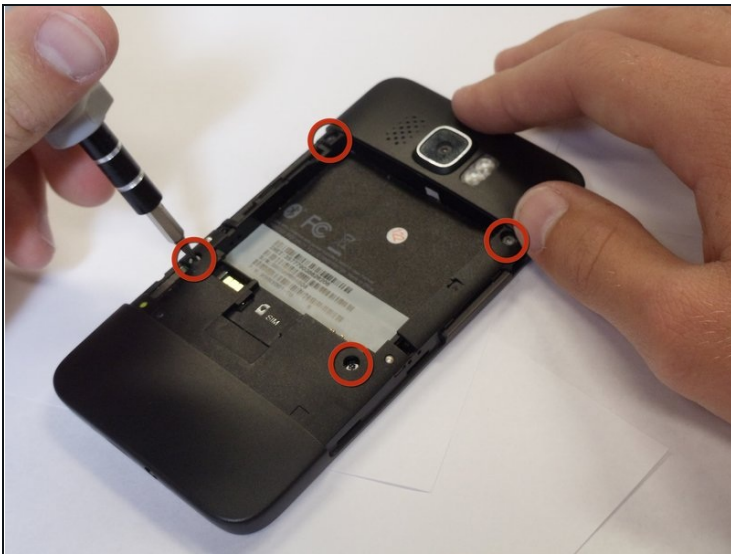

- Remove the four black 3.5mm T5 screws from the back of the phone.


## Step 4

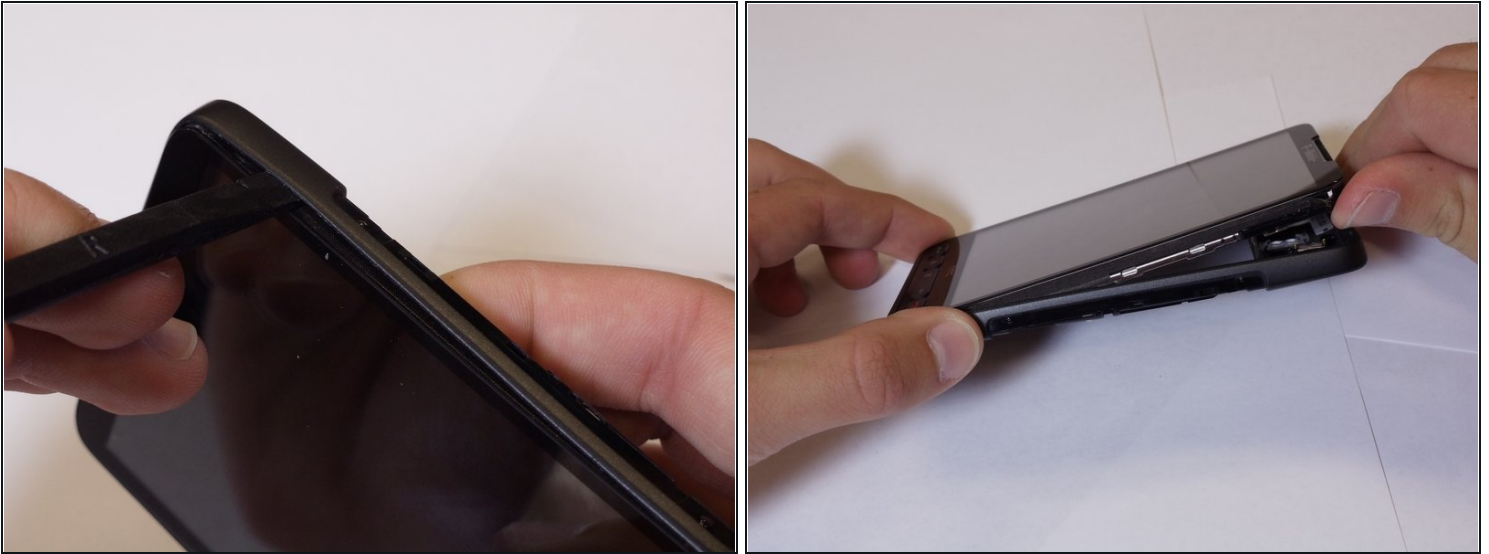

- Insert the flat end of a spudger between the midframe and the display.
- Slide the spudger along the seam between the frame and the display.
- Using the spudger for leverage, carefully pry the midframe away from the display assembly.
  - ① This process will take some effort. Continue to pry slowly and carefully until the frame begins to detach.
- As it releases, pull the midframe away from the phone.
- ① The volume control tab may fall off during removal. It can be easily reattached.




## Step 5 — Vibrator

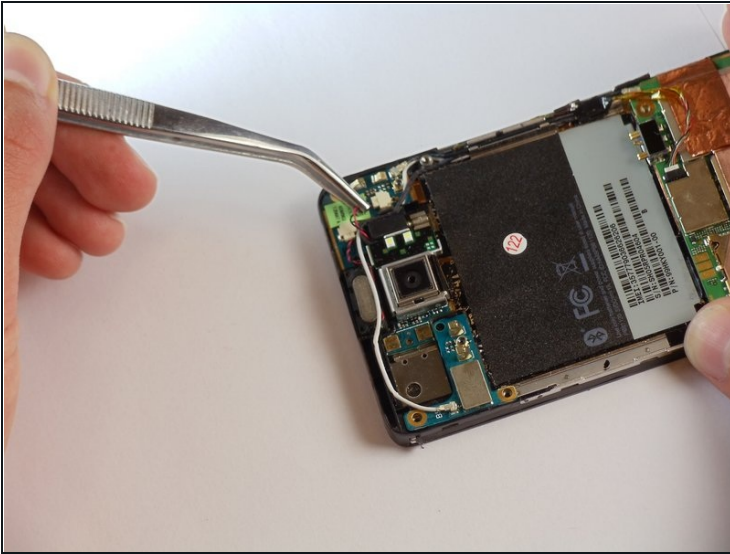

- Set the phone down on its screen.
- Using [tweezers](#), unplug the small vibrator connector from its socket on the motherboard.

## Step 6

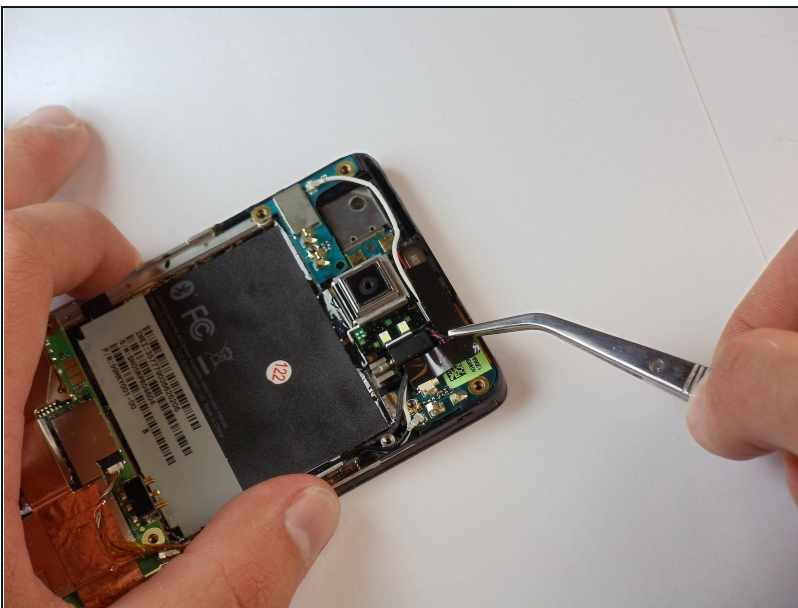

- Pull the vibrator motor from the phone.

---

To reassemble your device, follow these instructions in reverse order.

