



Dymo LabelManager 160 Batteries Replacement

This guide provides steps to replace the batteries of your Dymo LabelManager 160.

Written By: William Ross Herring



INTRODUCTION

If your Dymo LabelManager 160 does not power on, you may need to replace the batteries. This guide provides the requisite instructions.



PARTS:

- [AAA Battery](#) (6)
-

Step 1 — Batteries



- Place the device face-down to access the battery compartment.

Step 2



- Remove the compartment cover to reveal the batteries. Remove the 6 old batteries.

Your device is now fully charged. Enjoy!