



ArmorAll AA255 Power Cord Replacement

Replace your damaged power cord to restore the safety and function of your vacuum.

Written By: Abel Manring



INTRODUCTION

Unplug the vacuum before repair. The cord is easily disconnected and replaced once the vacuum is disassembled adequately.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [T20 Torx Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Lower Motor Housing



- Remove the orange main housing unit from the vacuum bucket by pulling outward on the handle tabs while lifting upward as shown.

Step 2



- Remove the five 15mm PH2 screws.

Step 3



- Remove the 15 mm T20 screw. This screw is located nearest the power cord.

Step 4



- Gently separate the upper and lower sections of the main housing.

Step 5 — Power Cord




- Pull the black wire from the power cord out of the switch.
- ⓘ There are no clips or tabs that hold this wire in place. Just pull strongly to remove it.
- ⓘ Don't remove both black wires. Only the black wire that comes from the power cord itself needs to be removed. The one going to the motor can be left alone.

Step 6



- Remove the five 15mm screws from the plastic motor cover and power cord clamp using a PH2 screwdriver.

Step 7

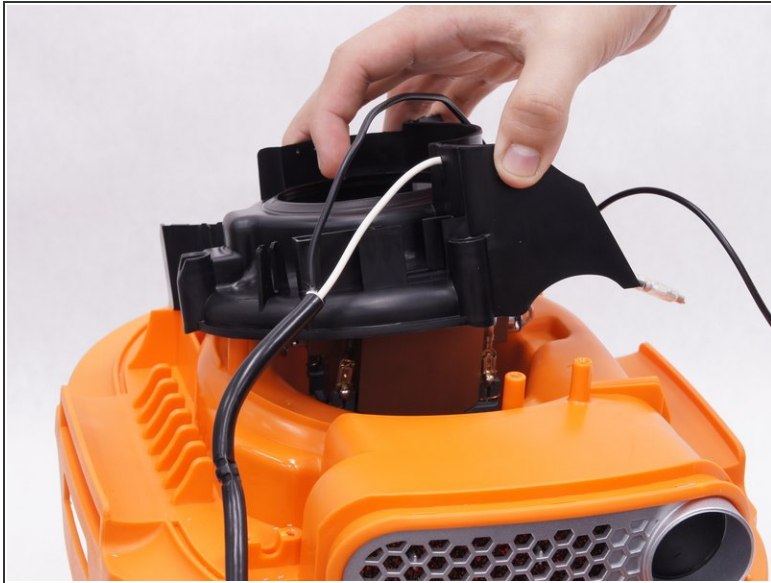


- Remove the plastic motor cover.
- ⓘ Be sure to loosen the white wire from the notch in the plastic motor cover by pulling it upwards.

Step 8



- Detach the white wire from the motor by pulling upwards on the wire as you depress the small metal tab on the connector with a nylon spudger.

 When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.

To reassemble your device, follow these instructions in reverse order.