



Nerf N-Strike Elite Retaliator Case Disassembly

This guide will demonstrate how to disassemble the Nerf N-Strike Elite Retaliator in order to access inner components.

Written By: ericharman



INTRODUCTION

Moving components in your blaster can be accessed by removing the outer casing. This guide shows how to access these inner components.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Case Disassembly



- While holding the blaster, rotate the barrel assembly in the counter-clockwise direction and pull away from the blaster.

Step 2




- Remove the stock of the blaster by pushing the orange tabs downward while pulling the stock away from the blaster.

Step 3



- Remove the magazine from the blaster by forcing the sliding mechanism backwards, pushing the orange tabs downward, and pulling the magazine away.

Step 4

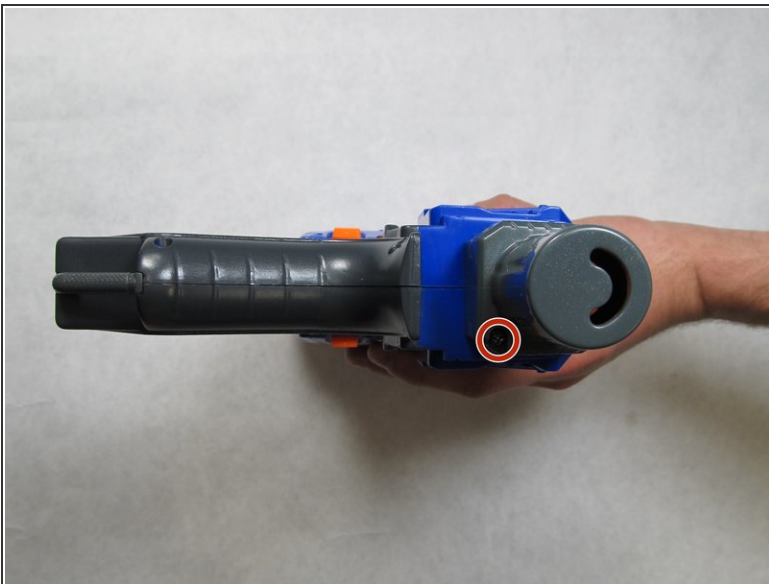

- Remove the stock attachment point by removing the two 8mm Phillips head screws.

Step 5



- Remove the eleven 8mm and two 10mm Phillips head screws from the left side of the blaster, and carefully remove the outer casing.
- ⓘ Two of the screws must be removed with the sliding mechanism in the forward position. Another two must be removed with the sliding mechanism in the back position.
- ⚠ There are several springs that may become displaced during this procedure. Proceed with the utmost caution.