



# Nerf N-Strike Elite Retaliator Barrel Replacement

This guide shows how to disassemble the blaster to replace or service the barrel.

Written By: ericharman



---

## INTRODUCTION

A damaged or obstructed barrel can greatly hinder your blaster's performance. Follow the procedure to clean or replace the barrel.

Modifying your blaster is not advised and may void the manufacturer's warranty in certain states.

This blaster is equipped with a rifled barrel for maximum performance.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Remove Barrel




- While holding the blaster, rotate the barrel assembly in the counter-clockwise direction and pull away from the blaster.

## Step 2 — Remove Grip



- Slide the hand grip assembly toward the end of the barrel and off the barrel assembly.
- ⓘ This may require more force than anticipated.

### Step 3 — Remove Barrel Cap

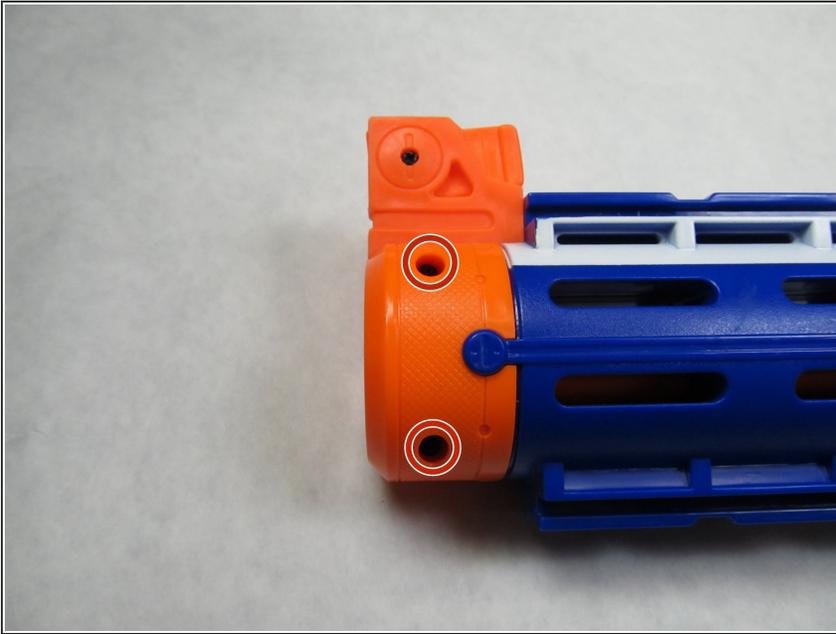

- Disassemble the orange barrel cap by removing two 8mm Phillips screws.

### Step 4 — Disassemble Barrel Assembly



- Disassemble the barrel assembly by removing four 8mm Phillips screws from the blue barrel housing.
- ⚠ There are springs that may become displaced when the barrel housing is removed. Proceed with caution.

## Step 5 — Replace Barrel



- Remove the orange barrel from the assembly.

To reassemble your device, follow these instructions in reverse order.