



Nerf N-Strike Elite Retaliator Air Chamber Assembly Replacement

Replace the air chamber assembly of your Nerf N-Strike Elite Retaliator.

Written By: ericharman



INTRODUCTION

A worn plunging mechanism can limit your effective firing range. Nobody has time for that. Use this guide to disassemble the blaster and replace the plunger and air chamber.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Case Disassembly



- While holding the blaster, rotate the barrel assembly in the counter-clockwise direction and pull away from the blaster.

Step 2




- Remove the stock of the blaster by pushing the orange tabs downward while pulling the stock away from the blaster.

Step 3



- Remove the magazine from the blaster by forcing the sliding mechanism backwards, pushing the orange tabs downward, and pulling the magazine away.

Step 4

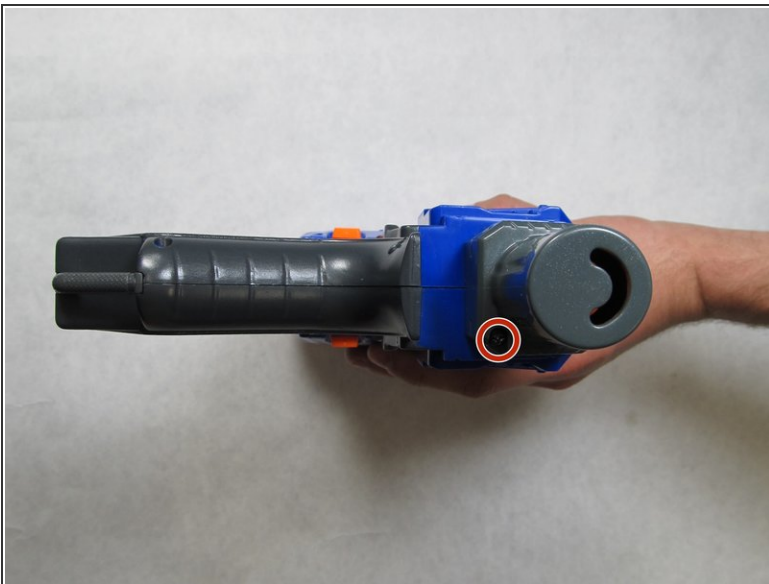

- Remove the stock attachment point by removing the two 8mm Phillips head screws.


Step 5



- Remove the eleven 8mm and two 10mm Phillips head screws from the left side of the blaster, and carefully remove the outer casing.
- ⓘ Two of the screws must be removed with the sliding mechanism in the forward position. Another two must be removed with the sliding mechanism in the back position.
- ⚠ There are several springs that may become displaced during this procedure. Proceed with the utmost caution.

Step 6 — Air Chamber



 The firing spring may be energized. If so, carefully release and spring pressure before proceeding.

- While holding down the white air chamber, pull the firing spring backwards to remove it from the blaster.

Step 7



- Slide the white air chamber forward and remove the white alignment bracket.

Step 8



- Remove white air chamber by depressing the orange trigger apparatus and pulling backwards off of the barrel.

To reassemble your device, follow these instructions in reverse order.