



Grace Digital Mondo Selection Keys Replacement

Replace or reposition the selection keys on the Grace Digital Mondo.

Written By: Freddy Yaniz



INTRODUCTION

One of the easiest replacements for the device. A simple removal of the selection keys with a plastic spudger.

TOOLS:

- [Spudger](#) (1)
-

Step 1 — Selection Keys



- Remove the selection keys from the top using a plastic spudger.

To reassemble your device, follow these instructions in reverse order.