



# Hamilton Beach 70730 Bowl Replacement

This is the guide to replace the bowl of your Hamilton Beach Bowl Scraper Food Processor.

Written By: Mack Bernard



## INTRODUCTION


The bowl is an important piece of the food processor. Without it the food cannot be chopped or sliced. If the bowl is cracked or chipped it must be replaced.

## Step 1 — Bowl



- Unscrew the cover by turning it counterclockwise.

## Step 2

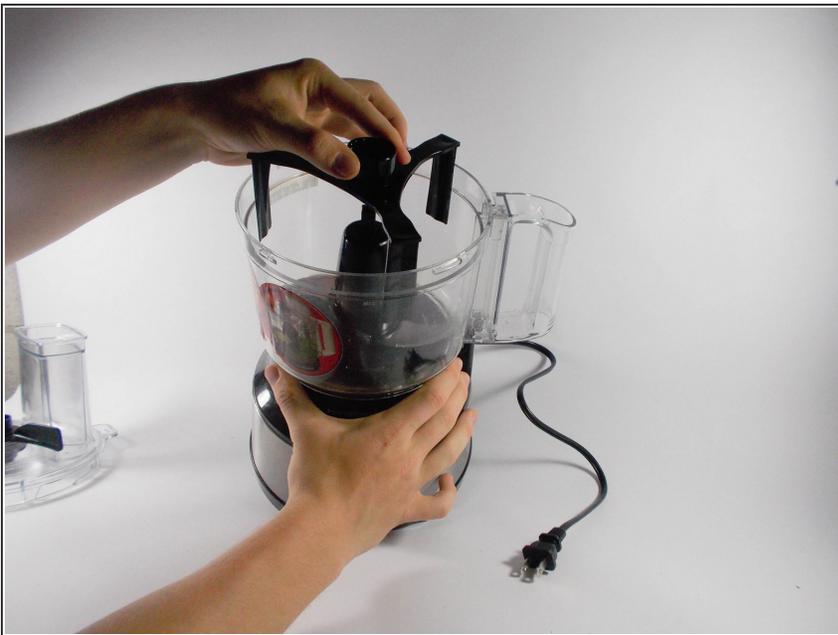

- Grab the scraper by the midsection to remove.

### Step 3



- Carefully remove the blades by lifting them off of the blade shaft.

### Step 4



- Rotate the bowl counterclockwise to release it from the base.

## Step 5



- ⓘ Make sure there is no food or grime along the outside of the bowl or the base.

To reassemble your device, follow these instructions in reverse order.