


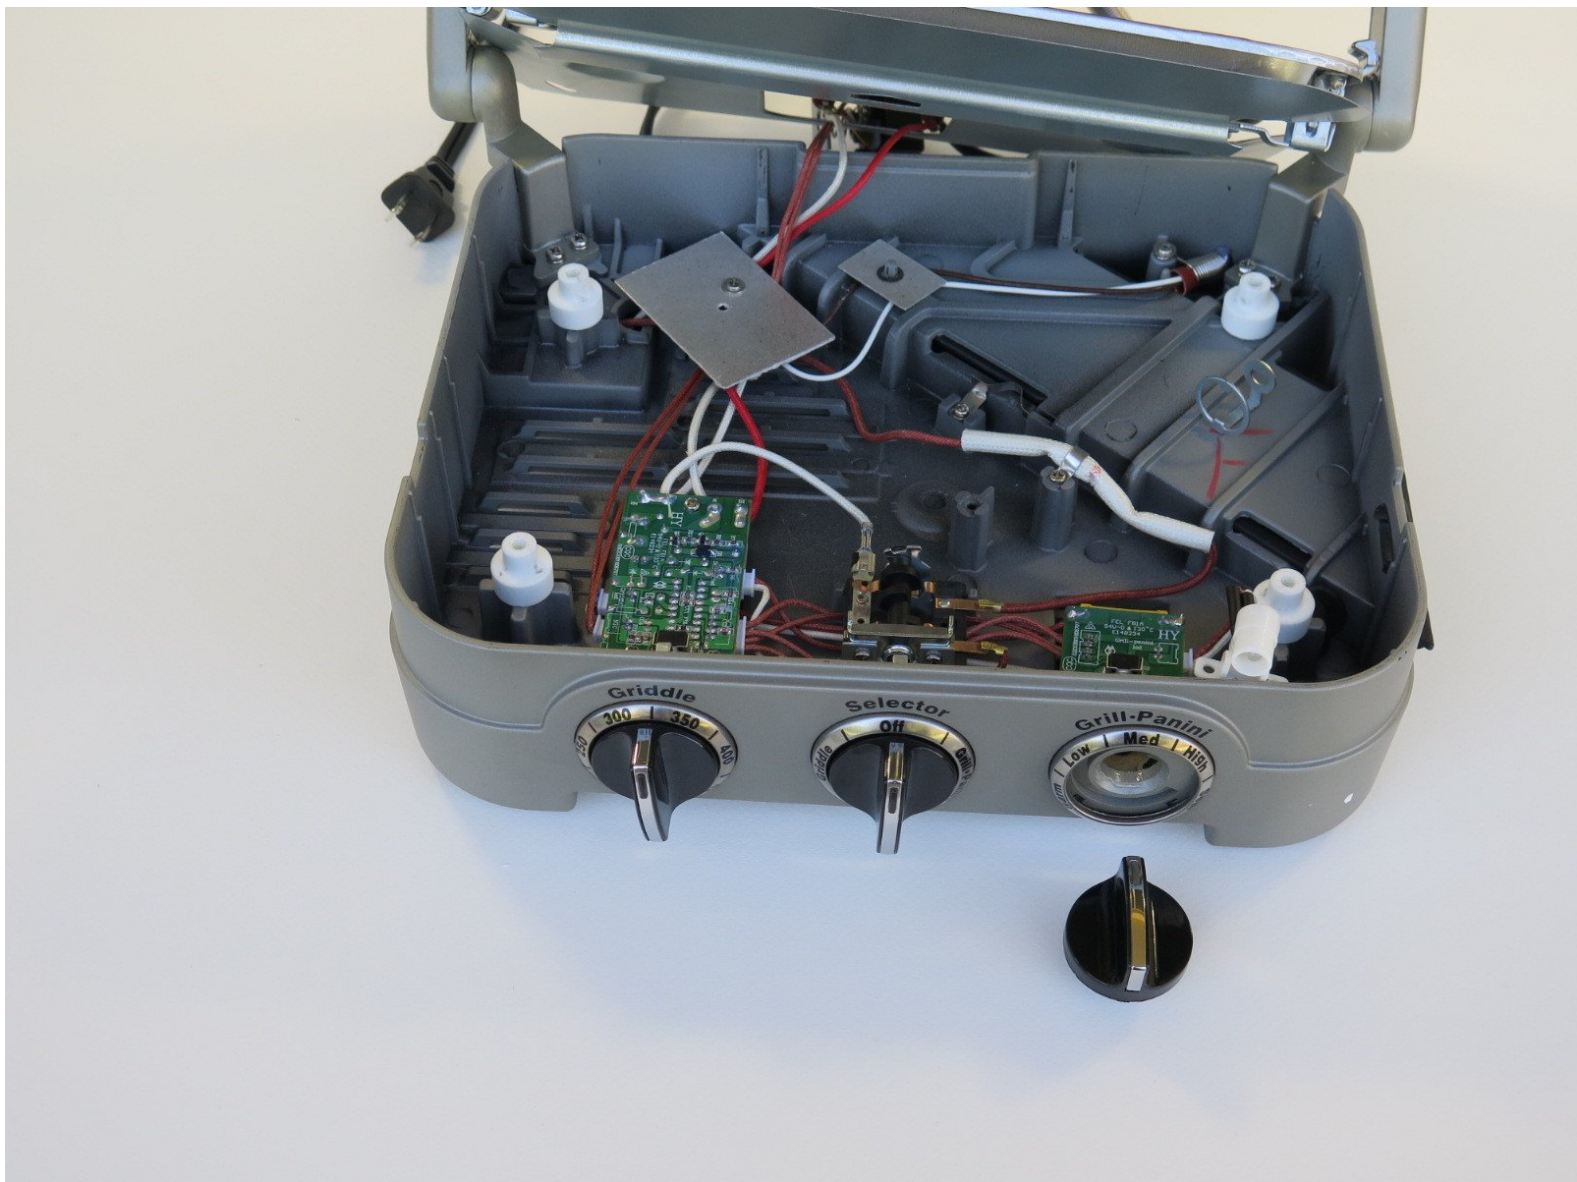

# Cuisinart Griddler GR- 4N Knobs Replacement

This guide will help you replace the knobs on your Cuisinart Griddler GR- 4N.

Written By: Kayla Londono



---

## INTRODUCTION

This repair/ replacement may be needed if the lettering on the knobs have worn off or if the knobs have been snapped off.



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-


## Step 1 — Cooking Surfaces



 Ensure device is turned unplugged, cooled down and clean before attempting any replacements.

- Remove cooking plates by pushing in the tabs on each side of the plate at the same time.


## Step 2

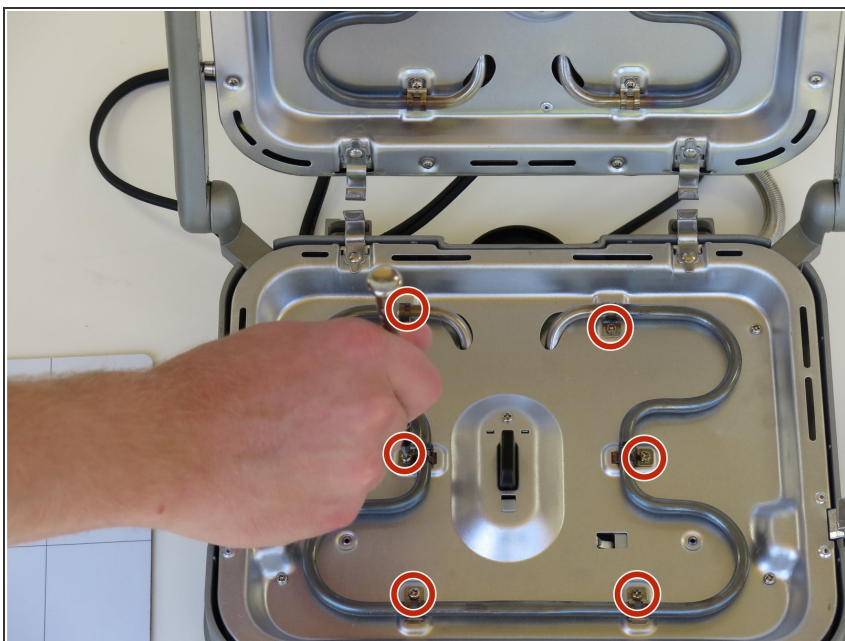

- Remove the six 5.5mm Phillips #2 screws that secure the bottom heating coil to the device.




### Step 3

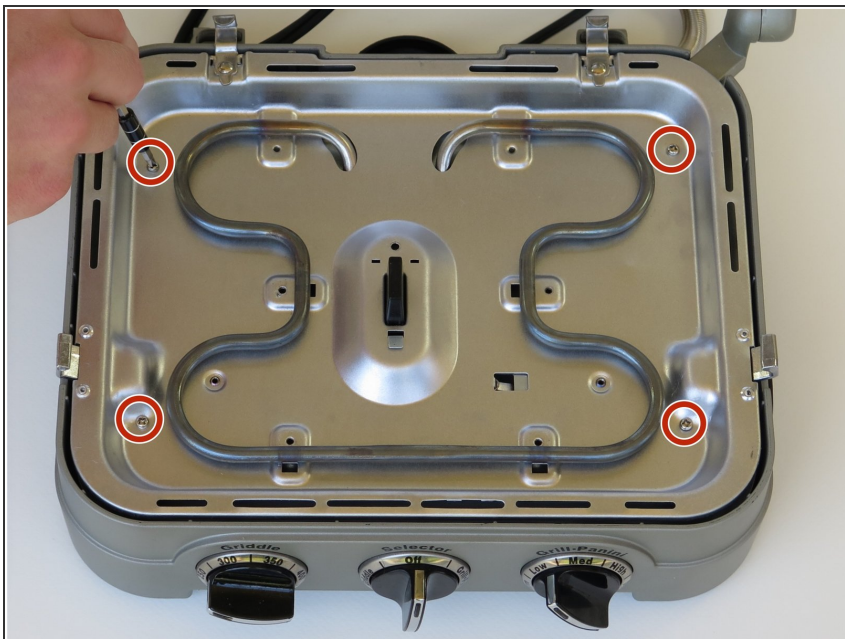



- Remove the four 30 mm Phillips #2 screws that secure the bottom heating apparatus.

### Step 4

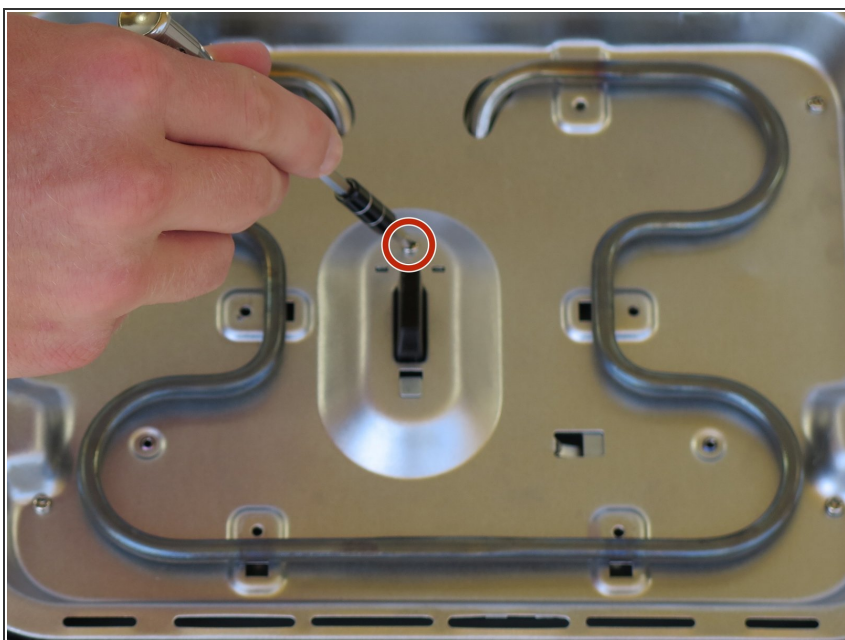


- Remove the single 5.5 mm Phillips #2 screw next to center black button.
- After removing the center screw the metal plate should be free to remove.

## Step 5

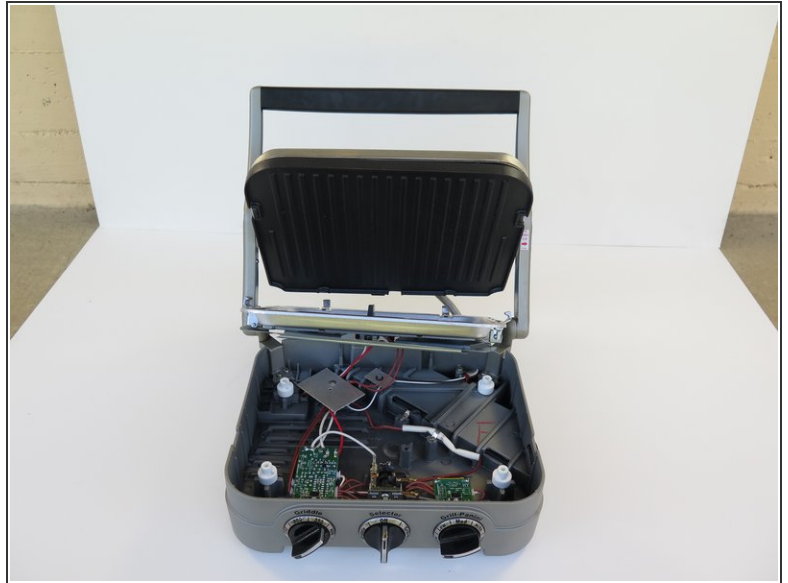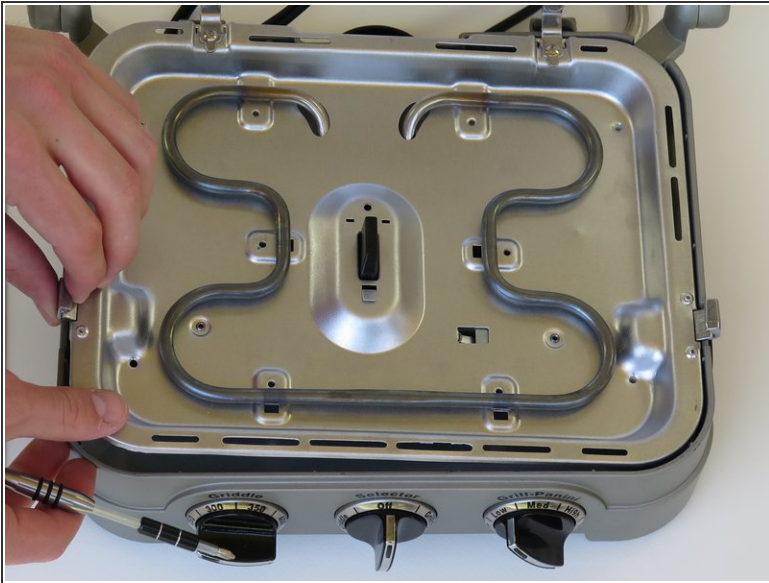


- Lift the bottom heating apparatus up and remove large black center piece by pushing down on black button while sliding out.
- Realign all surface and put device back together making sure all parts are lined up and heating surfaces are making contact.
- The aligned parts will allow the cooking surfaces to work properly.

## Step 6 — Cuisinart Griddler GR- 4N Disassembly

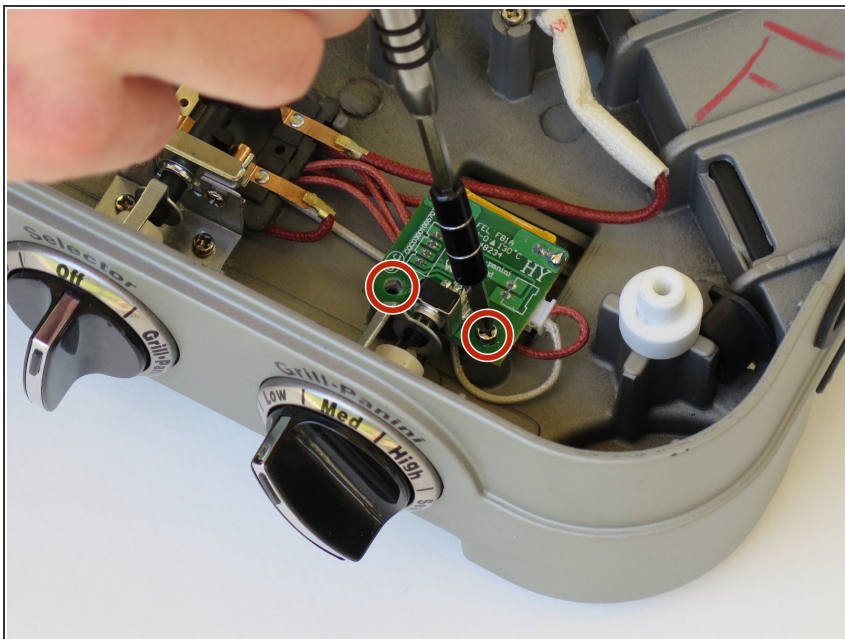

- Remove the two 6 mm Phillips #2 screws that secure the knob circuit board.
- Move the circuit board to the side so it is out of the way.


## Step 7

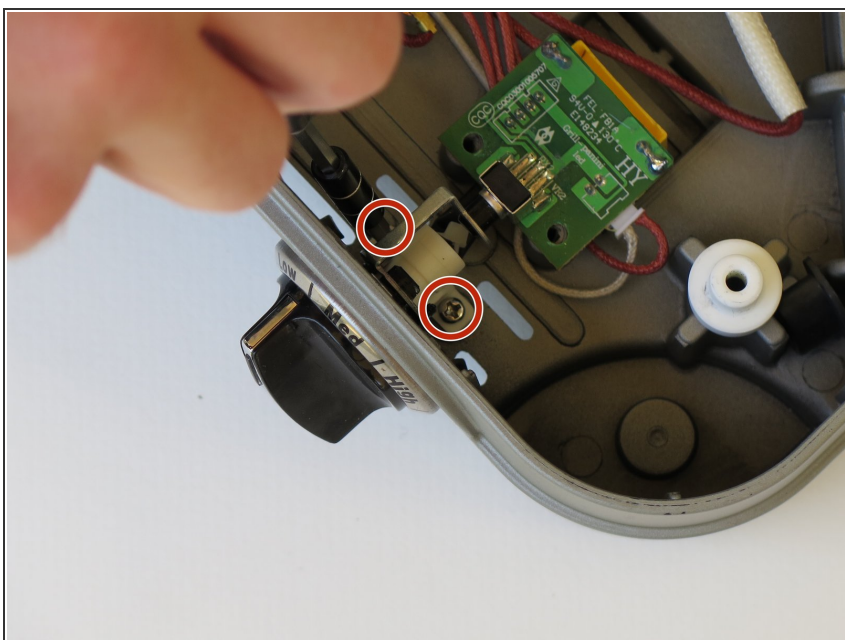

- Remove the two 6 mm Phillips #2 screws that secure the white plastic LED holder.




## Step 8 — Knobs

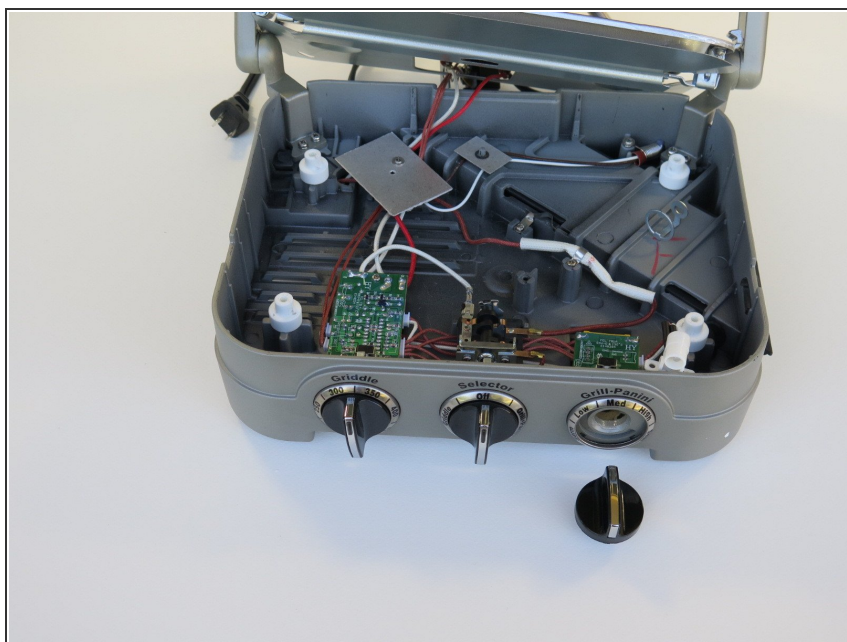

- Pinch back plastic arms on knob while pulling out the knob.

## Step 9

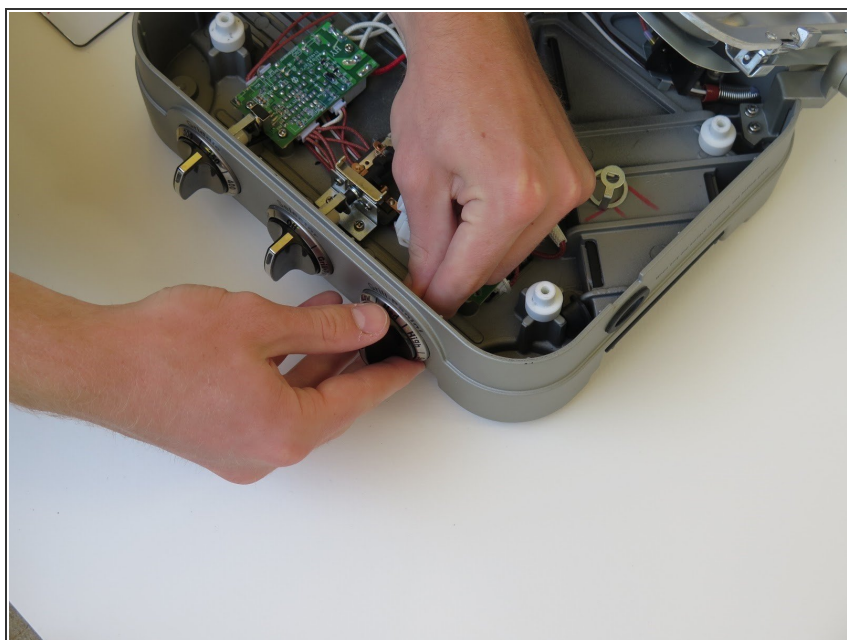

- Pop the new knob back into the hole and the repair is complete.

To reassemble your device, follow these instructions in reverse order.