




Nikon Coolpix L840 Lanyard Ring Replacement

Is your camera's lanyard ring broken? Here's a replacement guide.

Written By: Abraham Lozano

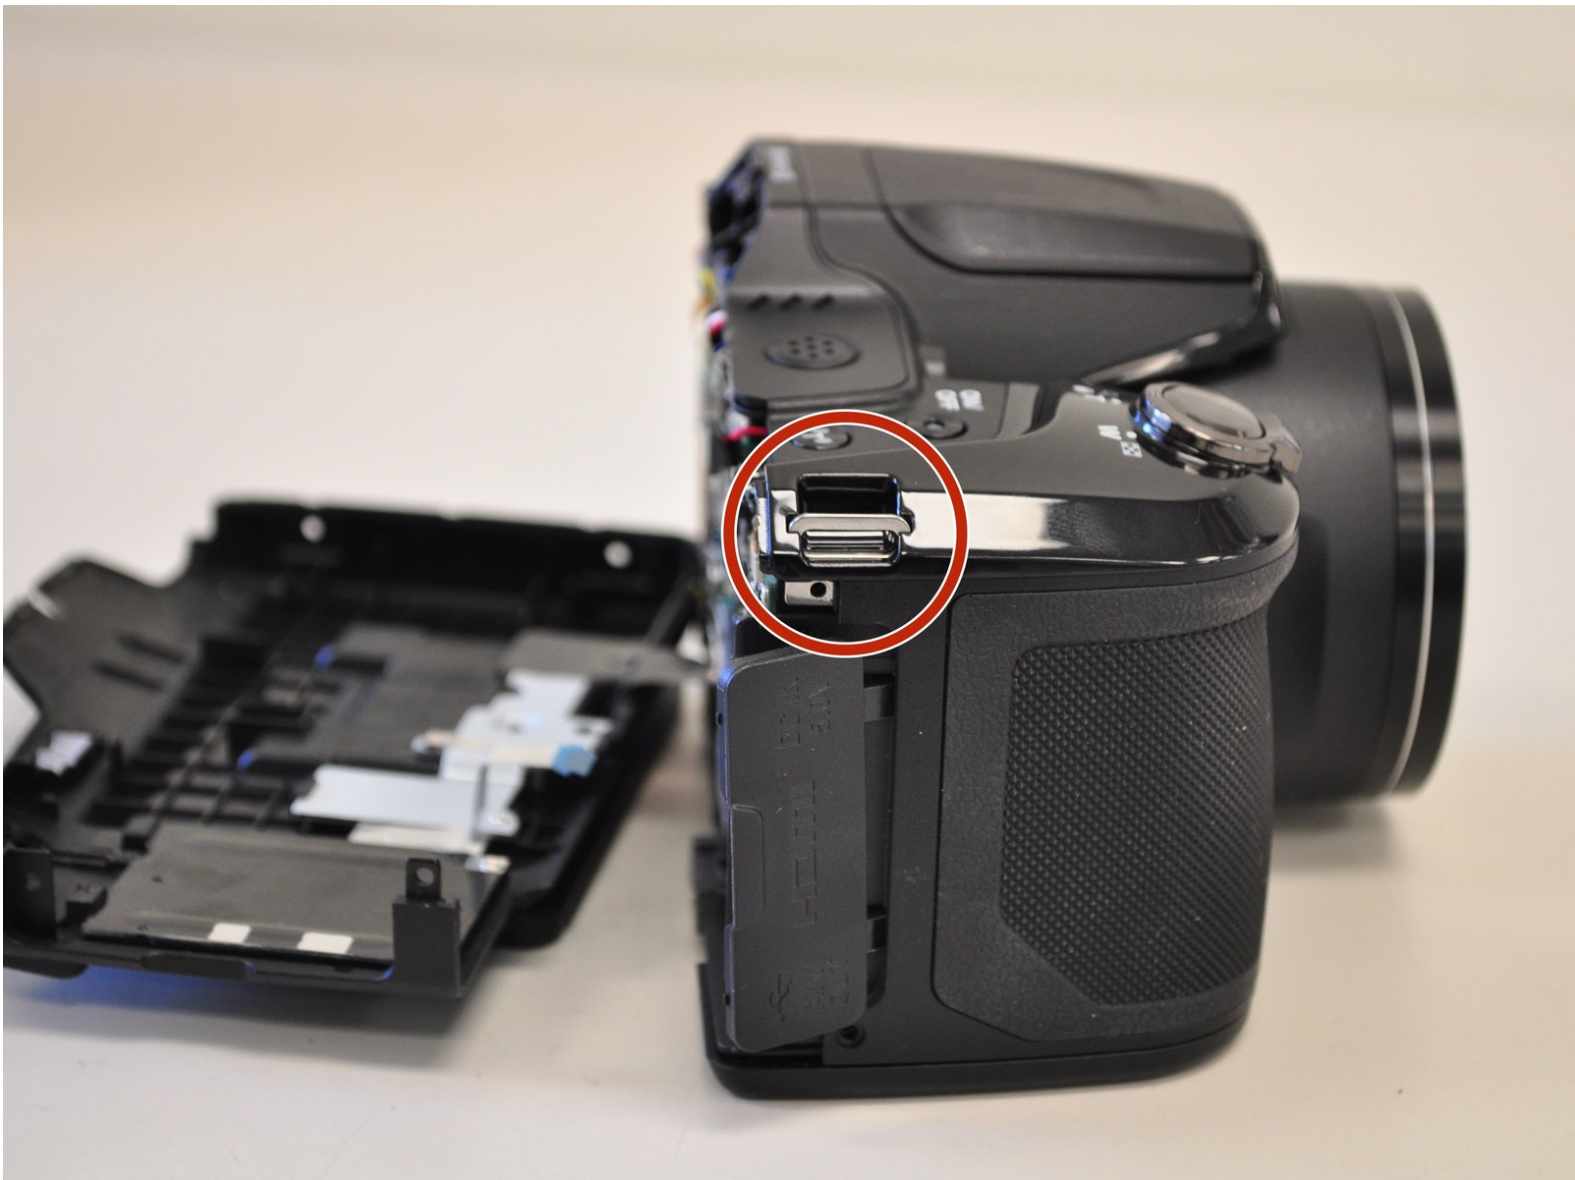

INTRODUCTION


This guide details the steps required to replace the lanyard ring.



TOOLS:

- [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Metal Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Motherboard

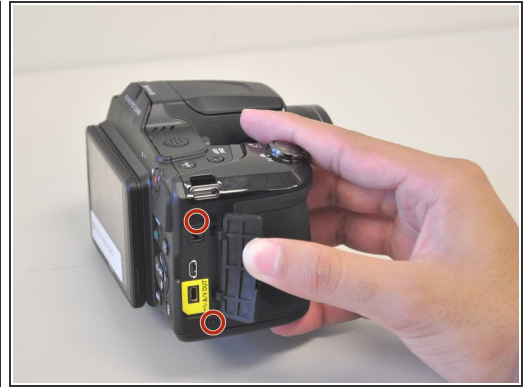

- Unscrew all eight black, 4mm screws with a Philips 000. (The top-most screw shown in the third image can be accessed by lifting the cover flap off.)



Step 2



- Pry case open with a metal spludger by slipping the spludger between the back and front case of the camera and wiggling the spludger forwards and backwards.


⚠ Be careful not to damage the inner components of the camera when slipping the spludger into the camera.

Step 3

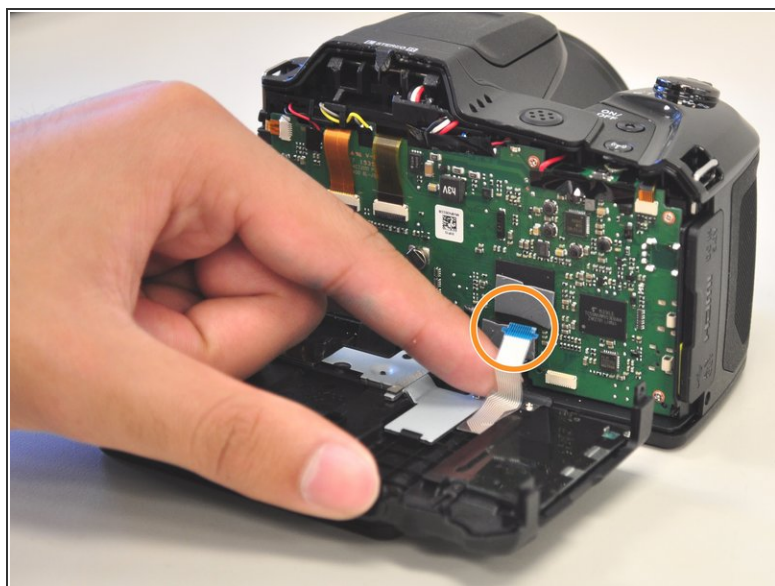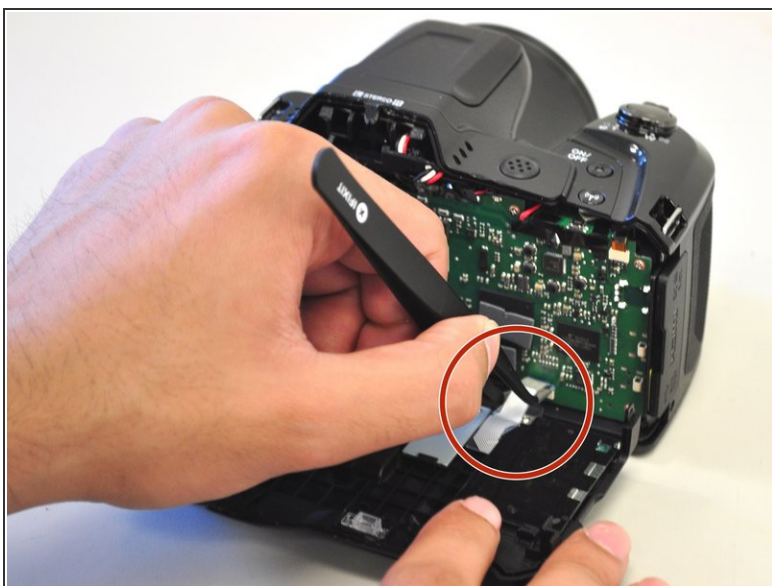



- Carefully unhook the silver strip with tweezers. Get a grasp of the sides of the silver strip with the tweezers, and pull upwards and out.
- The strip may also be identified by its blue tip, which becomes more visible once pulled out.

Step 4 — Lanyard Ring

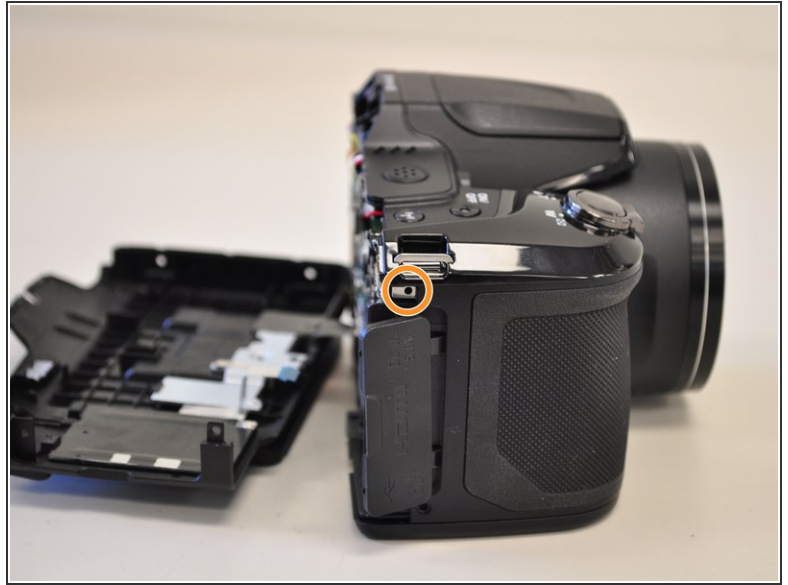

- Identify lanyard ring.
- Unscrew the 4 mm black screw with a Philips 000.

Step 5

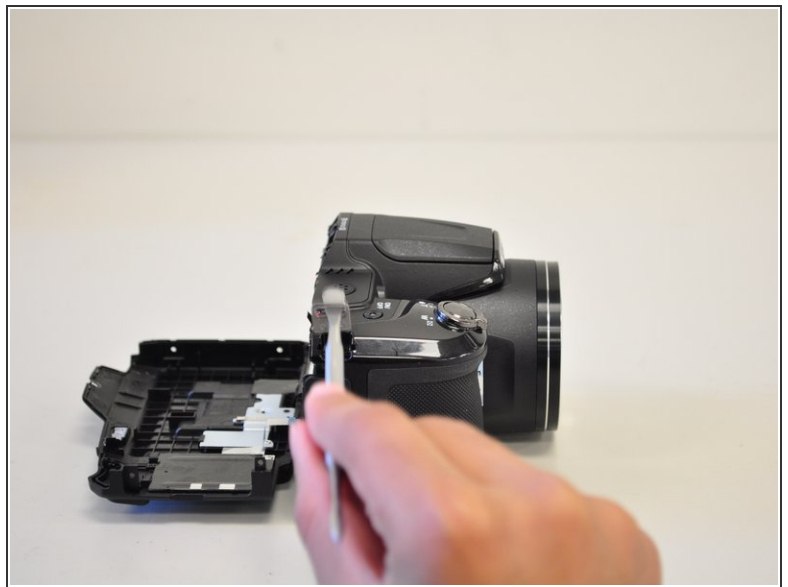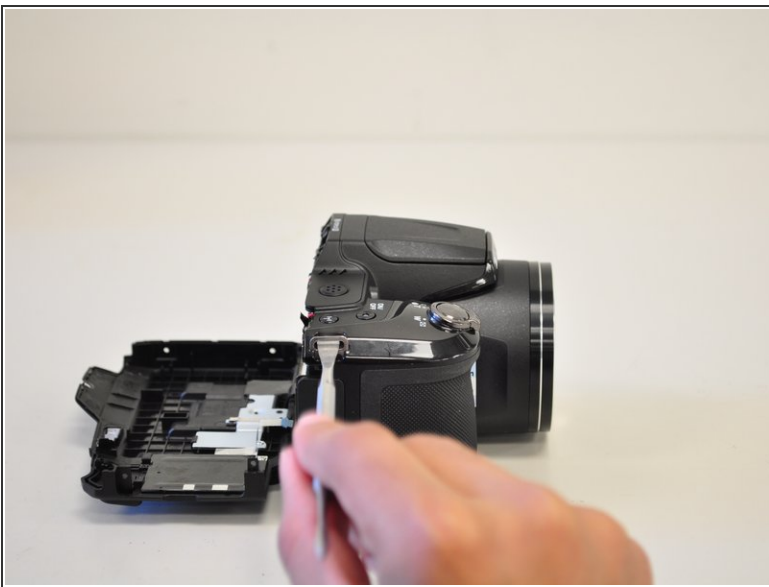

- Insert a metal spludger (or another sturdy tool with a thin tip) into the hole of the lanyard ring and lift the ring upwards and out of the camera.

To reassemble your device, follow these instructions in reverse order.