



Nerf Mega Magnus Spring Replacement

How to replace a Nerf Mega Magnus spring.

Written By: Averi Fletcher



 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Spring



- Start by removing the (4) exterior Phillips screws from the shell of the gun with a #1 Phillips Screwdriver.

Step 2



- Pulling upward from the rest of the shell, carefully remove the half of the slide facing you.

Step 3



- On the same side, remove all (9) screws from the body of the blaster as shown.

Step 4




- Lift up on the top half of the shell with deliberate force. This should reveal the internals.

Step 5



- Remove the screws from the trigger mechanism and lift it upward

Step 6

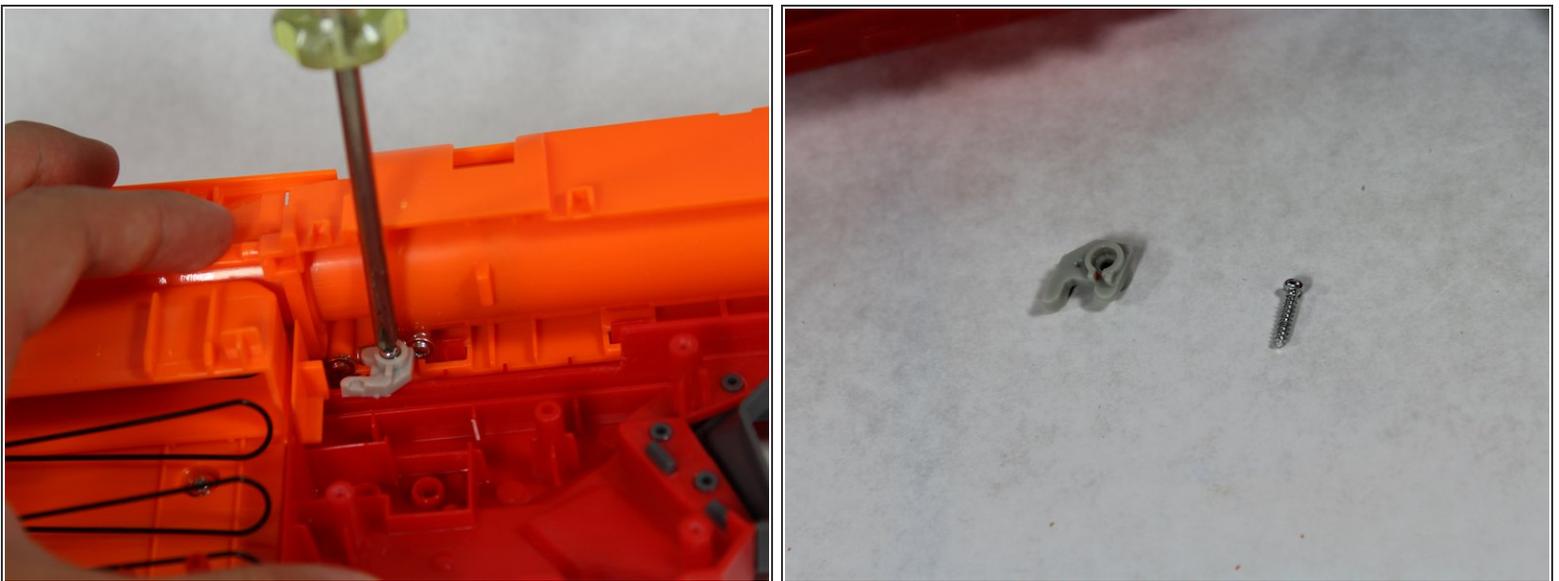


- Locate the small grey piece under the plunger tube and remove the screw.

Step 7




- Locate the screws on the return spring. Using a counterclockwise rotation, remove both of the screws.

Step 8

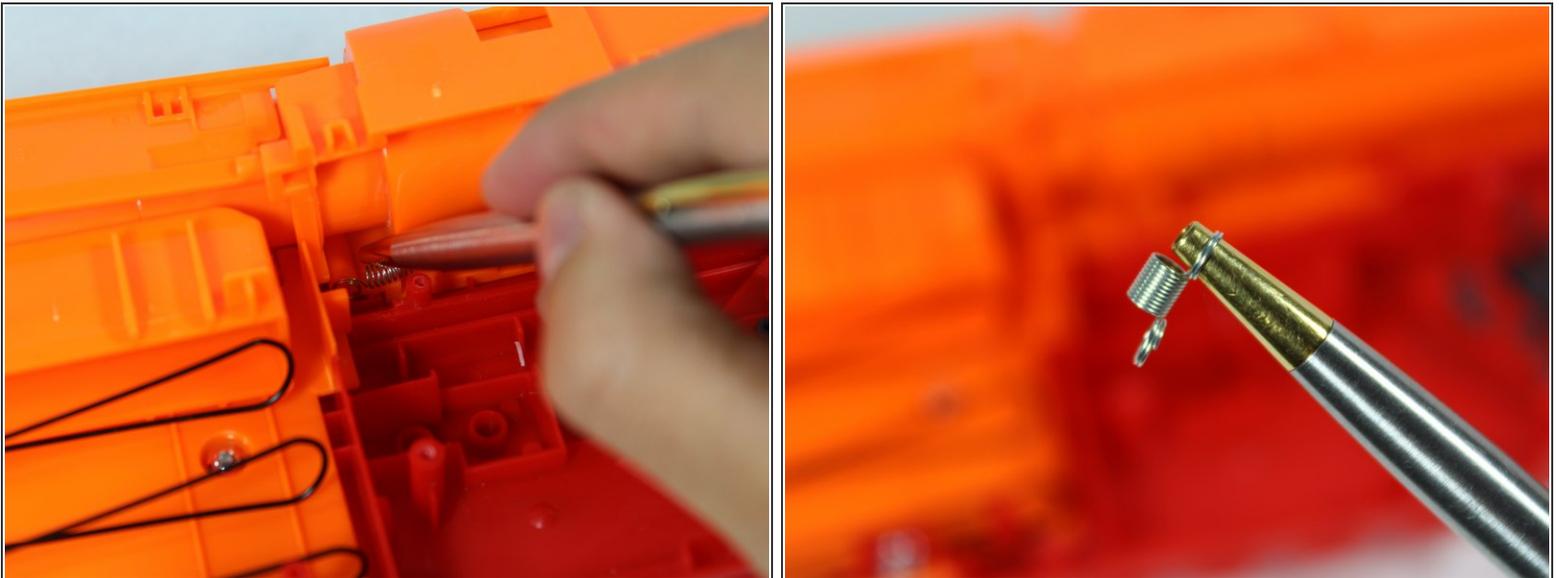


- Using a small tool, carefully remove the spring from its pegs.

Step 9

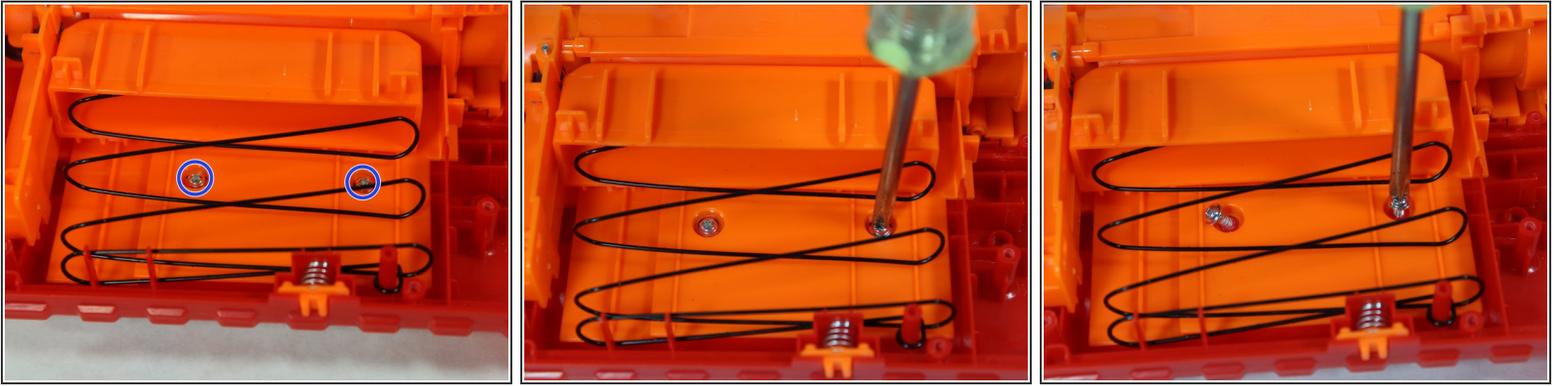


- Locate the screws behind the dart pusher mechanism. Carefully remove each screw.

Step 10

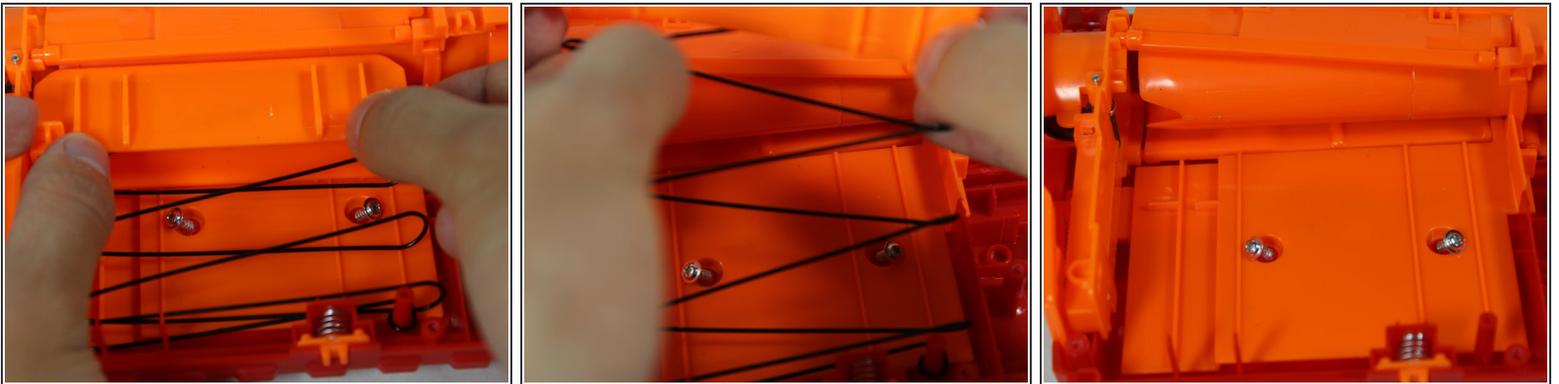

- Pull upwards on the dart pusher and spring to remove them.

Step 11

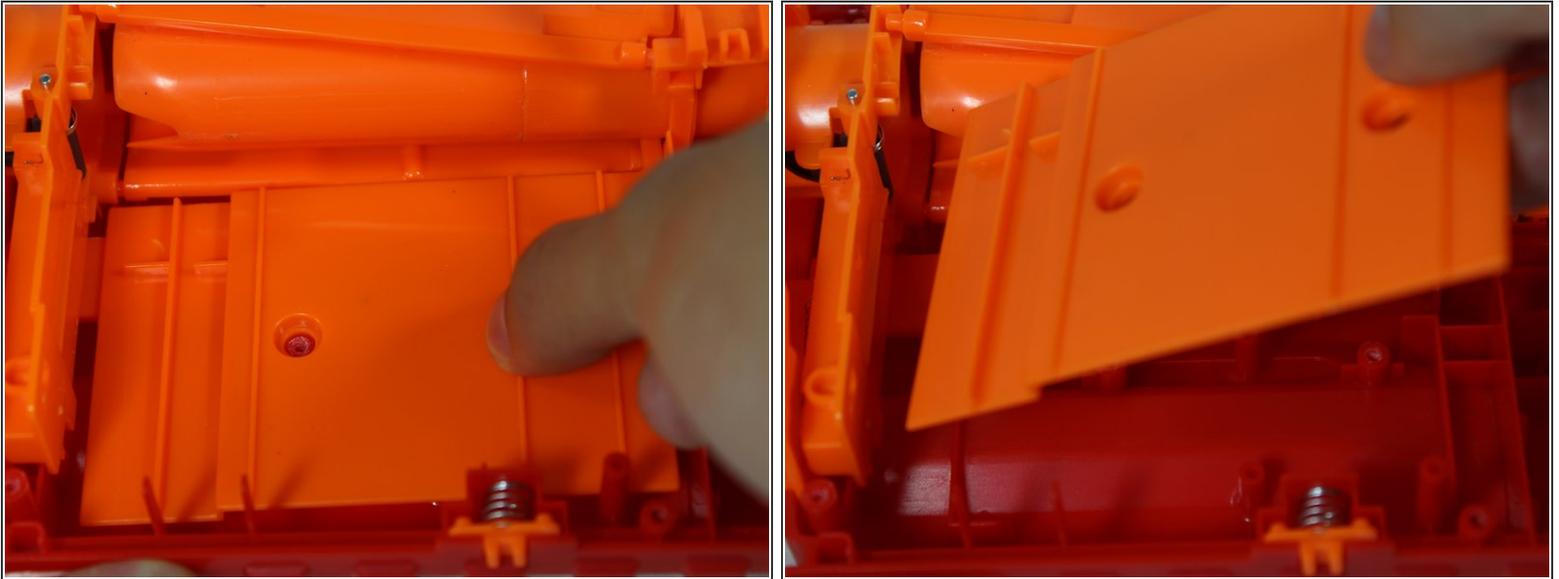


- Lift up on the magazine plate in order to remove it.

Step 12




- Pull upward on the dart lip and it will lift off.

Step 13

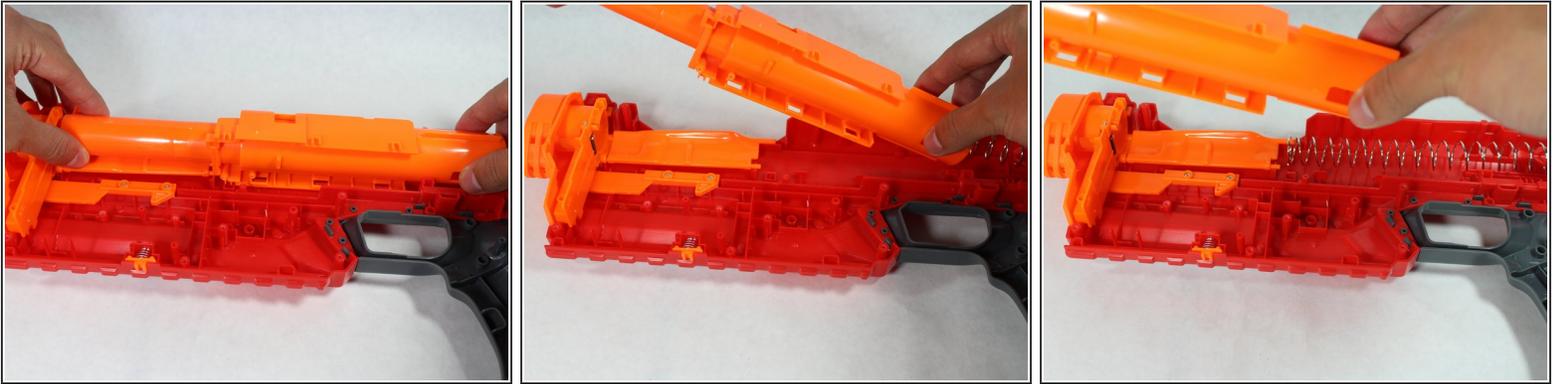

- Lift the left side of the plunger tube from its peg and the rest will slide off the spring peg.

Step 14

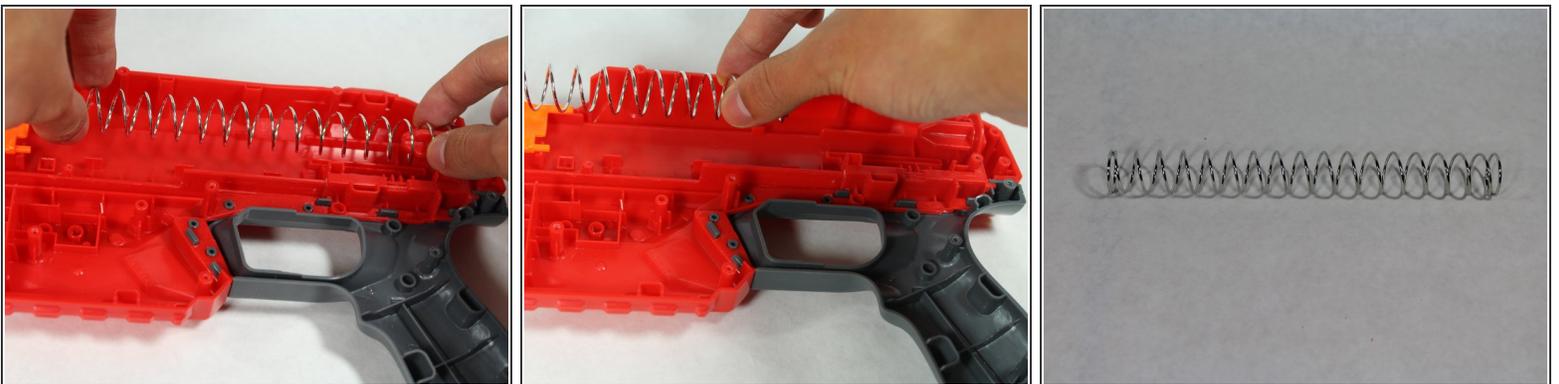

- Slide the spring off its peg. If the spring is damaged, replace it.

To reassemble your device, follow these instructions in reverse order.