



Panasonic Lumix DMC-FZ35 LCD Replacement

Step by step guide to replacing your damaged LCD Display Screen.

Written By: Sales Cameraparts4you



INTRODUCTION

Step by step guide to replacing your damaged LCD Display Screen.



TOOLS:

- [Phillips PH000 Screwdriver](#) (1)
- [Small Plastic Spudger](#) (1)



PARTS:

- [Panasonic Lumix DMC-FZ35 LCD Display Screen VYQ5034](#) (1)

Step 1 — Clear compartment



- Remove the battery and memory card from the unit.

Step 2 — Remove side screws



- Remove 1 screw (0.4mm) from left side of unit
- Remove 1 screw (0.4mm) from right side of unit near Strap bar.
- Remove 1 screw (0.6mm) from right side of unit next to usb door

Step 3 — Remove Screws from Bottom



- Remove 3 Screws from bottom of unit
 - Remove 2 (0.6mm) screws next to door
 - Remove 1 (0.4mm) screw opposite of door


Step 4 — Remove top screw



- Raise the Pop-Up flash by pushing the flash button.
- Remove the screw (0.6mm) from underneath the flash assembly.


Step 5 — Accessing the flex cables



 Please be careful. Do not lift the cover fully because it is still attached to the Main Board via flex cables.


- Lift the cover slightly as shown in picture # 1
- Tilt the back cover as shown in picture #2. Be careful because the flex cables are still attached.

Step 6 — Release the Flex cables

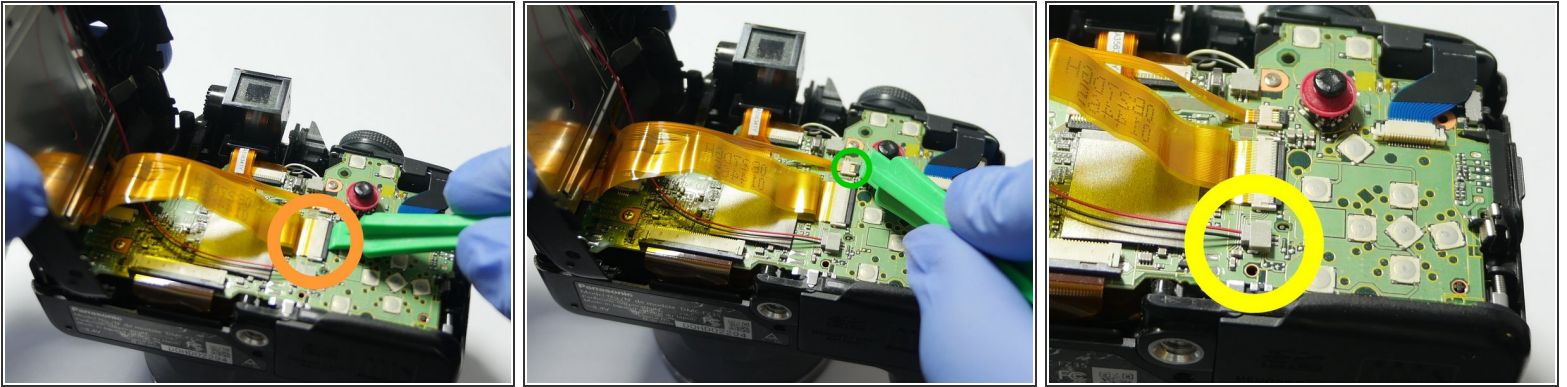




- Flip up LCD cable clamp with a spudger or other tool.
- Flip up backlite cable clamp with a spudger or other tool
- Removal of the mic wire is optional. My suggestion is to leave it attached. The mic can get damaged if you pull on the wire.

Step 7 — Remove the mic

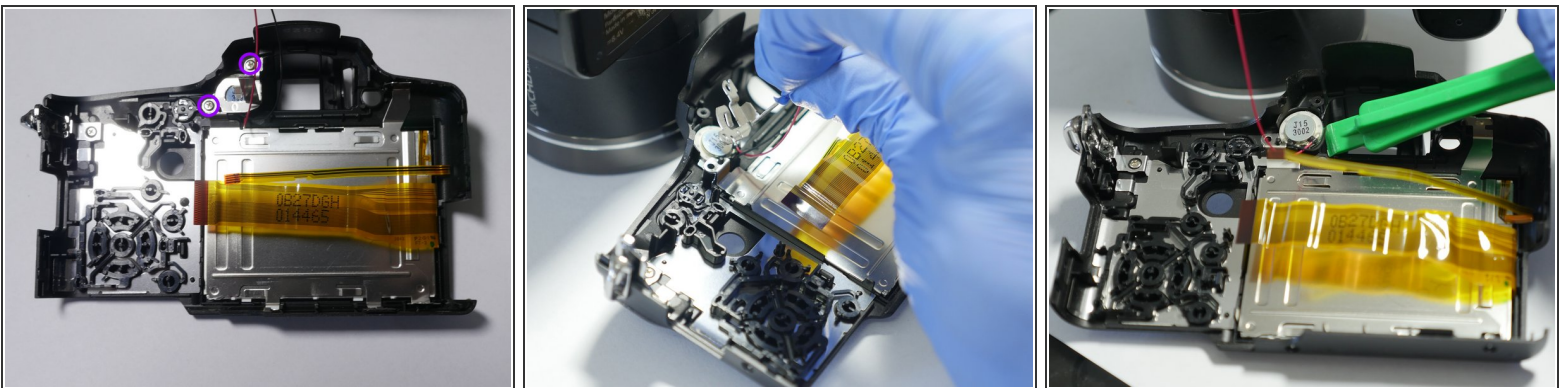

- Remove the 2 screws (0.4mm) that are holding the mic assembly
- Next step (shown in picture #2) remove the metal mic hold part.
- Next step (shown in picture #3) use a spudger to pry off the mic. Careful not to damage the wiring.

Step 8 — Remove the LCD

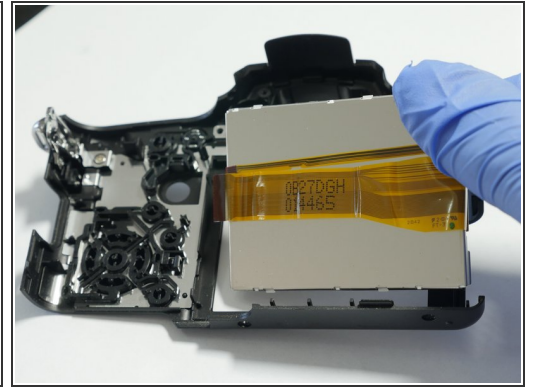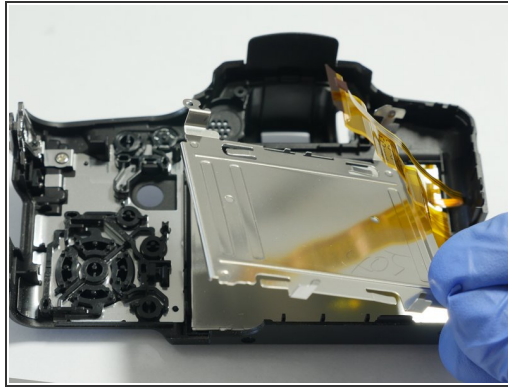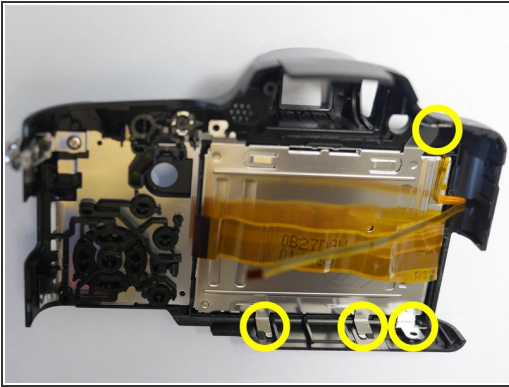

- Release the hold clips that hold the LCD retainer in place.
- Remove the LCD metal retainer plate as shown in picture #2
- Remove the LCD as shown in picture # 3

Step 9 — Swap out Old LCD



- Swap out your old LCD with the new one.
- If your backlite is ok you can buy only the LCD Display. But it is easier to purchase the LCD with the backlite attached. [Replacement LCD Display VYQ5034](#)

To reassemble your device, follow these instructions in reverse order.