



Written By: Ryan Kozak



---

## INTRODUCTION


Upgrade your RAM DIMM Module for more memory.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Outer Base Plate

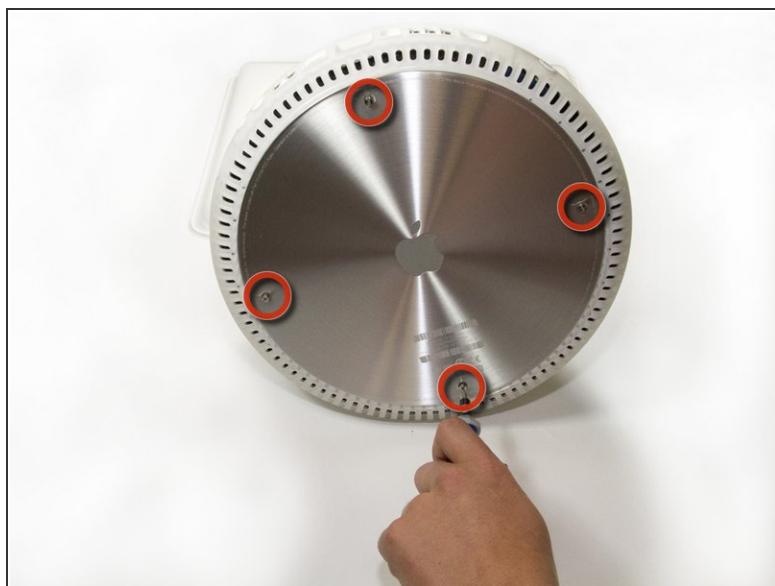


- ① Place the computer monitor face down on a safe, harmless surface.
- Using a Phillips #00 screw driver, remove the four 6.86 mm screws from the metal plate.

## Step 2



- Remove the metal plate from bottom of the iMac G4.
- ① The four screws do not completely separate from the metal plate.

## Step 3 — RAM DIMM

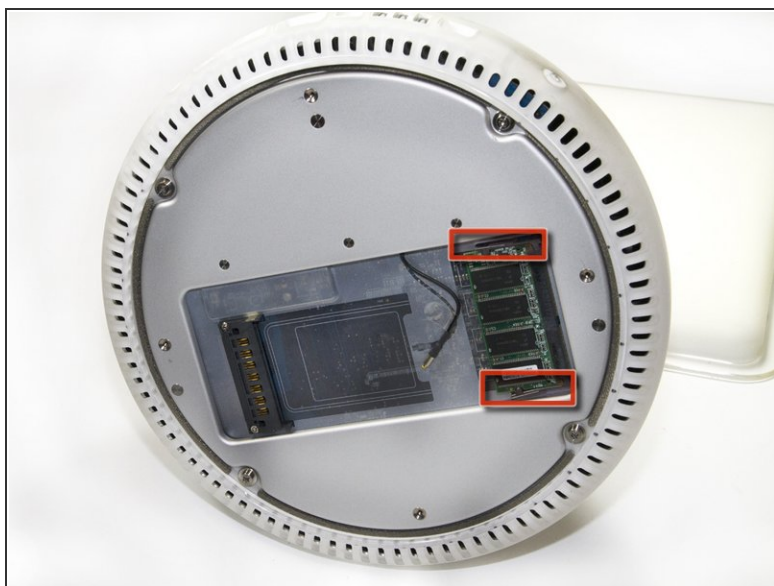

- Release the tabs on each side of the module by simultaneously pushing each tab away from the RAM.
- ⓘ These tabs lock the module in place and releasing them will cause the module to "pop" up.
- Remove the RAM module from the iMac.

To reassemble your device, follow these instructions in reverse order.