



Nikon Coolpix 995 Memory Card Replacement

Fixing or replacing parts of devices is always...

Written By: Cory Layman



INTRODUCTION

Fixing or replacing parts of devices is always needed to be detailed with enough information and clarification, especially electronics because of their sensitivity and size. This iFixit project will explain in detail how to replace the memory card of the Nikon Coolpix 995 step by step. With clarification of safety procedures and choosing the right tools.

Step 1 — Memory Card



- Set camera so the memory card compartment is facing you.
- Place thumb under cover latch where it says "card", then gently lift straight upwards.

Step 2



⚠ -Pull the memory card with your thumb gently .

Step 3



- ❗ Be sure your memory card is facing the right direction, then gently insert it into the memory card slot.
- After you properly reinsert the memory card, place your thumb on the top of the cover and gently press down until you hear and feel the cover click back into the closed position.

To reassemble your device, follow these instructions in reverse order.