



# Sony Handycam CCD-TR5 Viewfinder Replacement

This guide will assist you through the process of assembling and cleaning the lens of the viewfinder in your Sony Handycam.

Written By: Emma



---

## INTRODUCTION

This guide will assist you through the process of assembling and cleaning the lens of the viewfinder in your Sony Handycam.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Viewfinder



- Remove bottom screws.

## Step 2



- Remove side cover upper screws.




### Step 3




- Remove cassette side cover.

### Step 4

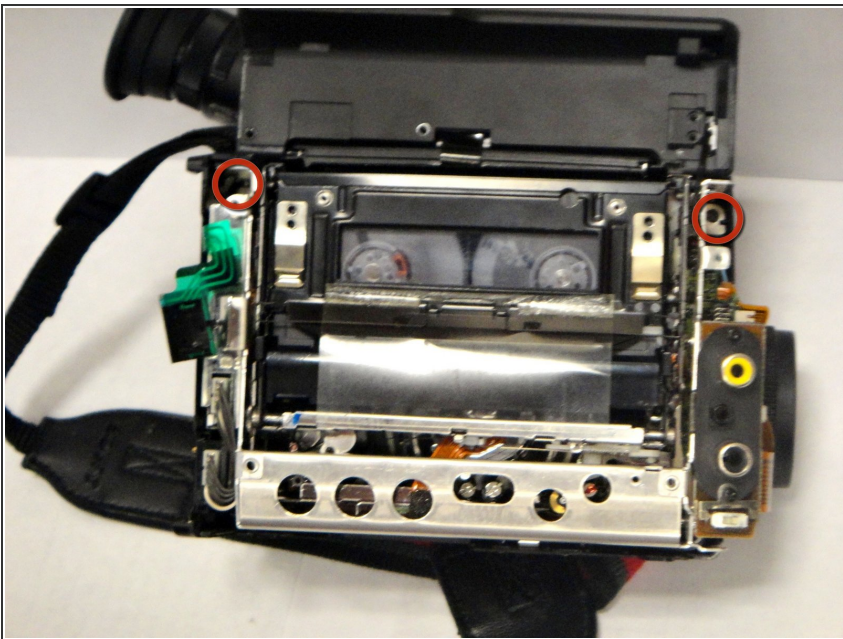


- Remove (2) rear screws on viewfinder side of cover.

## Step 5

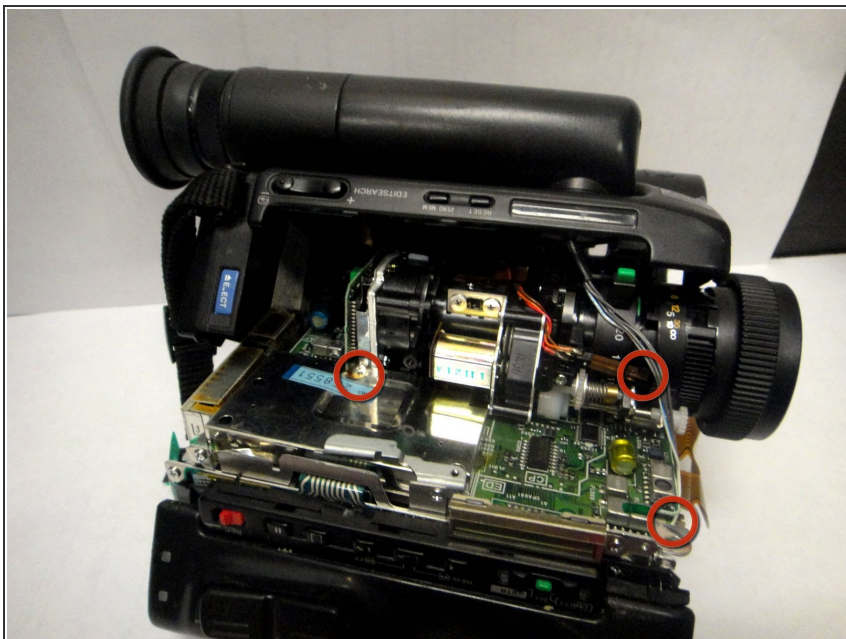

- Remove (3) electrical connectors in order to pull side cover away from camcorder to expose back side of viewfinder.

## Step 6

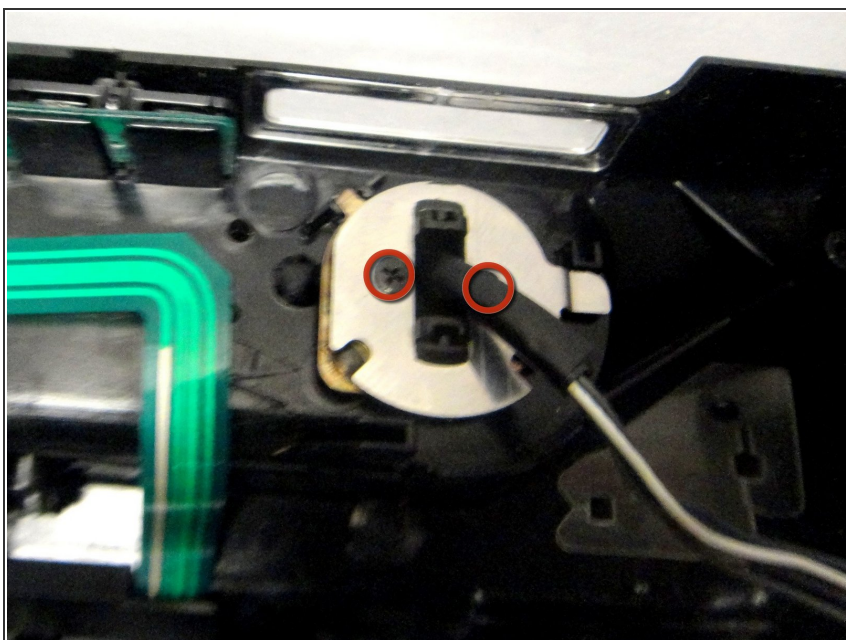

- Remove (2) screws from viewfinder mount and electrical connector, gently remove viewfinder unit from side cover.

## Step 7



- Your viewfinder is now detached from camcorder.

To reassemble your device, follow these instructions in reverse order.