



# Sony Cyber-Shot DSC-W830 Front and Back Panel Replacement

How to remove and replace the front and back panels of the camera.

Written By: Tong Tang



## INTRODUCTION

If you have broken the outer panels of your DSC-W830, do not worry. This guide will take you through the correct steps of remove both the front and back panels.

---

### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery




- Slide the lock at the bottom of the camera to "Open".
- ⓘ The door to the battery pack is spring loaded.

## Step 2

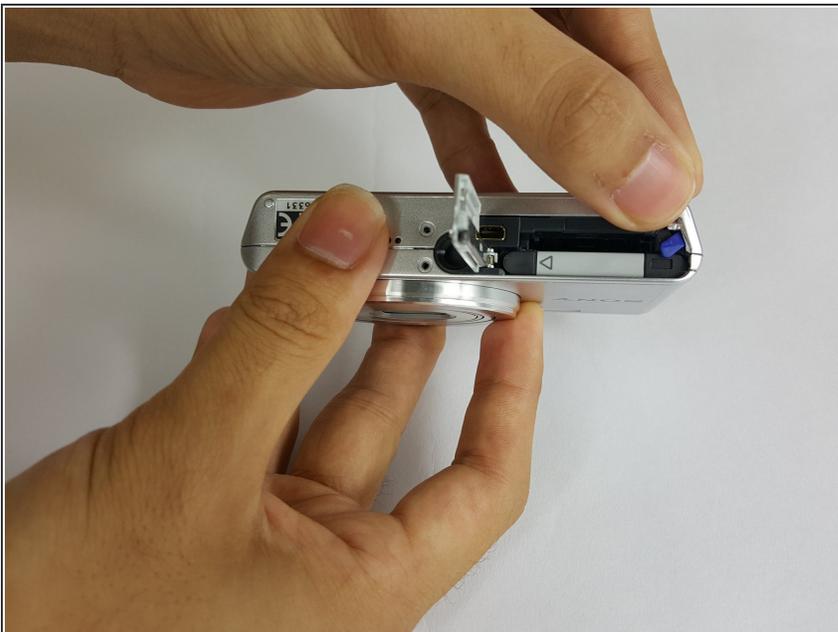

- Slide the blue clip up and away from the battery.

### Step 3

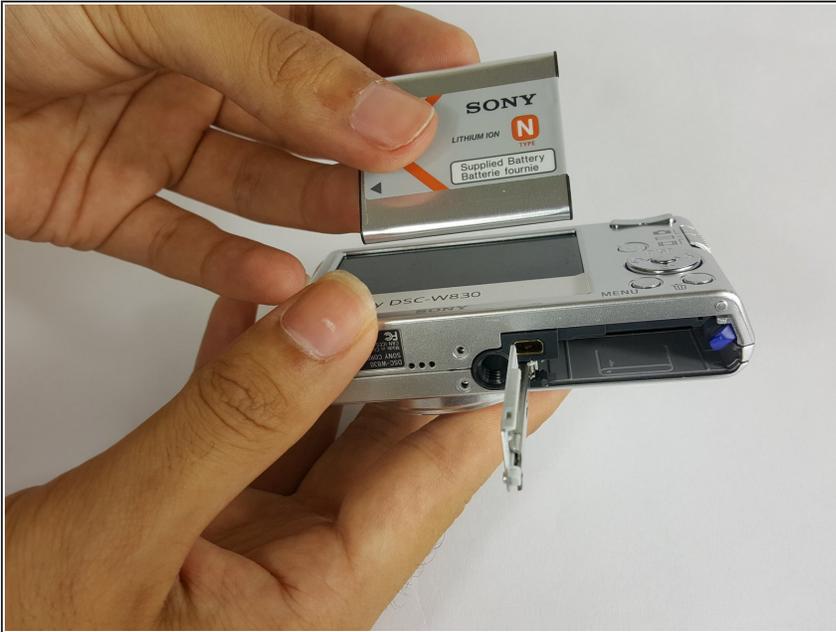


- Remove the battery.

### Step 4 — Front and Back Panel






- Remove the six 3.5mm Phillips #000 screws.
- Rotate the lock away from the camera.

## Step 5

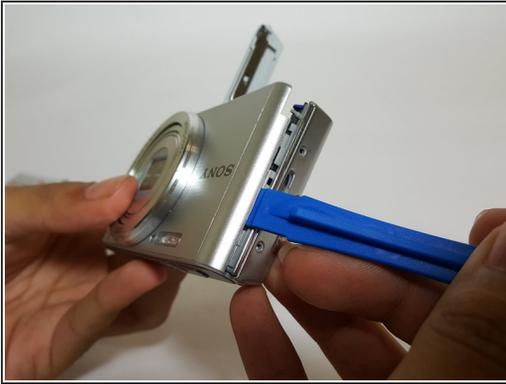

- Pry the device open with the plastic opening tool.
- ⓘ There are two clips that help prevent the front panel from separating.

## Step 6

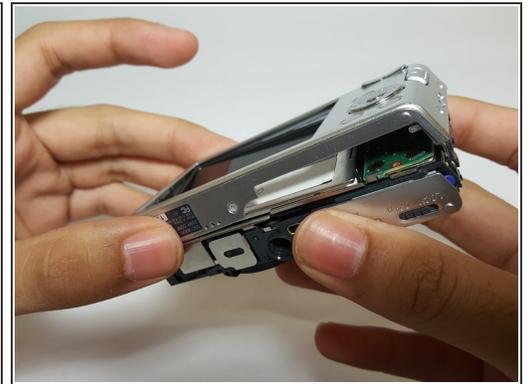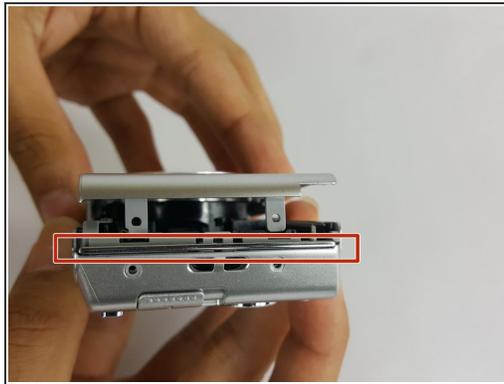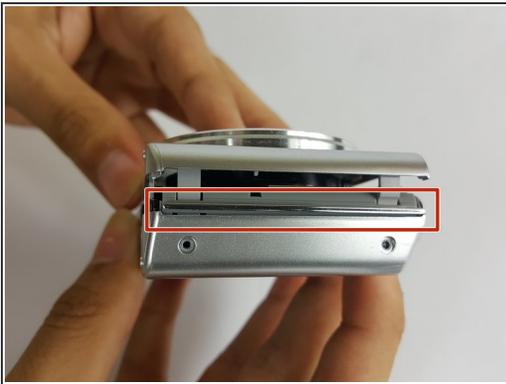

- Remove the two plastic spacers between the front and the back panels.
- ⓘ The spacers may fall out when removing the panels.
- Carefully remove the back panel.

To reassemble your device, follow these instructions in reverse order.