




Nokia E71x Camera Flash Replacement

In this guide you will be taking apart most of...

Written By: Will Goldby

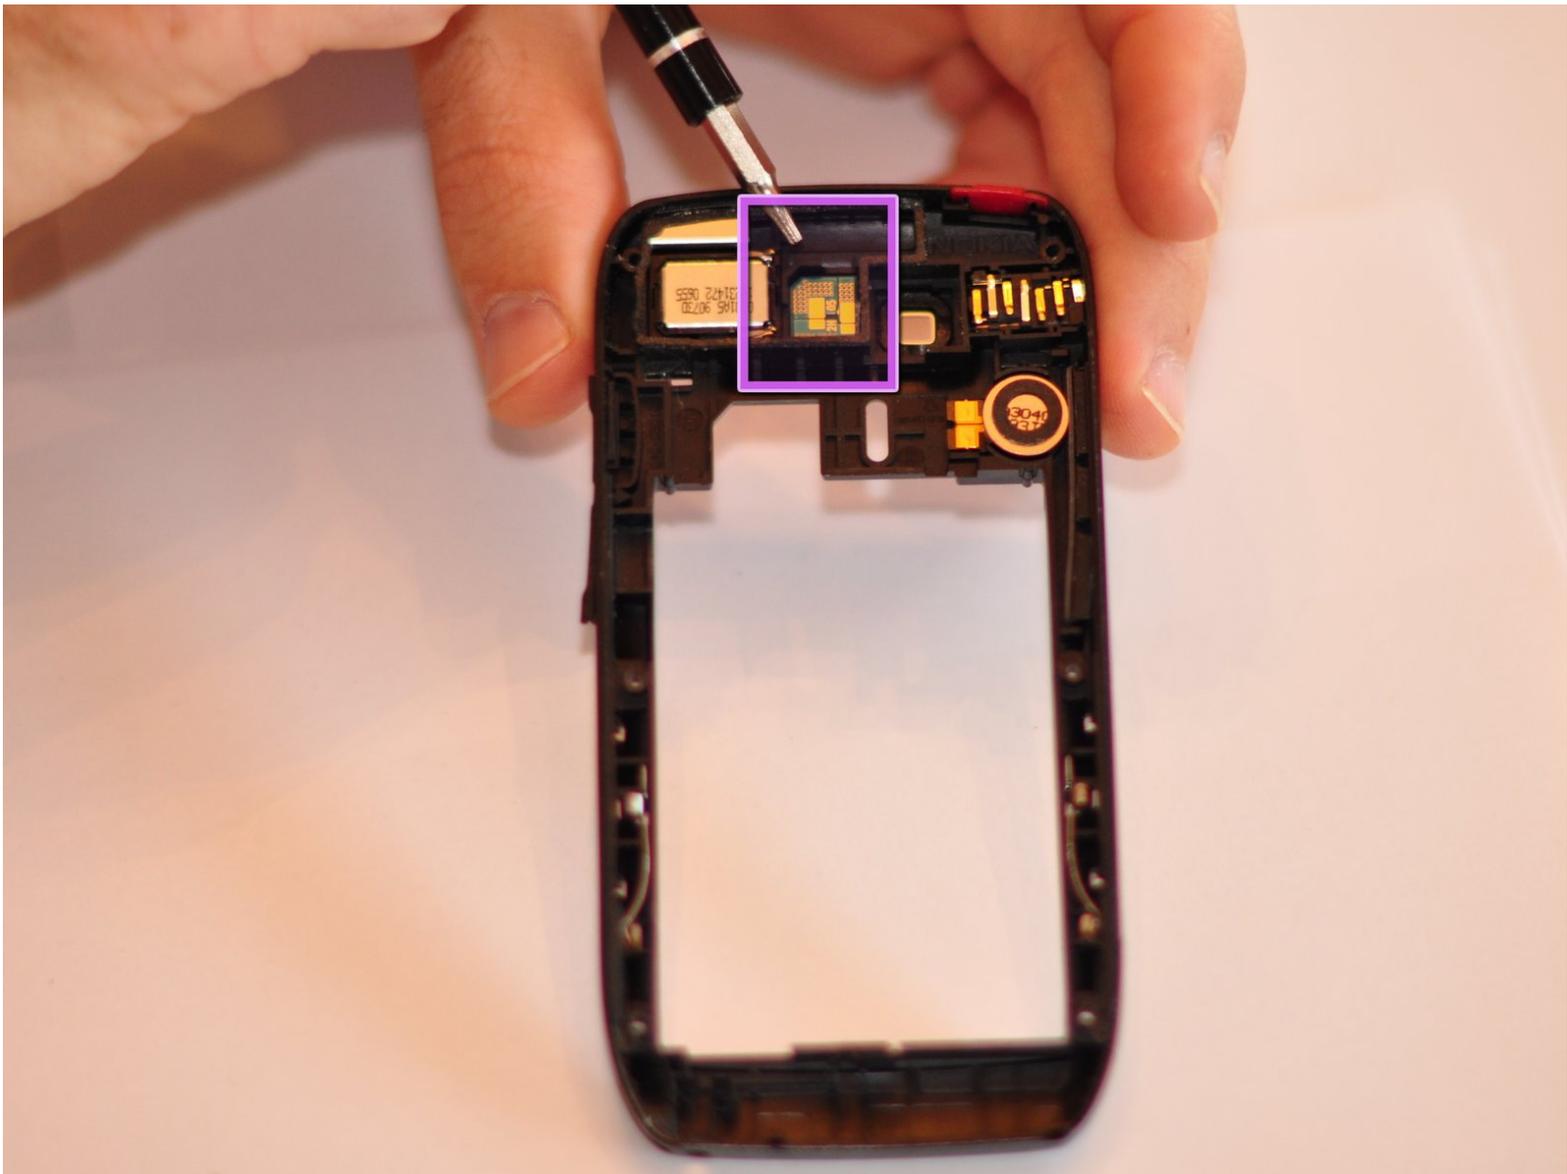

INTRODUCTION

In this guide you will be taking apart most of the phone in order to access the flash and replace it.

TOOLS:

- [T4 Torx Screwdriver](#) (1)
-

Step 1 — Motherboard




- Remove battery

Step 2





- Using Torx number 4 unscrew the four 0.5mm screws.

Step 3

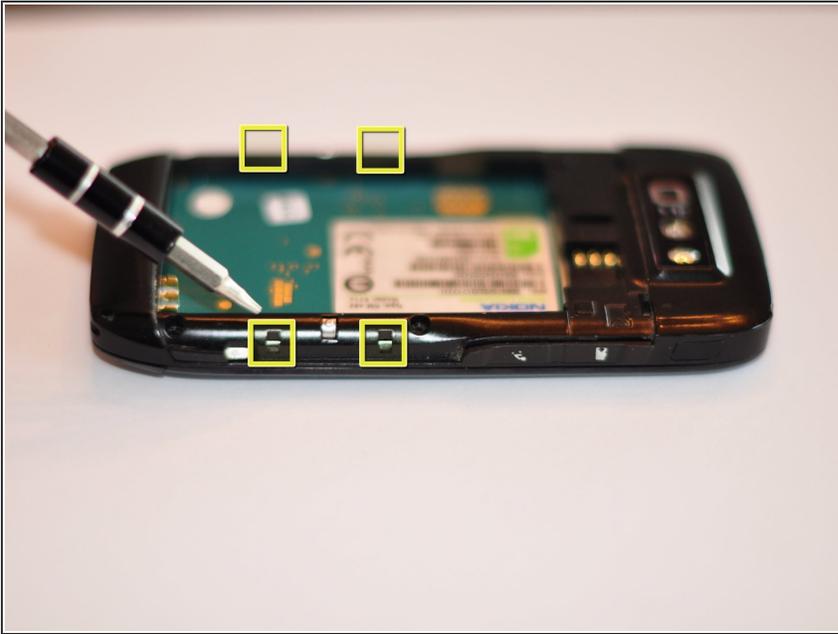

- Push in four clips to detach the body.


Step 4

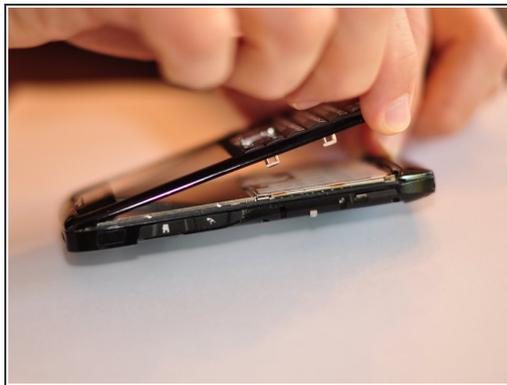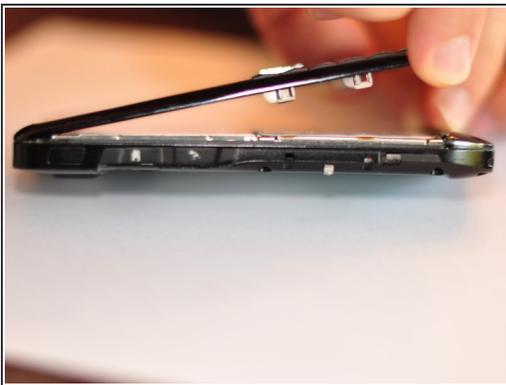

- Separate the body into two pieces.

⚠ Be careful not to damage the screen or body. Some force will be needed to separate the body.

Step 5

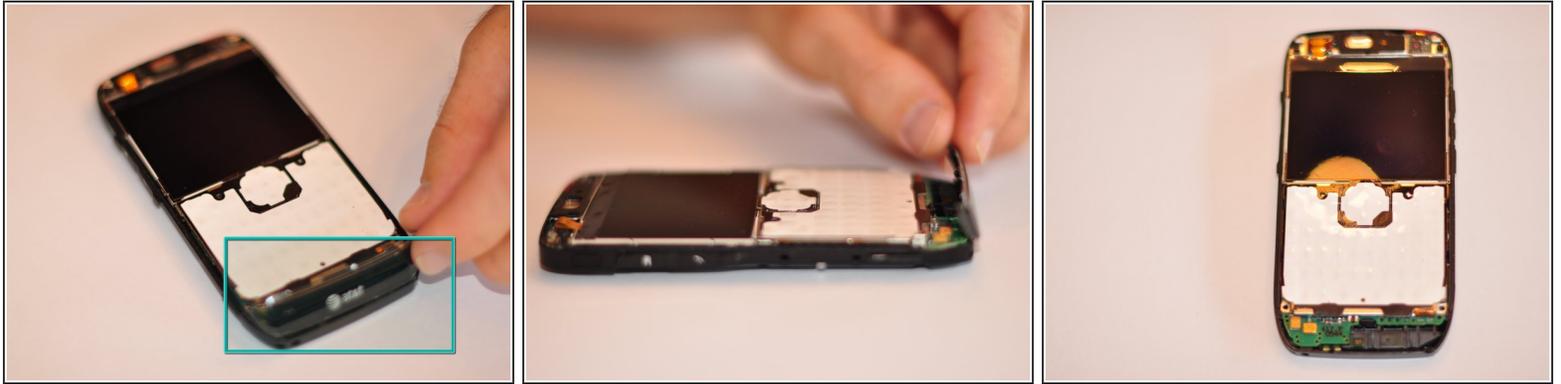



- Remove the bottom piece that is clipped on.
- Some force will need to be exerted to remove the clip.

Step 6



- Using Torx number 4 unscrew the two 0.7 mm screws at the top of the device.


Step 7

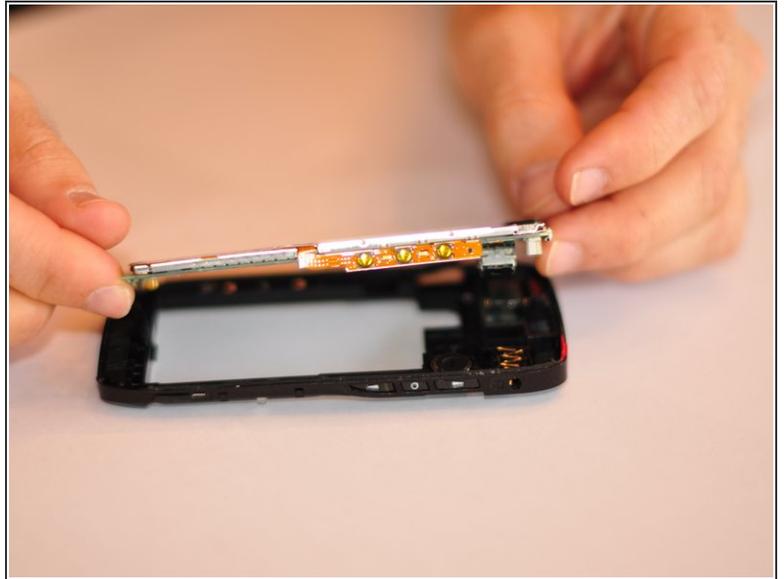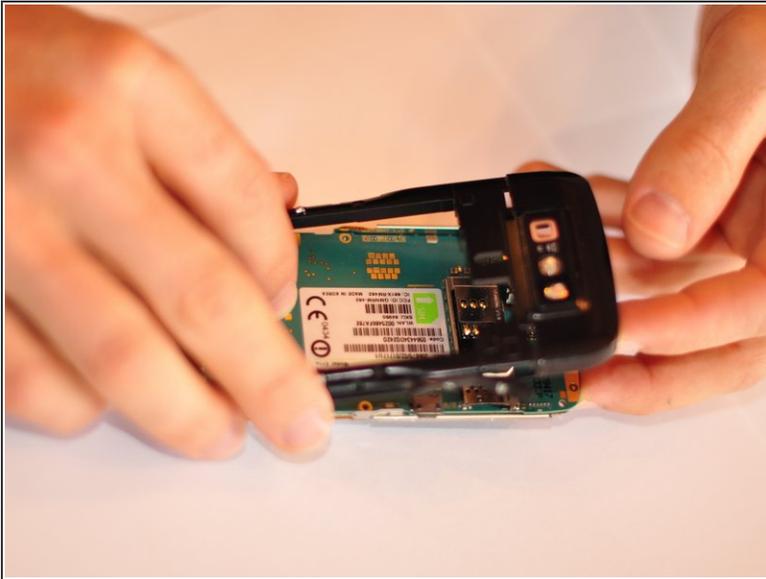

- Once screws are removed detach back of phone from the motherboard.


⚠ This will require some force and maneuvering. Be careful not to break phone back or motherboard.

Step 8

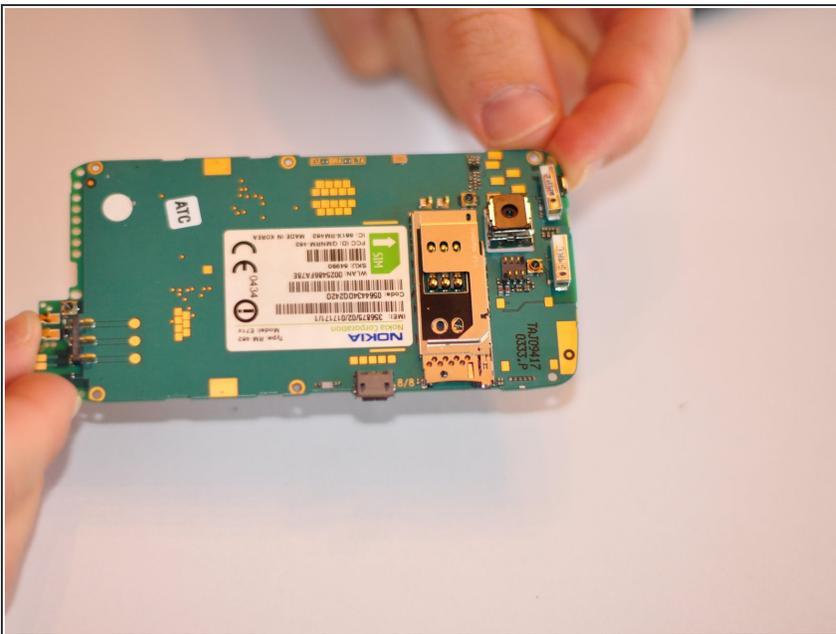

- Replace motherboard, ensure that replacement has the same serial number.

Step 9 — Camera Flash

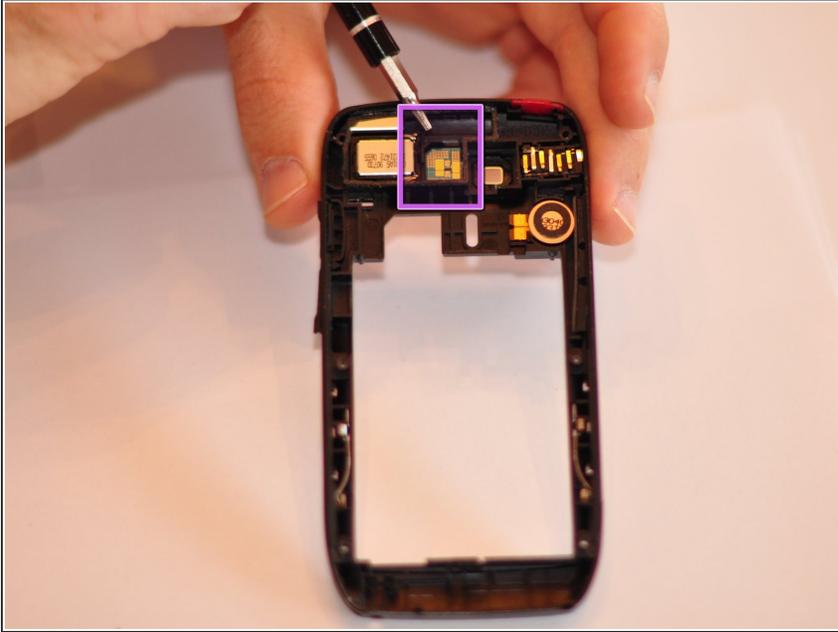

- Camera is located on back of camera body.
- ⓘ To remove flash turn body over and gently tap on the case. The flash should fall out.

To reassemble your device, follow these instructions in reverse order.