


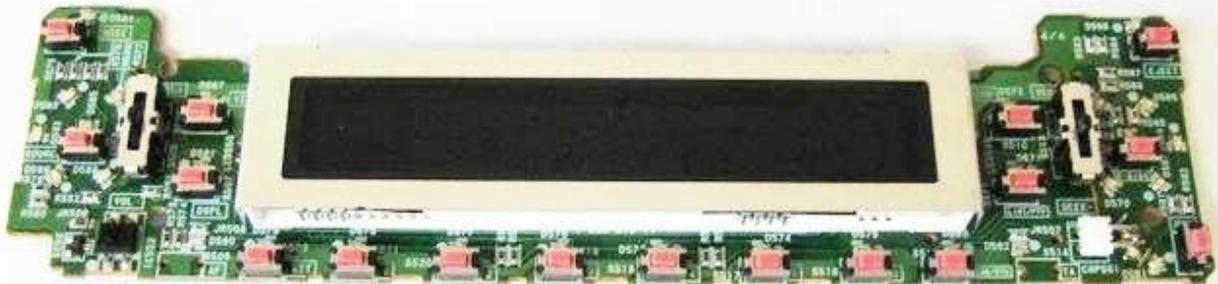

Sony Xplod CDX-MP30 LCD Replacement

Replace the front screen LCD.

Written By: Kyle



 **TOOLS:**

- [Heavy-Duty Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front Panel



- Press down the release button on the bottom left corner of the face plate.
- Then remove the face plate carefully.

Step 2 — LCD




- Unscrew the four (length - 11.11mm) phillips-head screws on the front screen.

Step 3




- Use two fingers to create a small gap on the top of the faceplate, as indicated in the picture.

Step 4

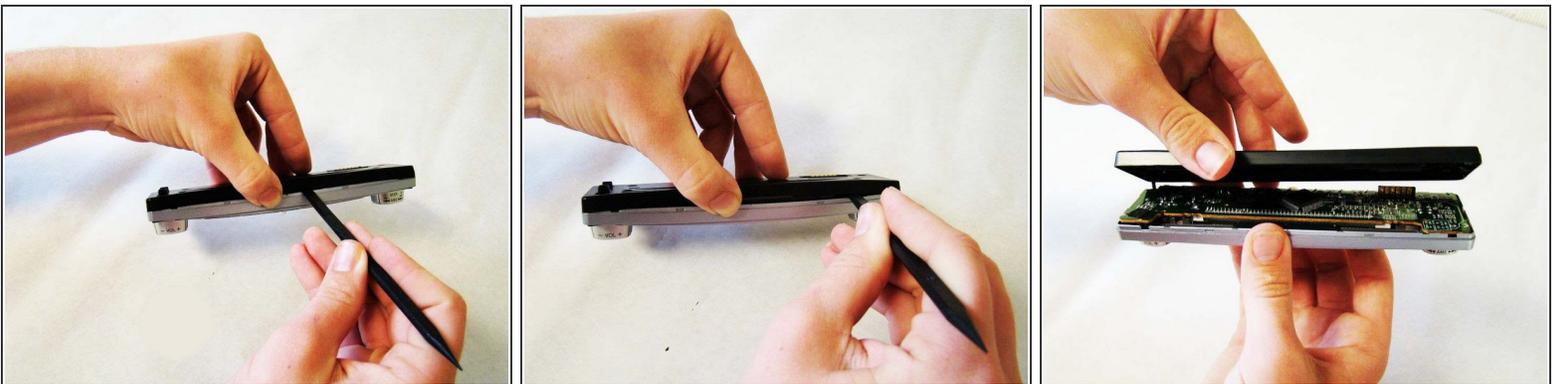


- Insert the flat end of the [Heavy-duty Spudger](#) into the opening you created.
- Slide it to the right carefully, until you feel the screen pop off.
- Make sure you keep the face of the screen pointed down as you carefully lift off the freed black portion of the screen - as shown in the picture.

Step 5

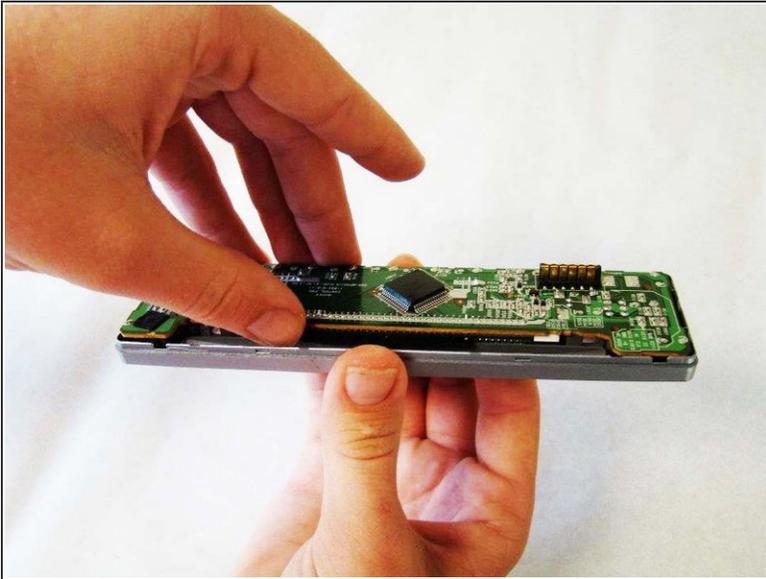

- Gently grab the Front Motherboard - as indicated in the picture - and lift it from the rest of the screen.

Step 6

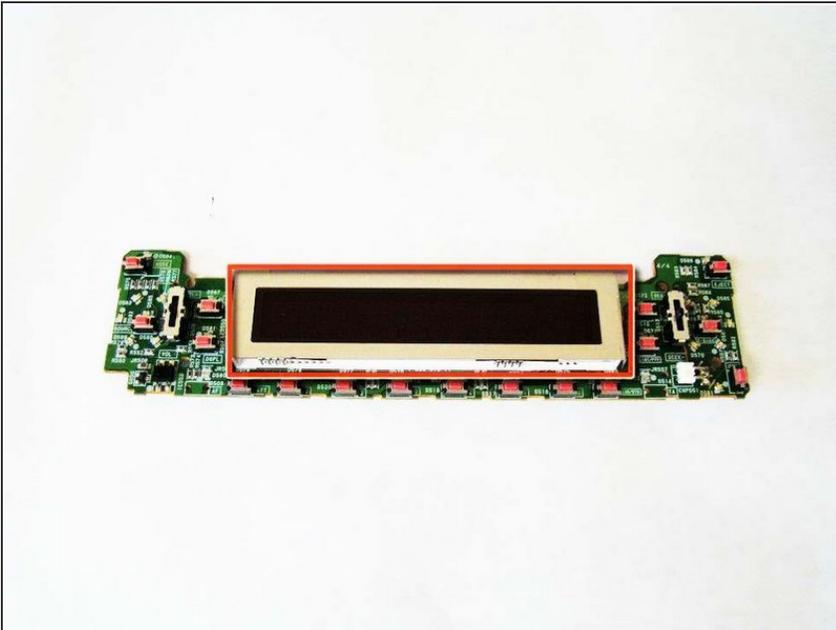

- Please refer to the [iFixit soldering guide](#) for help removing the LCD screen.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 02:25:05 AM (MST).

