



# One Education Infinity:One Back Case

## Prerequisite

This guide will show you how to remove the back cover of the One Education Infinity:One laptop.

Written By: Taylor Bratsch



---

## INTRODUCTION

This guide will show you how to remove the back case of the One Education Infinity:One laptop. This should be used to replace a damaged back cover, or to gain access to internal components for more complex repairs.



### TOOLS:


- [Heavy-Duty Spudger](#) (1)
  - [Tweezers](#) (1)
  - [Jimmy](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Case




- Use a spudger to pry the four rubber pads away from the bottom of the case.
- Use a Phillips #00 screwdriver to unscrew the four 6.4 mm screws.

## Step 2

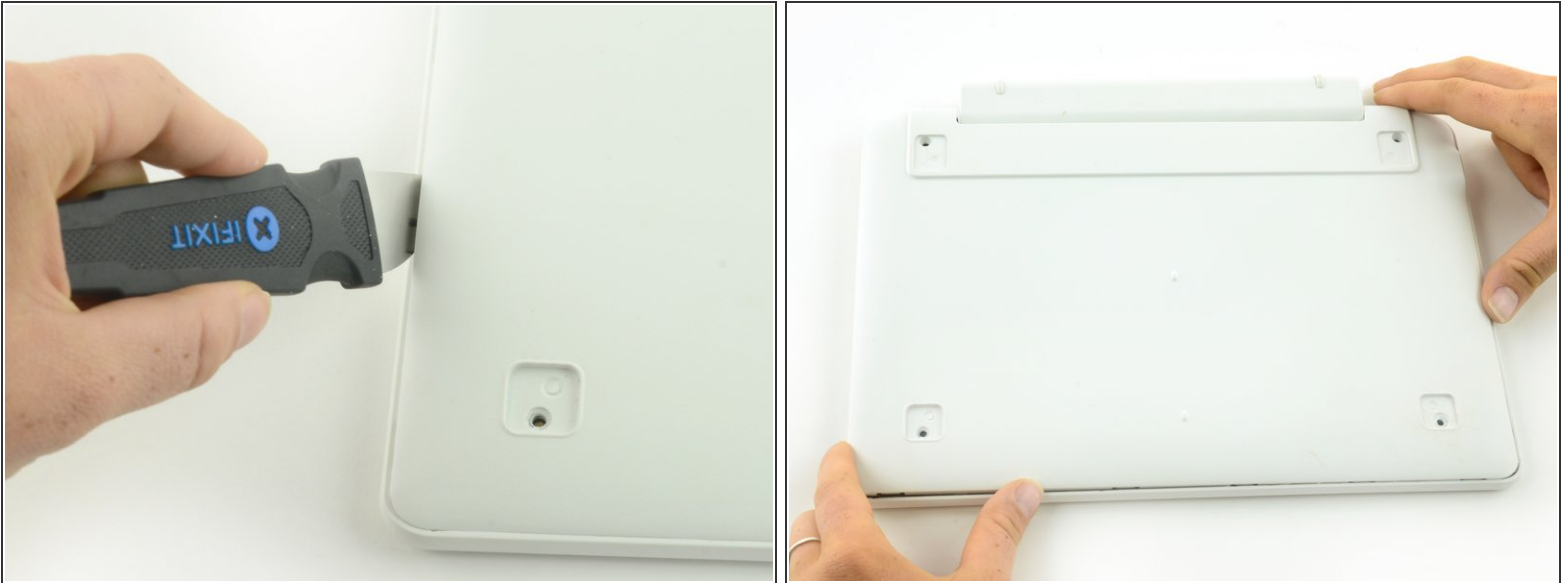


- Insert a Jimmy or other prying tool into the seam on the edge of the casing.
- Trace along the edges of the device until all clips are released.
- Lift the back case away from the device.

## Step 3

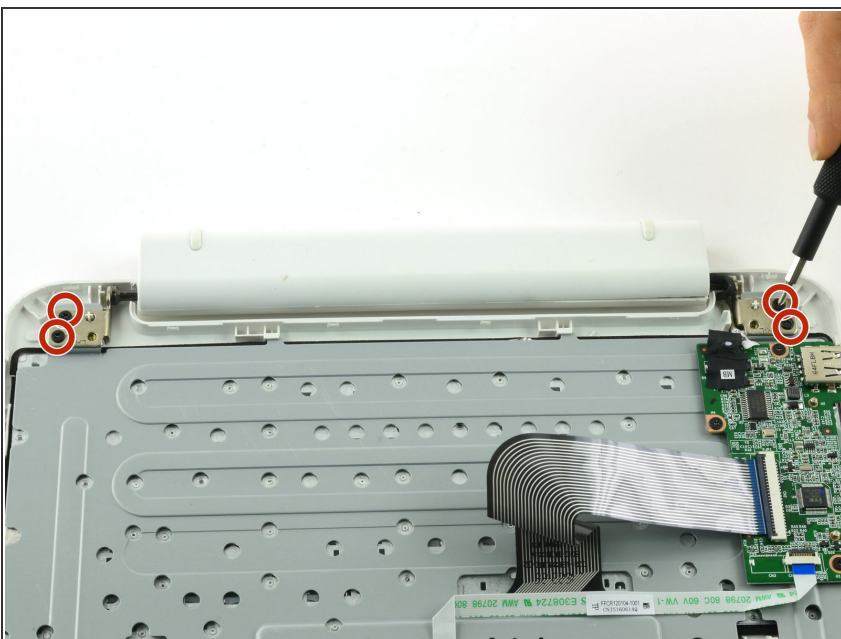

- Use a Phillips #00 screwdriver to unscrew the four 6.4mm screws on the hinge mounts.

## Step 4

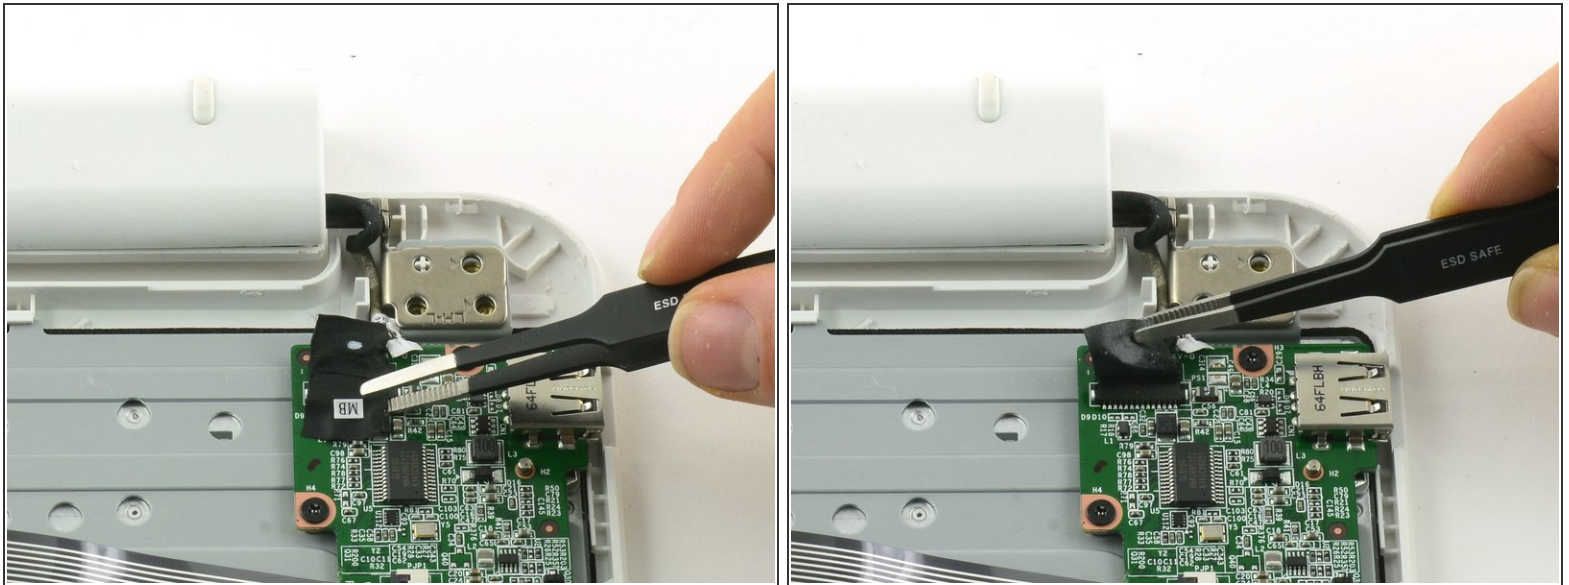

- Use tweezers to lift the fabric cover and hinge connector away from the daughterboard.

⚠ Always use ESD safe tools when working with delicate electrical components.

To reassemble your device, follow these instructions in reverse order.