



Visual Land Prestige Elite 7Q Speaker Replacement

Replace the speaker on your Visual Land Prestige Elite 7Q.

Written By: Sabrina Scholten



INTRODUCTION

Complete the following guide to replace your tablet's speaker.



TOOLS:

- [Metal Spudger Set](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Portable Soldering Iron](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Speaker




- At the bottom of the tablet, remove the two 3.6mm screws with a Phillips #000 screwdriver.


Step 2



- Wedge a plastic opening tool into the edges of the tablet to pry it open.

Step 3

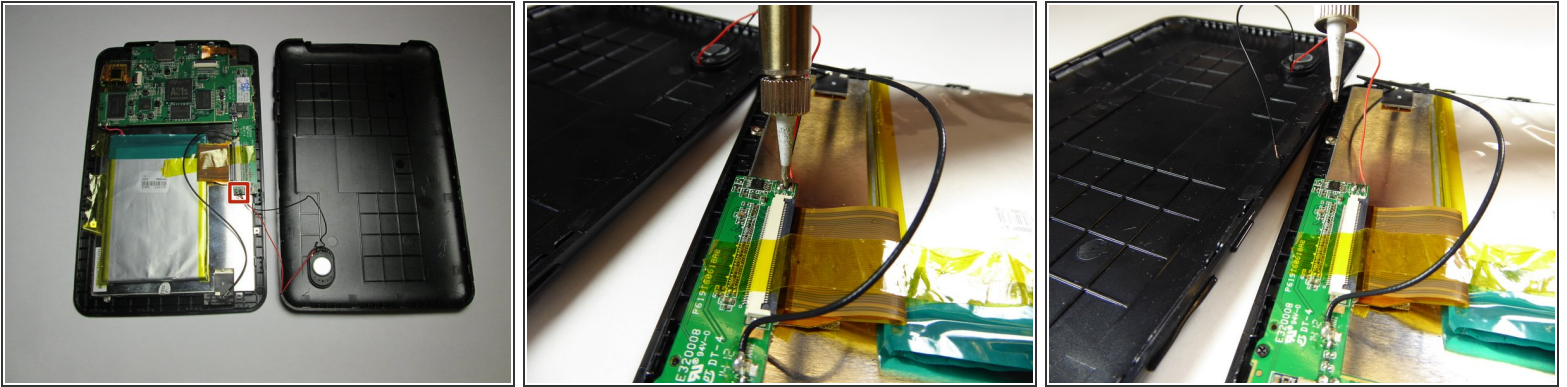


 Soldering iron may be dangerous for inexperienced users. For additional information on how to use a soldering iron, click [here](#).

- Use a soldering iron to detach the speaker wires from the motherboard.

Step 4



- Use a curved metal spudger to remove the speaker from the back case.
-  The speaker is held in place by an adhesive and can be difficult to remove.

To reassemble your device, follow these instructions in reverse order.